 
 


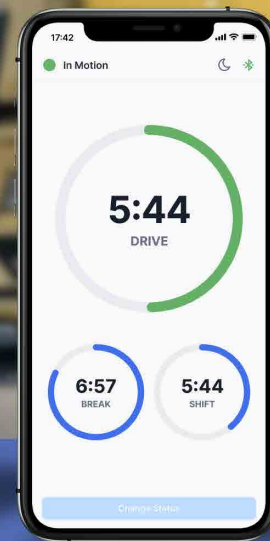

User's Manual

info@usfasteld.com

(332) 223-8689

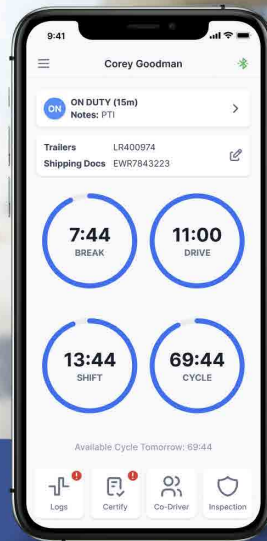

 
Please keep this Manual in your vehicle at all times!



Roadside Inspection

Roadside Inspection (Follow the given guidelines to show your records to the officer)


Click the “Menu” icon on the top left corner and select DOT Inspection. Tap “Being Inspection” and show your electronic logbook’s 8-day summary to the officer.

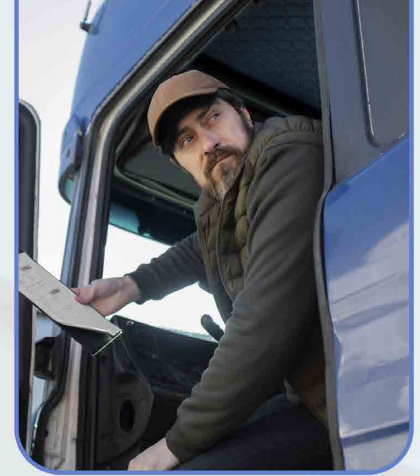


1



 
2

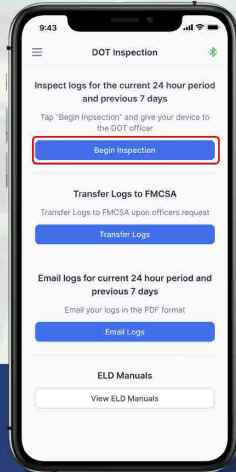


3

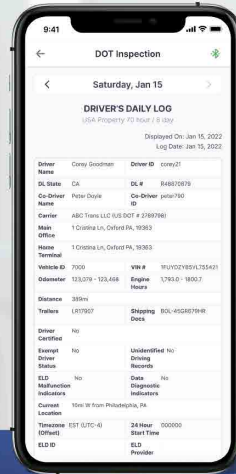 

4



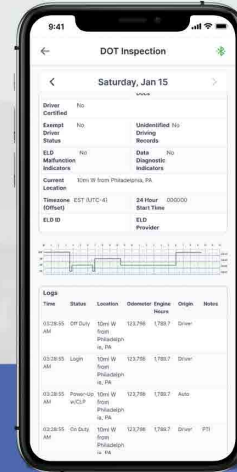 


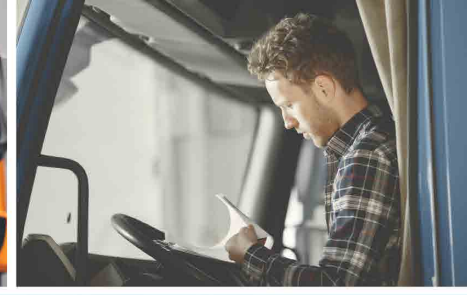 

Transfer ELD records

Transfer ELD records (Follow the given guidelines to send your records to DOT)

   Click the "Menu" icon on the top left corner and select "DOT Inspection". Tap "Transfer Logs" to send your ELD records to DOT. In the pop-up window, write your comment and click the "Transfer Logs" button.

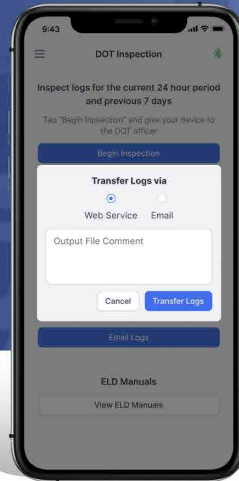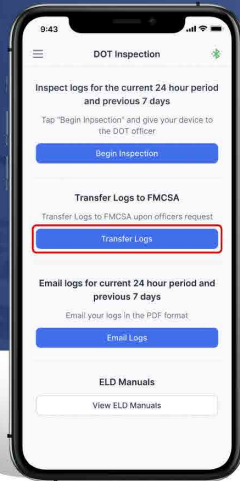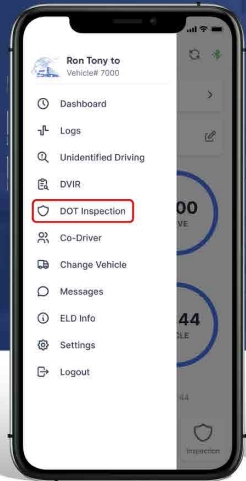



ELD Malfunctions

\$395.22 Motor carrier Responsibilities

A motor carrier must ensure that its drivers possess onboard a commercial motor vehicle and ELD information packet containing the following items: An instruction sheet for the driver describing ELD malfunction reporting requirements and recordkeeping procedures during ELD malfunctions.

The following instructions are in accordance with the guidelines set forth in §395-34

Our ELD will monitor and report malfunction data based on section "4.6 ELD's Self-Monitoring of Required Functions," table 4:

- P – "Power compliance" malfunction,
- E – "Engine synchronization compliance" malfunction,
- T – "Timing compliance" malfunction,
- L – "Positioning compliance" malfunction,
- R – "Data recording compliance" malfunction,
- S – "Data transfer compliance" malfunction,
- O – "Other" ELD detected malfunction.

