



**ELD INSTRUCTION
MANUAL
FOR DRIVERS**

Tablet of Contents


Installation & Connection

Install The Next Fleet Eld Device In Your Vehicle	2
Install The Next Fleet Eld App	2
Login To The Next Fleet Eld App And Select A Vehicle.....	3
Complete Pre-Trip Dvir.....	3
Populate Log Form Data.....	5
Connect Your Mobile Device To The Next Fleet Eld Device	6
Record Hours Of Service.....	7
Inspect Logs.....	8
Data Transfer.....	8
Carrier Responsibilities Regarding Malfunctions	9
Record Keeping Responsibilities By The Driver	9
Malfunction	10
Data Diagnostic.....	11


Installation & Connection

INSTALL THE NEXT FLEET ELD DEVICE IN YOUR VEHICLE


1. With engine off, locate the diagnostic port inside the vehicle. It is located in one of the four places:

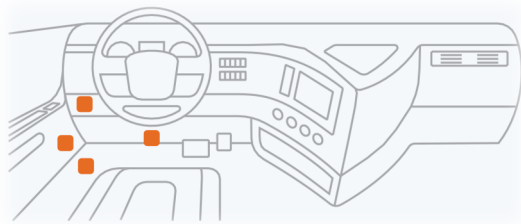

2. Attach the device to the diagnostic port of the vehicle.

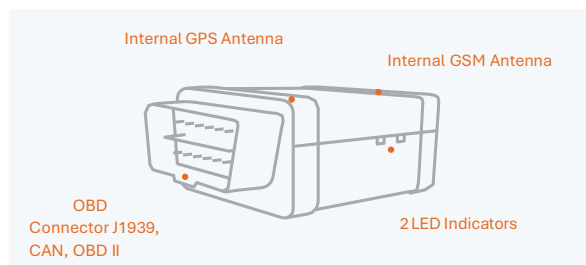

3. Once the device is installed, ensure the device is working properly as evidenced by a green LED light blinking. The green light starts blinking after a GPS & Cellular connection is initiated.

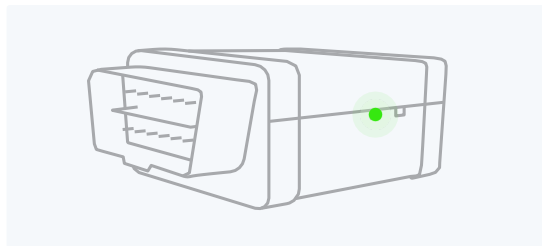

4. Securely mount your device in a location with no electrical components nearby. This will help prevent issues like ELD device interference and GPS signal disruption. It is recommended to position the ELD device visibly, ensuring

an unobstructed view of the sky, as shown in the image below.




IMPORTANT: Please follow the above-mentioned instructions. Otherwise, you risk ELD device interference and GPS disruption, creating problems with the signal. Do not put an ELD device under the dashboard under any circumstances.

INSTALL THE NEXT FLEET ELD APP

1. For android phones and tablets download the NEXT FLEET ELD App from Google Play Store. For iPhones and iPads download the NEXT FLEET ELD App from the App Store.

2. Open the NEXT FLEET ELD App.

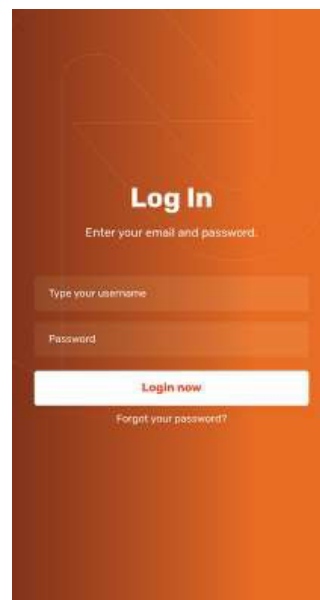

Installation & Connection


LOGIN TO THE NEXT FLEET ELD APP AND SELECT A VEHICLE

Read the login details from your email. If you don't have login details yet, or you've forgotten them, contact your Carrier administrator.

1. Enter your login details and tap LOG IN, you will be prompt with Terms and Conditions.
2. Read the Terms and Conditions and tap AGREE.
3. Select your vehicle from the list, or search for one.
4. Tap ACCEPT, you will be prompt with a Settings page where you can review and edit settings details.
5. Tap SAVE.


! Dashboard View

After successfully login & Vehicle selection, the Dashboard page is open. Use Tap to Connect bar to connect to your vehicle.

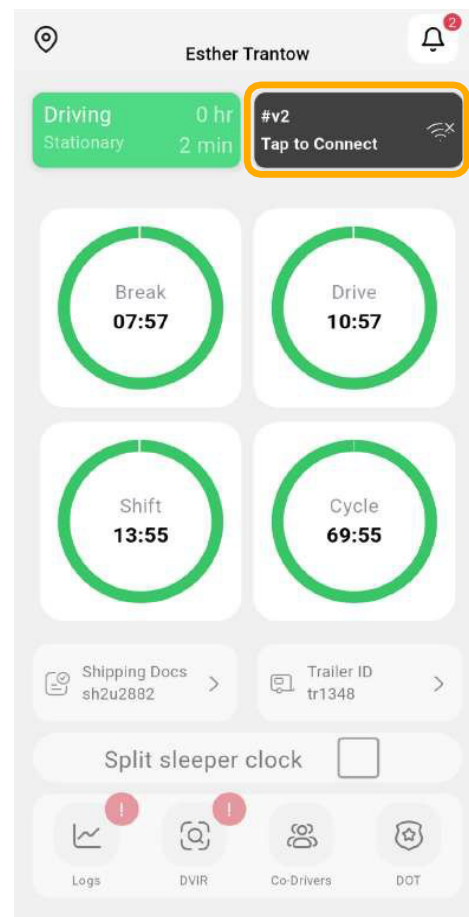

COMPLETE PRE-TRIP DVIR



Start a new pre-trip inspection report by tapping the DVIR button.

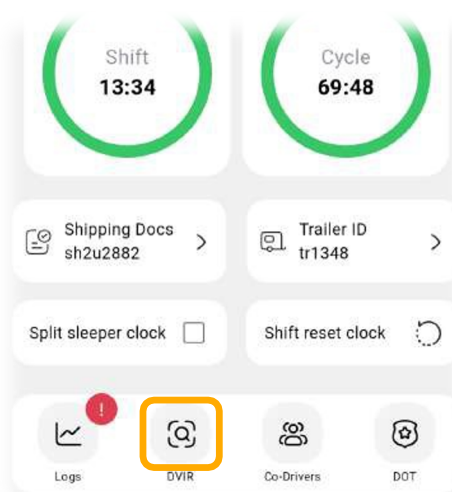


Installation & Connection

You can also Start Inspection from the left side menu by tapping the DVIR option.


1. From DVIR view, enter the odometer value and tap Start Inspection, if you are in Off Duty or Sleeper Berth status you will be placed to On Duty status. Pre-trip is selected by default.

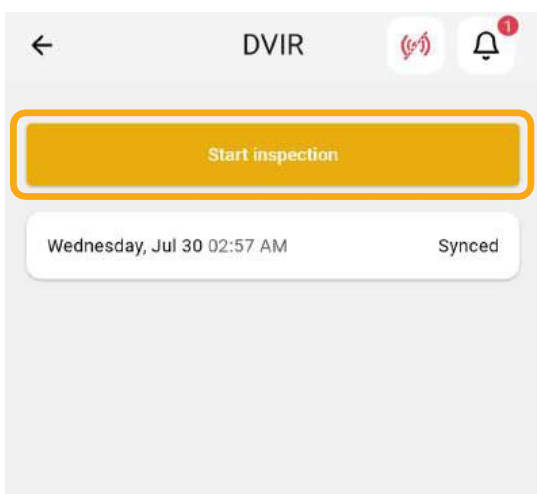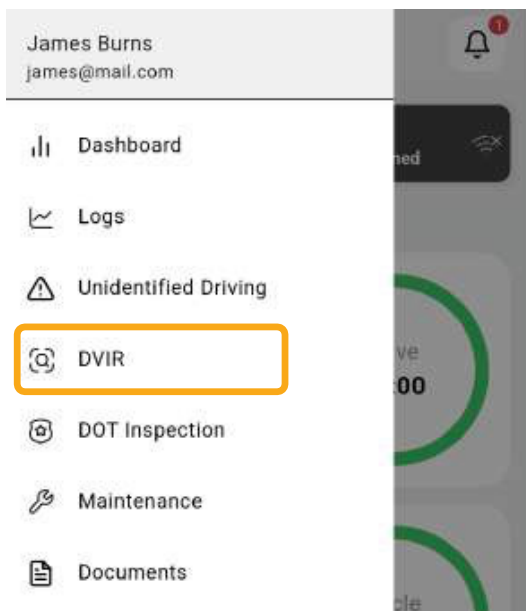

2. Tap Add/Remove under Vehicle Defects and review each item from the list against your vehicle.

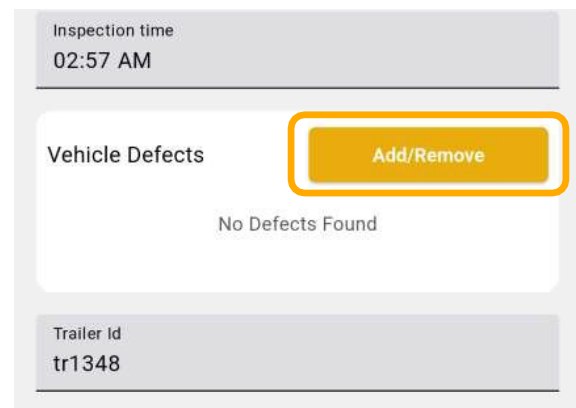

3. If you identify a defect, select the appropriate defect in the list and enter a comment and photo. Tap Save.

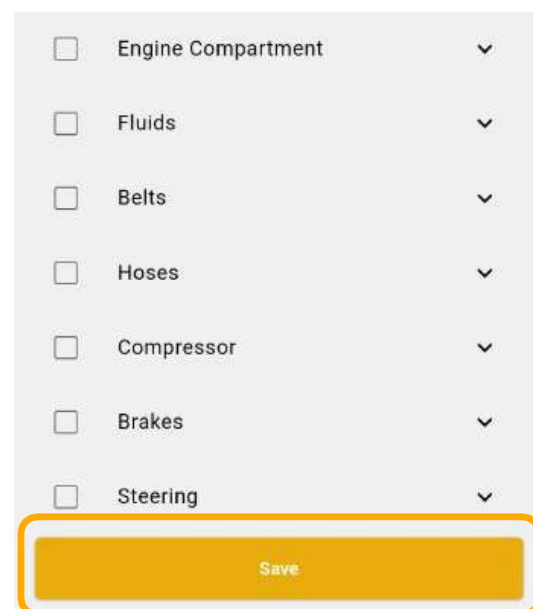

4. If Trailer is applicable, repeat step 2 and under Trailer Defects.

5. Tap Sign and Save the Report.

Installation & Connection

Inspection time
08:08 AM

Vehicle Defects Add/Remove

No Defects Found

Trailer Id
tr1348

Trailer Defects Add/Remove

Sign and Save the Report

Trailers & Shipping Docs

Trailers
tr1348

tr2534 yfyvyg6g

Shipping Docs
sh2u2882

sh346

Cancel Save

Trailers & Shipping Docs are also available through the Logs folder.

POPULATE LOG FORM DATA

Select Trailer/Docs button from your Dashboard to add the Trailer/Shipping Docs number.

1. From your Dashboard view, tap the  icon.
2. Select Logs.
3. Tap the daily log at the top of the list.

Inspect logs for the current 24 hour period and previous 7 days.
Tap begin inspection and give your device to the DOT officer.

Begin Inspection

ELD Data Transfer

Transfer ELD data upon officer request

Transfer Data

← Logs  

Tue, Jul 29
Recap: 0 hr 0 min | No Inspections
Distance: 0 mi


Mon, Jul 28 **Uncertified**
Recap: 0 hr 0 min | No Inspections
Distance: 0 mi

Sun, Jul 27 **Uncertified**
Recap: 0 hr 0 min | No Inspections
Distance: 0 mi

Sat, Jul 26 **Uncertified**
Recap: 0 hr 0 min | No Inspections
Distance: 0 mi

Installation & Connection

4. Scroll down (to the bottom of the screen) and tap the Trailer or Shipping Docs field.
5. Enter your trailer or shipping doc numbers. You will see "Trailer saved" OR "Shipping Docs saved" confirmation message.

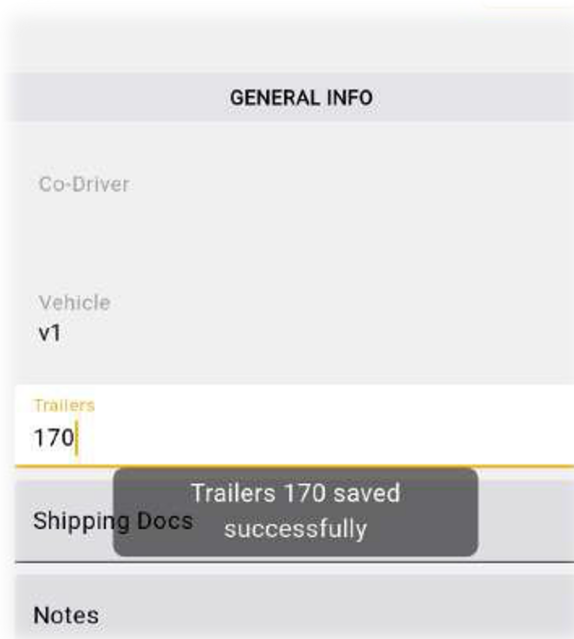


CONNECT YOUR MOBILE DEVICE TO THE NEXT FLEET ELD DEVICE




Enable Bluetooth

Please ensure that Bluetooth is enabled on your device before you connect to the NEXT FLEET ELD device.

In the main Dashboard view there is Tap to Connect bar - just below the vehicle number

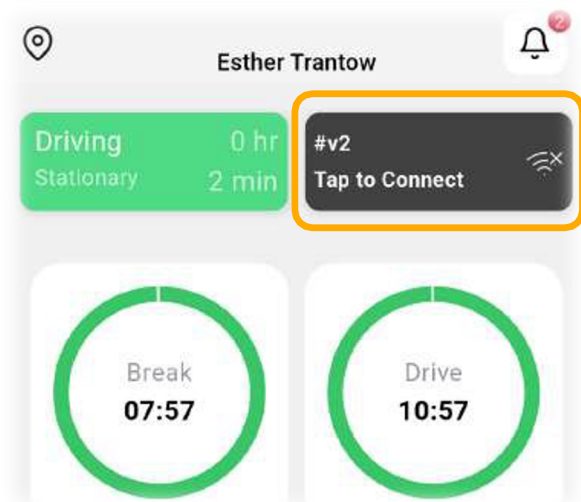


1. Use Tap to Connect bar to connect to your vehicle. The device will attempt to connect to selected vehicle ELD via Bluetooth. ELD bar will change from red to orange: Pairing.

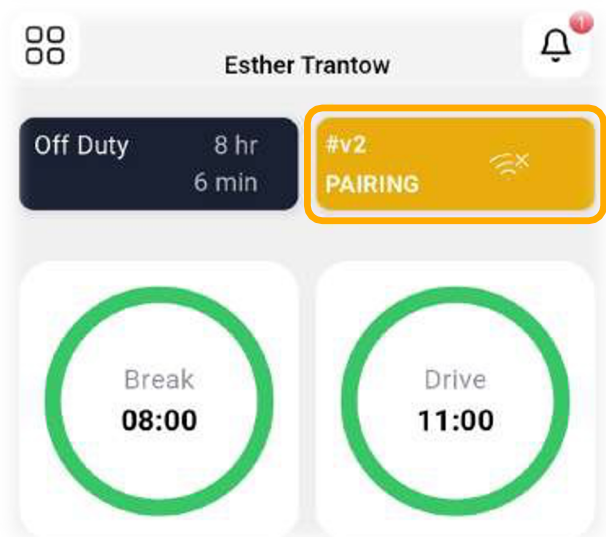

2. An icon ((•)) will appear in connection bar upon successful connection.

Installation & Connection

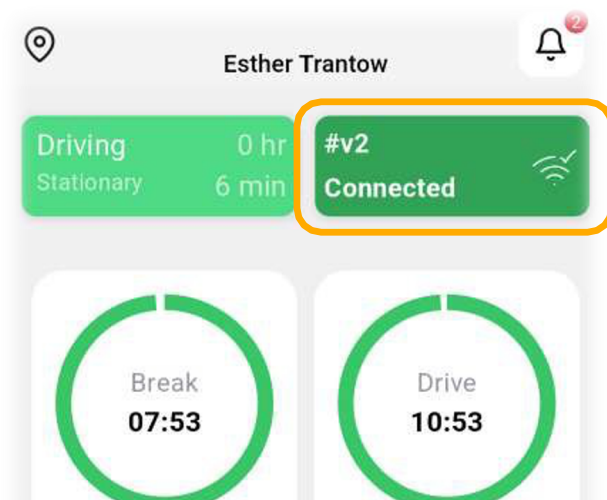

Ready to Drive


Once you've completed all of the pre-trip tasks in this section, you're ready to drive.

When your vehicle is moving at 5 MPH or greater, your duty status will automatically switch to Driving, in accordance with the ELD mandate.

RECORD HOURS OF SERVICE


When your vehicle reaches 5 MPH or greater, NEXT FLEET ELD is indicating that vehicle is In Motion and your duty status will automatically change to Driving.

2. When the vehicle stops (0 MPH) it's considered Stationary.

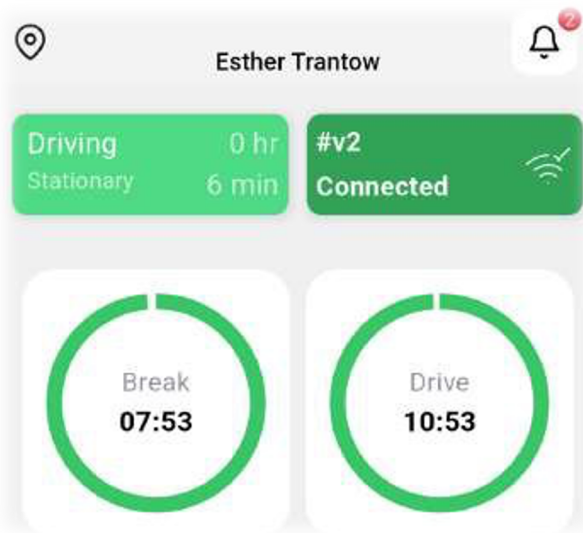

3. You can change your duty status by tapping the Driving and selecting some other duty status.


4. If your vehicle remains Stationary for five minutes you will be prompted with a question if you would like to change your duty status. If you ignore this question your duty status will be changed to On Duty.

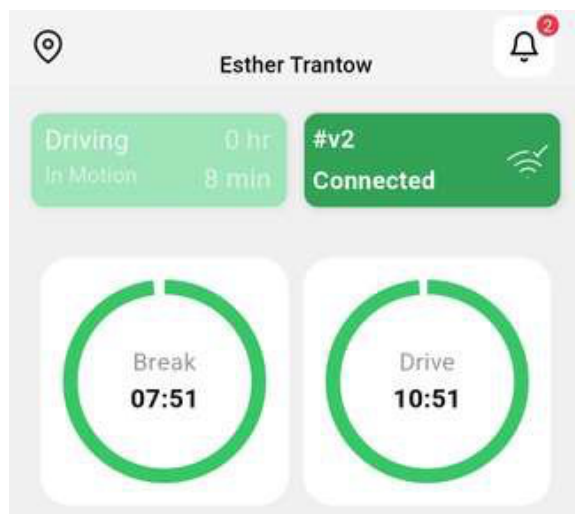


Dot Inspection

INSPECT LOGS

To begin the DOT inspection tap the menu icon on the top left and select the DOT Inspection

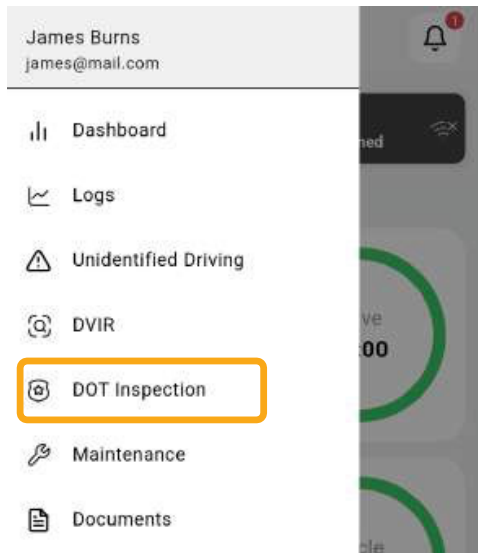

1. To let an officer inspect your logs tap Begin Inspection. Logs for current and last seven days will appear on the screen.

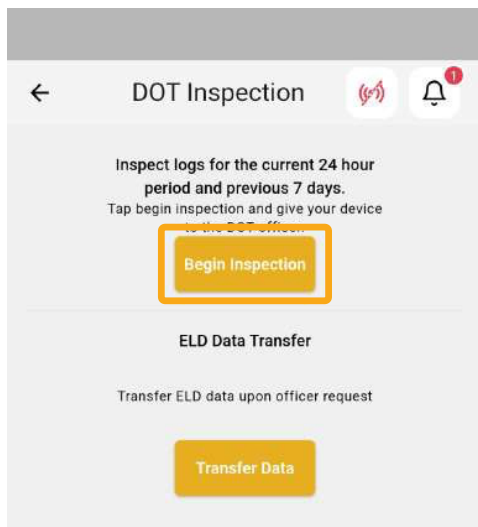


2. Hand the officer your mobile device.

1.Tap the Transfer Data to send the file via web service or email.

DATA TRANSFER


If the officer asks for the output file tap Transfer Data

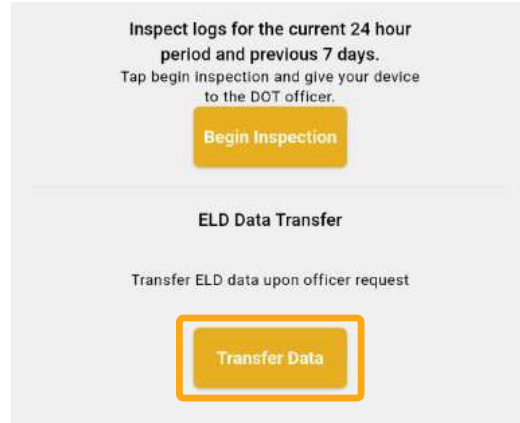

2.Select Web Service or Email transfer method.

3.A DOT officer will provide the Output File Comment, enter it in the text box.

4.Tap Send.

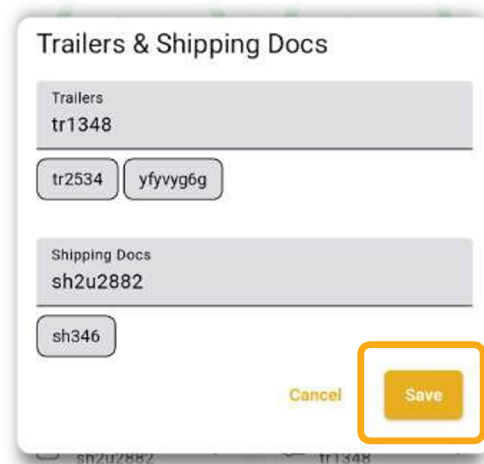

5. You will receive a confirmation if the file was submitted successfully. If it was unsuccessful, you will receive the following message:

"ELD File Sending Failed. Use a different Transfer Data method or try again."

Malfunction Responsibilities

CARRIER RESPONSIBILITIES REGARDING MALFUNCTIONS

The carrier must:

Provide drivers with an instruction sheet describing the various

ELD malfunction events and record-keeping procedures (this document) Provide drivers with a supply of 8 days worth of blank paper driver records

Repair, replace or service

The motor carrier must correct the malfunction of the ELD within 8 days of discovery of the condition

OR

a driver's notification to the motor carrier, whichever occurs first.

RECORD KEEPING RESPONSIBILITIES BY THE DRIVER

The driver must:

Malfunction Events

Note the ELD malfunction and provide the carrier with written notice within 24 hours.

Reconstruct driving events for the current 24 hour period and previous 7 consecutive days using paper logs.

Continue to manually prepare driving logs until ELD is serviced and brought back into compliance.

During inspections which take place when a malfunction has occurred: provide safety official with manually kept driver logs.


Data Diagnostic Events

The driver must follow the motor carriers and ELD provider's recommendations in resolving the data inconsistency.

ELD Malfunctions

Diagnostic and Malfunction events show up in the application's header (top right) as a capital D and capital M. The D stands for diagnostic events and the M for malfunction events.

Tap D (diagnostic data) or M (malfunction) to view error details.

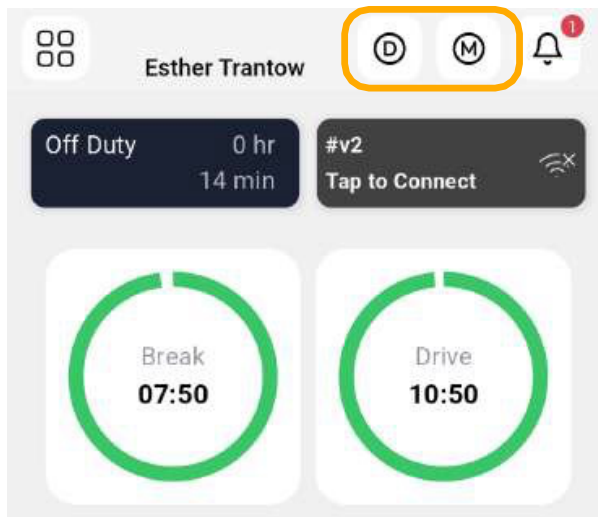

MALFUNCTION

! ELD has reported Power compliance malfunction. Contact your manager immediately. Please stop using the NEXT FLEET ELD and switch to paper logs until the ELD malfunction has been corrected.

Mon, Aug 25, 10:15 AM

! ELD has reported Engine Synchronization compliance malfunction. Contact your manager immediately. Please stop using the NEXT FLEET ELD and switch to paper logs until the ELD malfunction has been corrected.

Mon, Aug 25, 10:15 AM

! ELD has reported Timing compliance malfunction. Contact your manager immediately. Please stop using the NEXT FLEET ELD and switch to paper logs until the ELD malfunction has been corrected.

Mon, Aug 25, 10:15 AM

! ELD has reported Position compliance malfunction. Contact your manager immediately. Please stop using the NEXT FLEET ELD and switch to paper logs until the ELD malfunction has been corrected.

Mon, Aug 25, 10:15 AM

ELD Malfunctions



ELD has reported Data Recording compliance malfunction. Contact your manager immediately. Please stop using the NEXT FLEET ELD and switch to paper logs until the ELD malfunction has been corrected.

Mon, Aug 25, 10:15 AM



ELD has identified the Missing required data diagnostic event.

Mon, Aug 25, 10:15 AM



ELD has identified the Data transfer data diagnostic event.

Mon, Aug 25, 10:15 AM



ELD has reported Data Transfer compliance malfunction. Contact your manager immediately. Please stop using the NEXT FLEET ELD and switch to paper logs until the ELD malfunction has been corrected.

Mon, Aug 25, 10:15 AM



ELD has identified the Unidentified data diagnostic event.

Mon, Aug 25, 10:15 AM

DATA DIAGNOSTIC



ELD has identified the Power data diagnostic event.

Mon, Aug 25, 10:15 AM



ELD has identified the Engine synchronization data diagnostic event.

Mon, Aug 25, 10:15 AM