


# ELD Setup Guide

## ELD INSPIRE

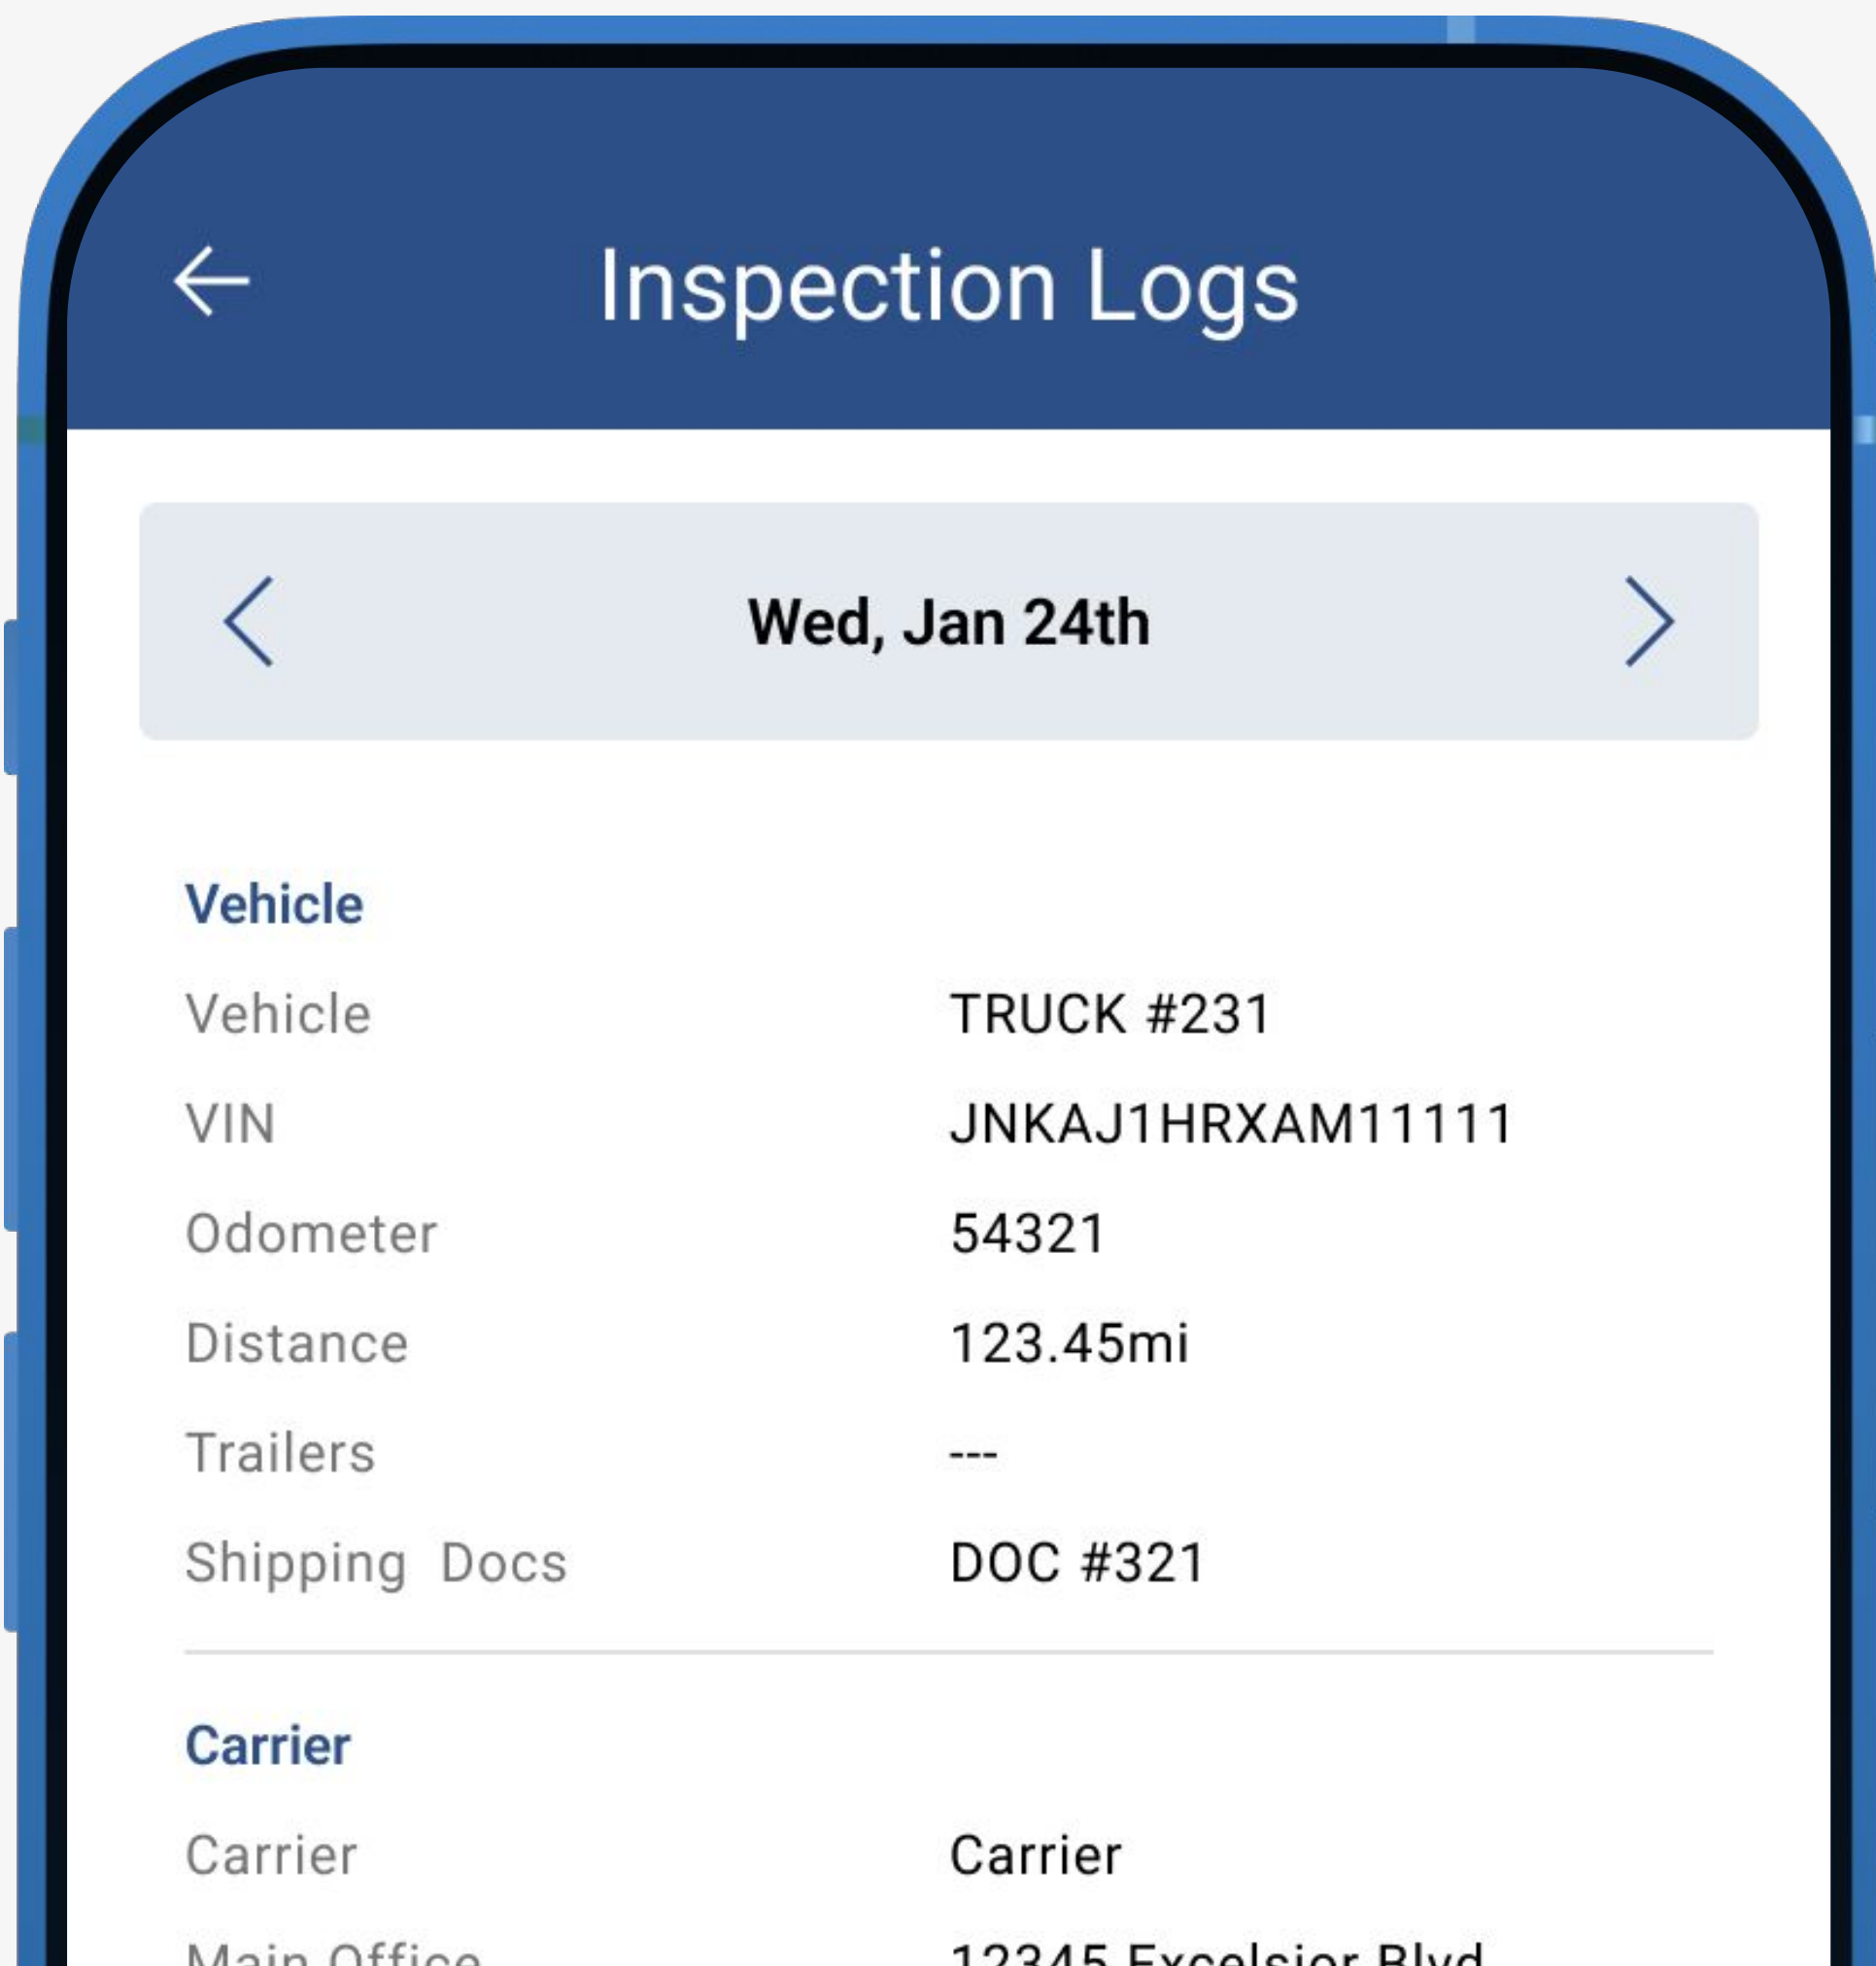

# Web Portal Setup Instructions

## Step 1

Access the web portal and login using provided credentials.

## Step 2

Manage your company information, add vehicles, portal users, and drivers to the system.

## **Note**

---

For FMCSA compliance, use different login credentials for portal users and drivers.

# ELD Hardware Installation

## Step 1

Connect the ELD device to your vehicle's diagnostic port using the provided cable. For certain vehicle models, special cable harnesses may be required for optimal functionality.

## Step 2

Mount the device using the dual fastener for dash placement.

# ELD Hardware LED Indicators

## *Slow Flashing Green LED*

 The device is successfully powered up.

## *Fast Flashing Green LED*

 The device has detected vehicle activity.

## *Solid Green LED*

 The device is in a fully operational state.

## **Note**

---

LED indicators might not always remain lit for power management reasons.

# Device Synchronization and ELD App Setup

## Step 1

Turn on the vehicle engine after completing the previous steps.

## Step 2

Run the ELD app.

## Step 3

Log in with your credentials (portal users and drivers must have different login details).

## Step 4

Select your vehicle from the list. ELD hardware will connect automatically.

# Log Management

## Access Logs

Open the ELD app, log in with your credentials, and select "Logs" from the main menu.

## View Logs

Review your RODS for different dates, displaying detailed information about duty status changes.

## Edit Logs

Modify duty status entries (except automatically recorded driving time) by tapping a date, using the pencil icon, and saving changes.

## Certify Logs

End your shift by digitally certifying your logs for accuracy and compliance.