



MotionEld

ELD User Manual

www.motioneld.com



MotionEld


1



Log into ELD Logbook App

Step 1: Open the Motion Eld application.
Step 2: Enter the Username and Password.
Step 3: Press the Login button.


3

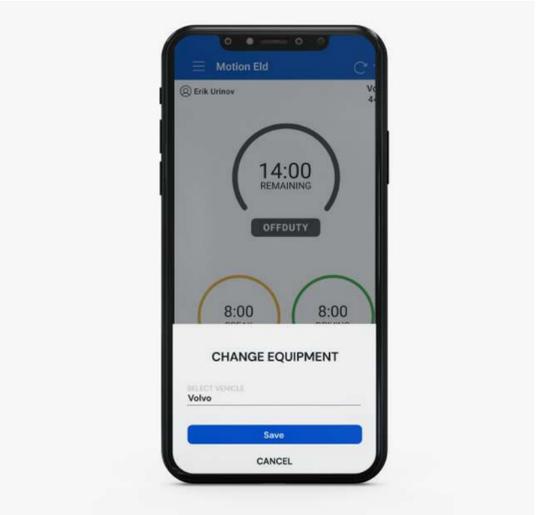

Selecting Vehicle

Step 1: Press Vehicle icon next to your name.
Step 2: Select a vehicle Name and select Vehicle.
Step 3: Press the Save button.


2

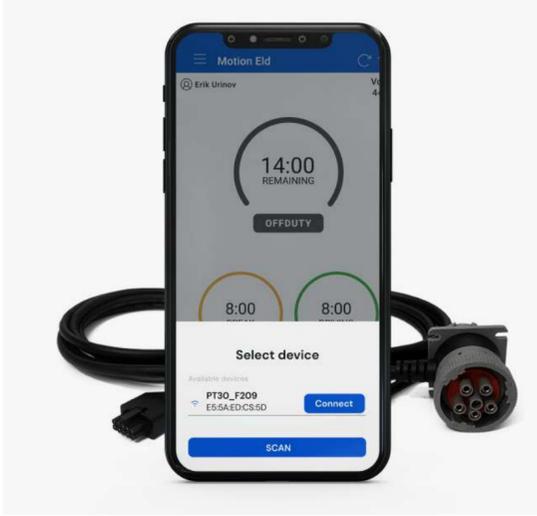

Install & Connect ELD


Step 1: Identify the ECM (diagnostic) port inside your car.
Step 2: Connect one end of the provided cable to the ELD device, and the other end to the vehicle's ECM.

4

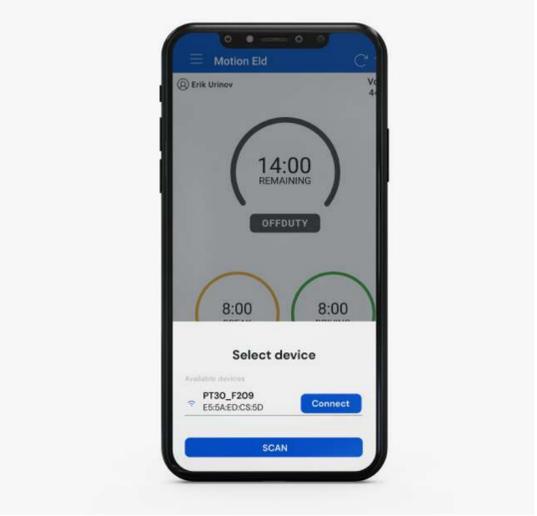


Connecting ELD with Motion Eld App

Step 1: Press Connect (Red) button on top right.
Step 2: Press scan button if no device found.
Step 3: Select the available device.
Step 4: ELD will connect with Motion Eld App.

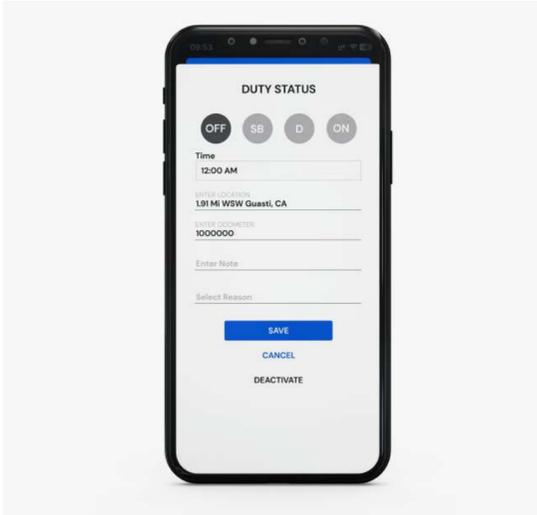


Duty status

- Step 1: Press the remaining time.
- Step 2: Select your current duty status.
- Step 3: Location & odometer will be auto picked.
- Step 4: Press the save button.

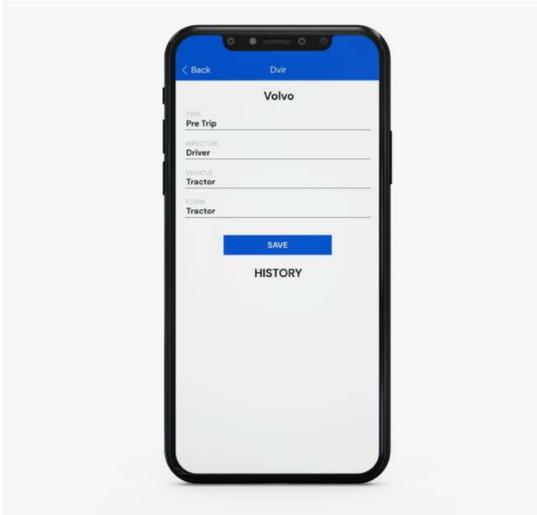


How to perform DVIR

- Step 1: Press the DVIR button at the bottom.
- Step 2: Select the form and press on inspect.
- Step 3: Select vehicle condition.
- Step 4: Add signature and finish DVIR.

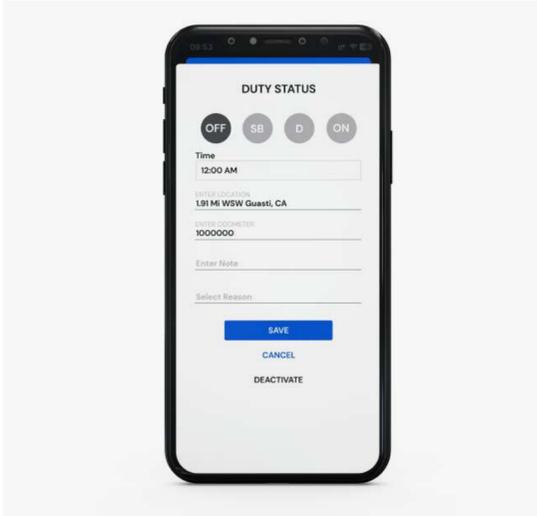


Using personal use and yard move

- Step 1: Press the remaining time.
- Step 2: Select the checkbox below duty status.
- Step 3: Enter the note.
- Step 4: Press the save button.

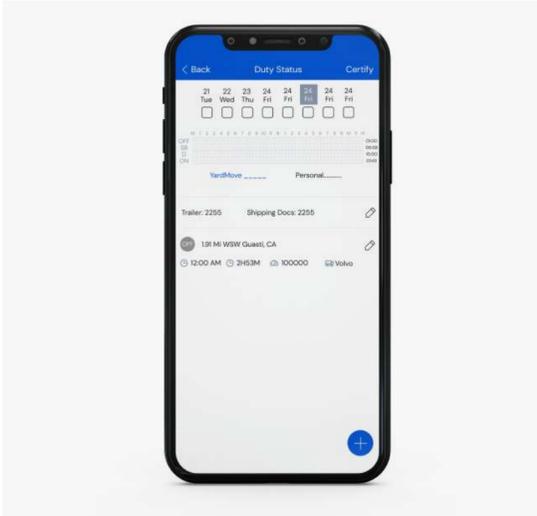


Logs

- Step 1: Press the logs button at the bottom.
- Step 2: Current day logs will show there.
- Step 3: Select the date to view previous logs.
- Step 4: Press Show all to view all logs.

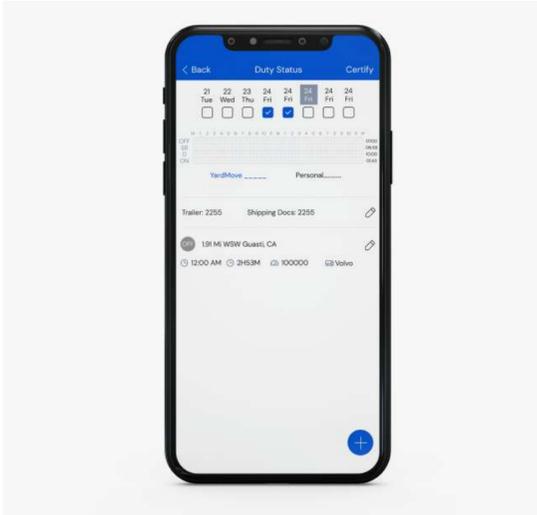


How to certify logs

- Step 1: Press the logs button at the bottom.
- Step 2: Select logs of previous days.
- Step 3: Press certify button on top right corner.
- Step 4: Verify your info & press 'I agree' to certify.

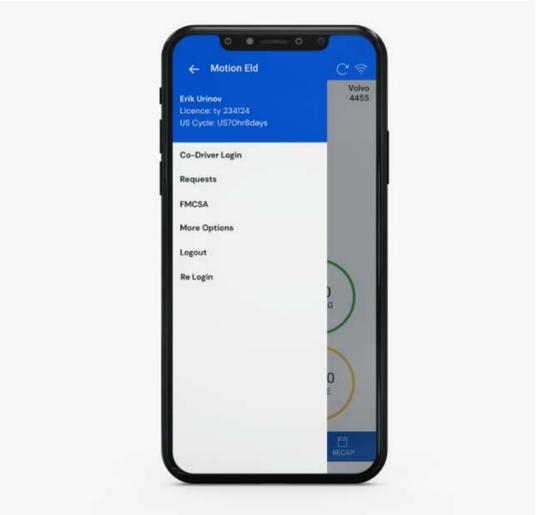


How to switch between Co-drivers

- Step 1: Open the left side menu.
- Step 2: Press switch co-driver.
- Step 3: Press view or make driver.
- Step 4: Enter the password and login.

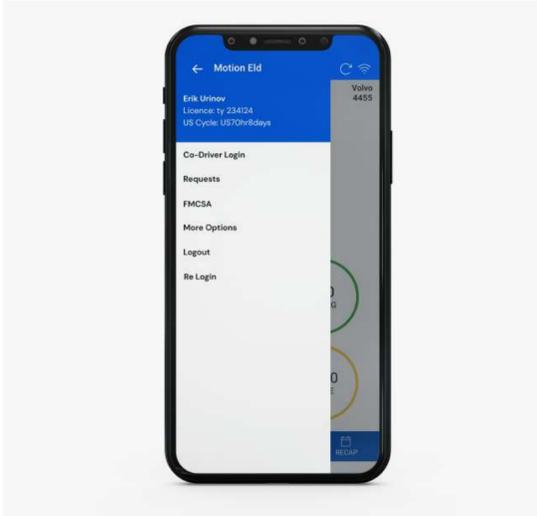


How to Login Co-driver

- Step 1: Open the left side menu.
- Step 2: Press Co-driver Login.
- Step 3: Enter username and password.
- Step 4: Press the Login button.

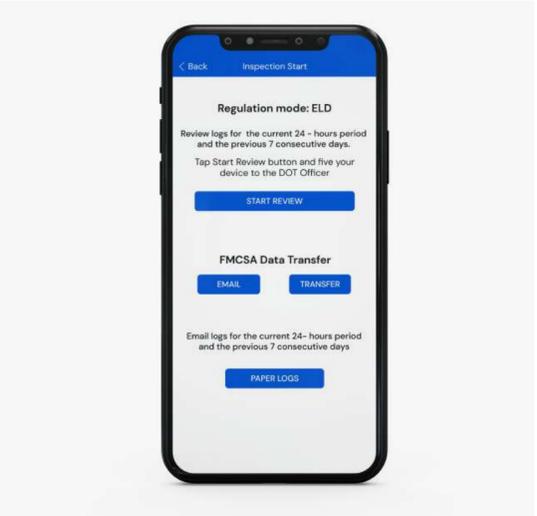

Roadside Inspection

- Step 1: Open the left side menu.
- Step 2: Press roadside inspection.
- Step 3: Press Start Review.
- Step 4: Handover the device to the Inspector.

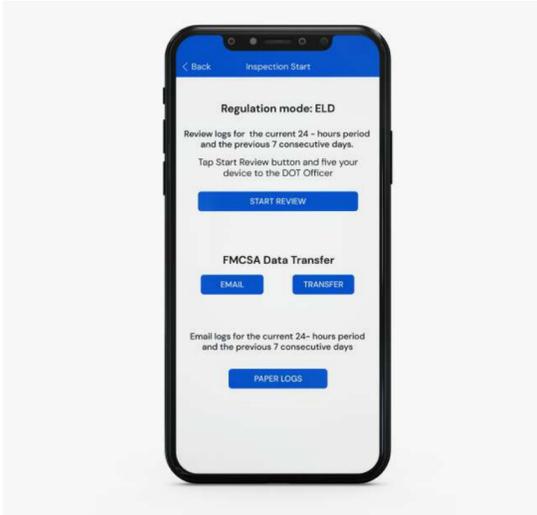

Data Transfer

- Step 1: Open the left side menu.
- Step 2: Press roadside inspection.
- Step 3: Press Email or Data Transfer.
- Step 4: Enter the comment and press transfer.



Malfunctions & Data Diagnostic Event

- Step 1: 'M' or 'D' icon will blink on the top.
- Step 2: Press 'M' or 'D' icon on the top.
- Step 3: List of events will show up.
- Step 4: Press the event to check the details.



How to Accept/ Reject edit request

- Step 1: Open the left side menu.
- Step 2: Press the Requests.
- Step 3: Accept or Reject the request.
- Step 4: Enter the note and press save.