


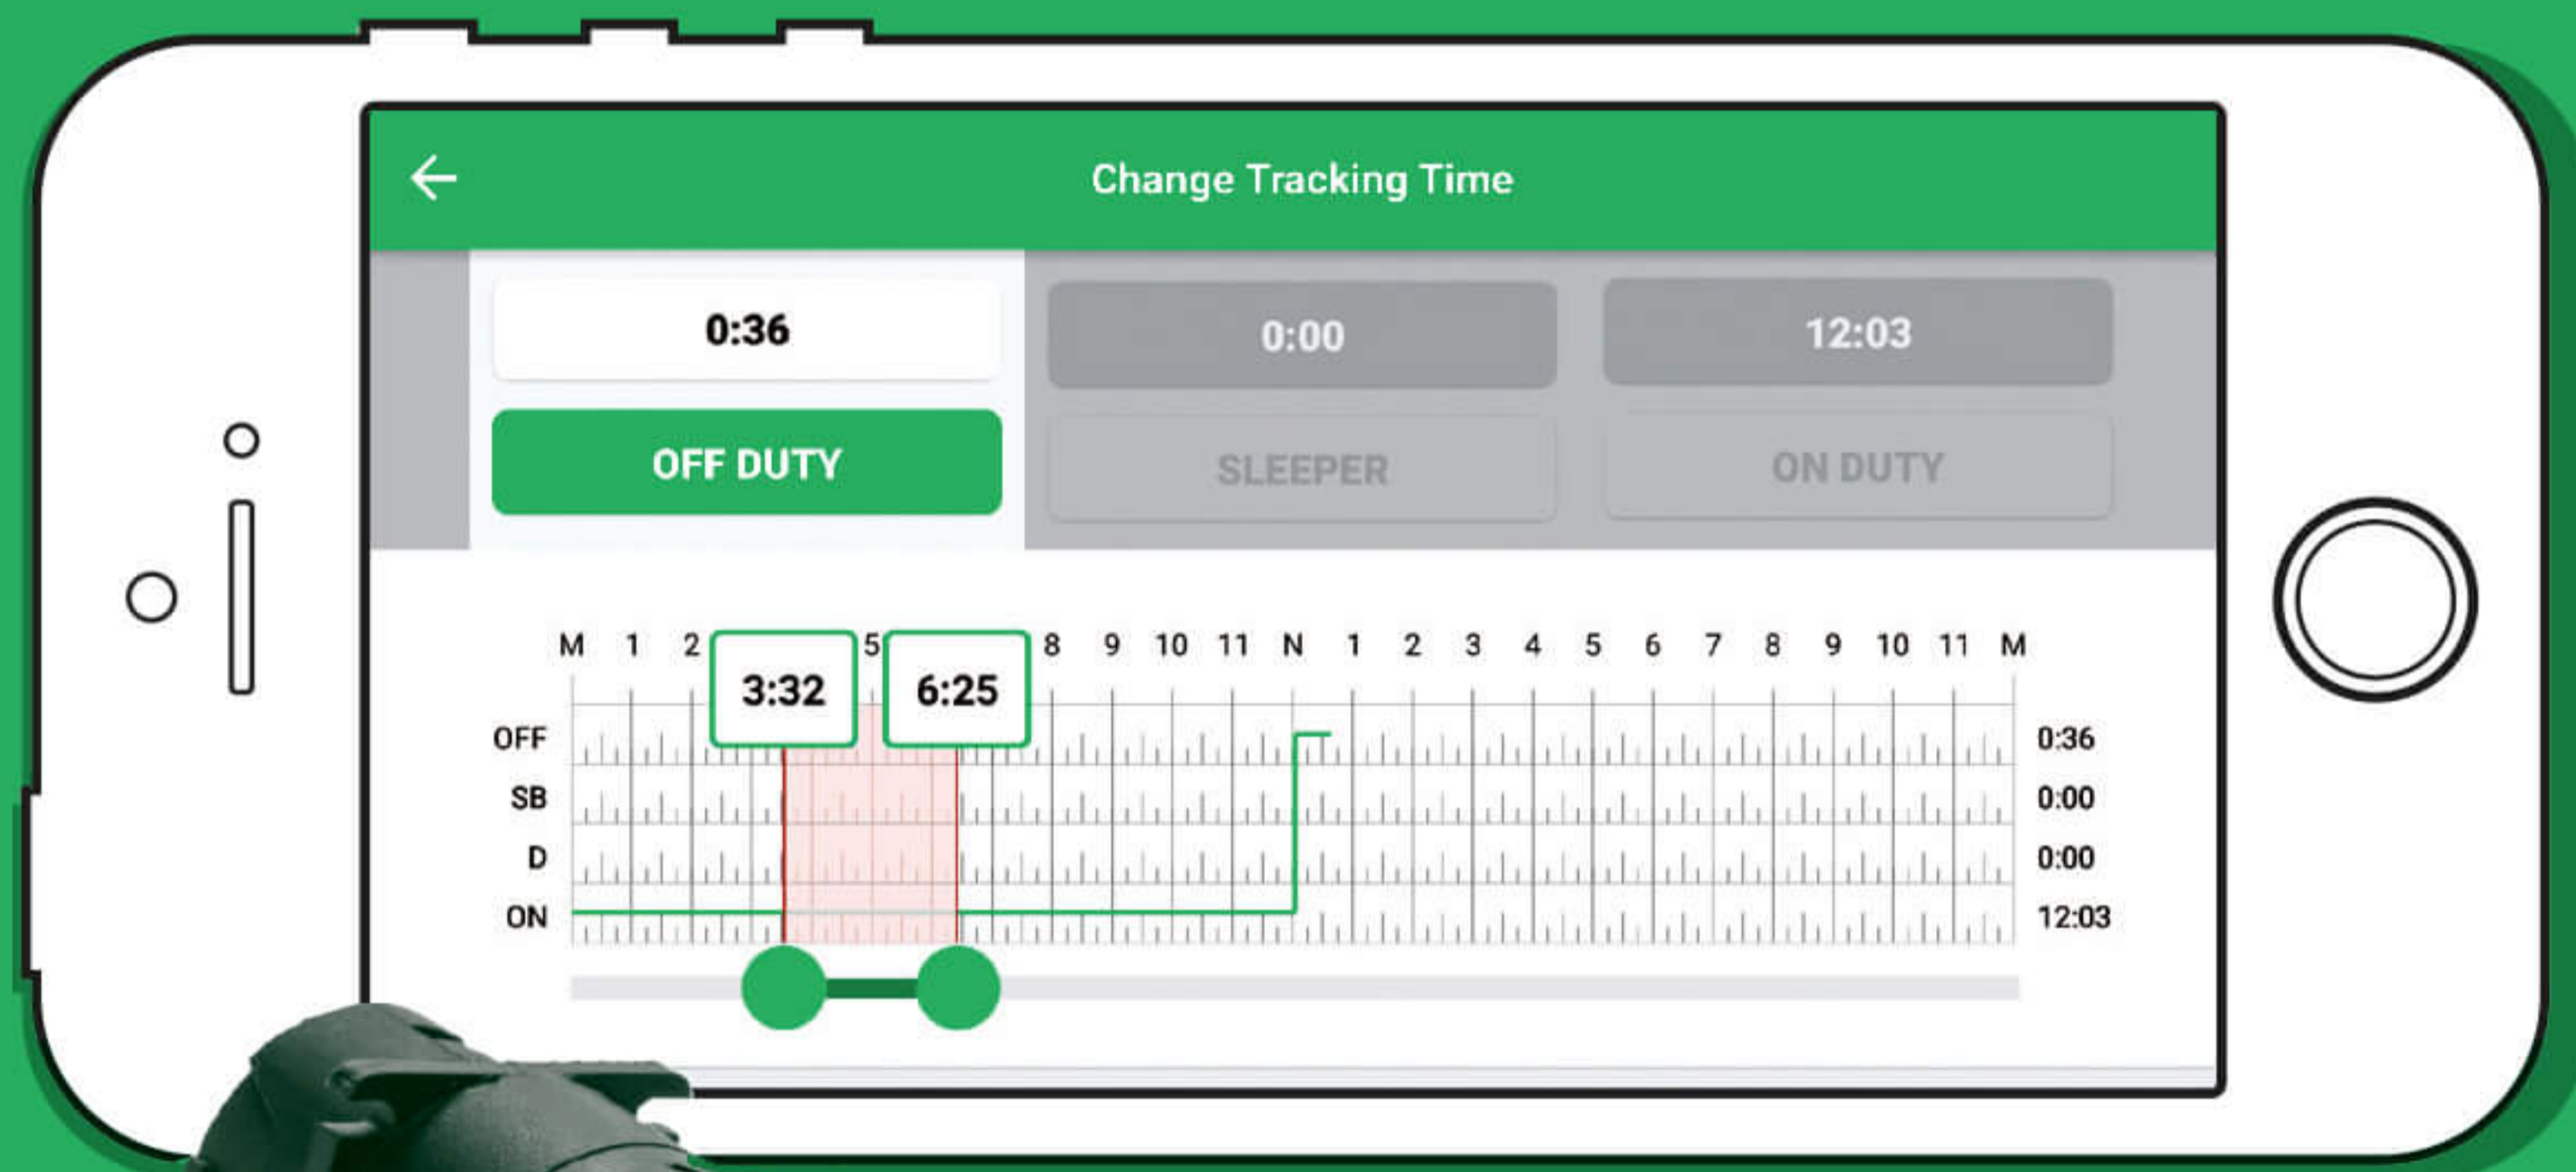

# MANUAL Android

Per FMCSA rules, this guide must be kept  
in the vehicle at all times.




eld@real.us  
708-983-7325




# DOWNLOAD REAL ELD APPLICATION

1 Search for **"REAL ELD"** in the Google play store. (picture 1)

2 Tap **INSTALL** to download the app. (picture 2)

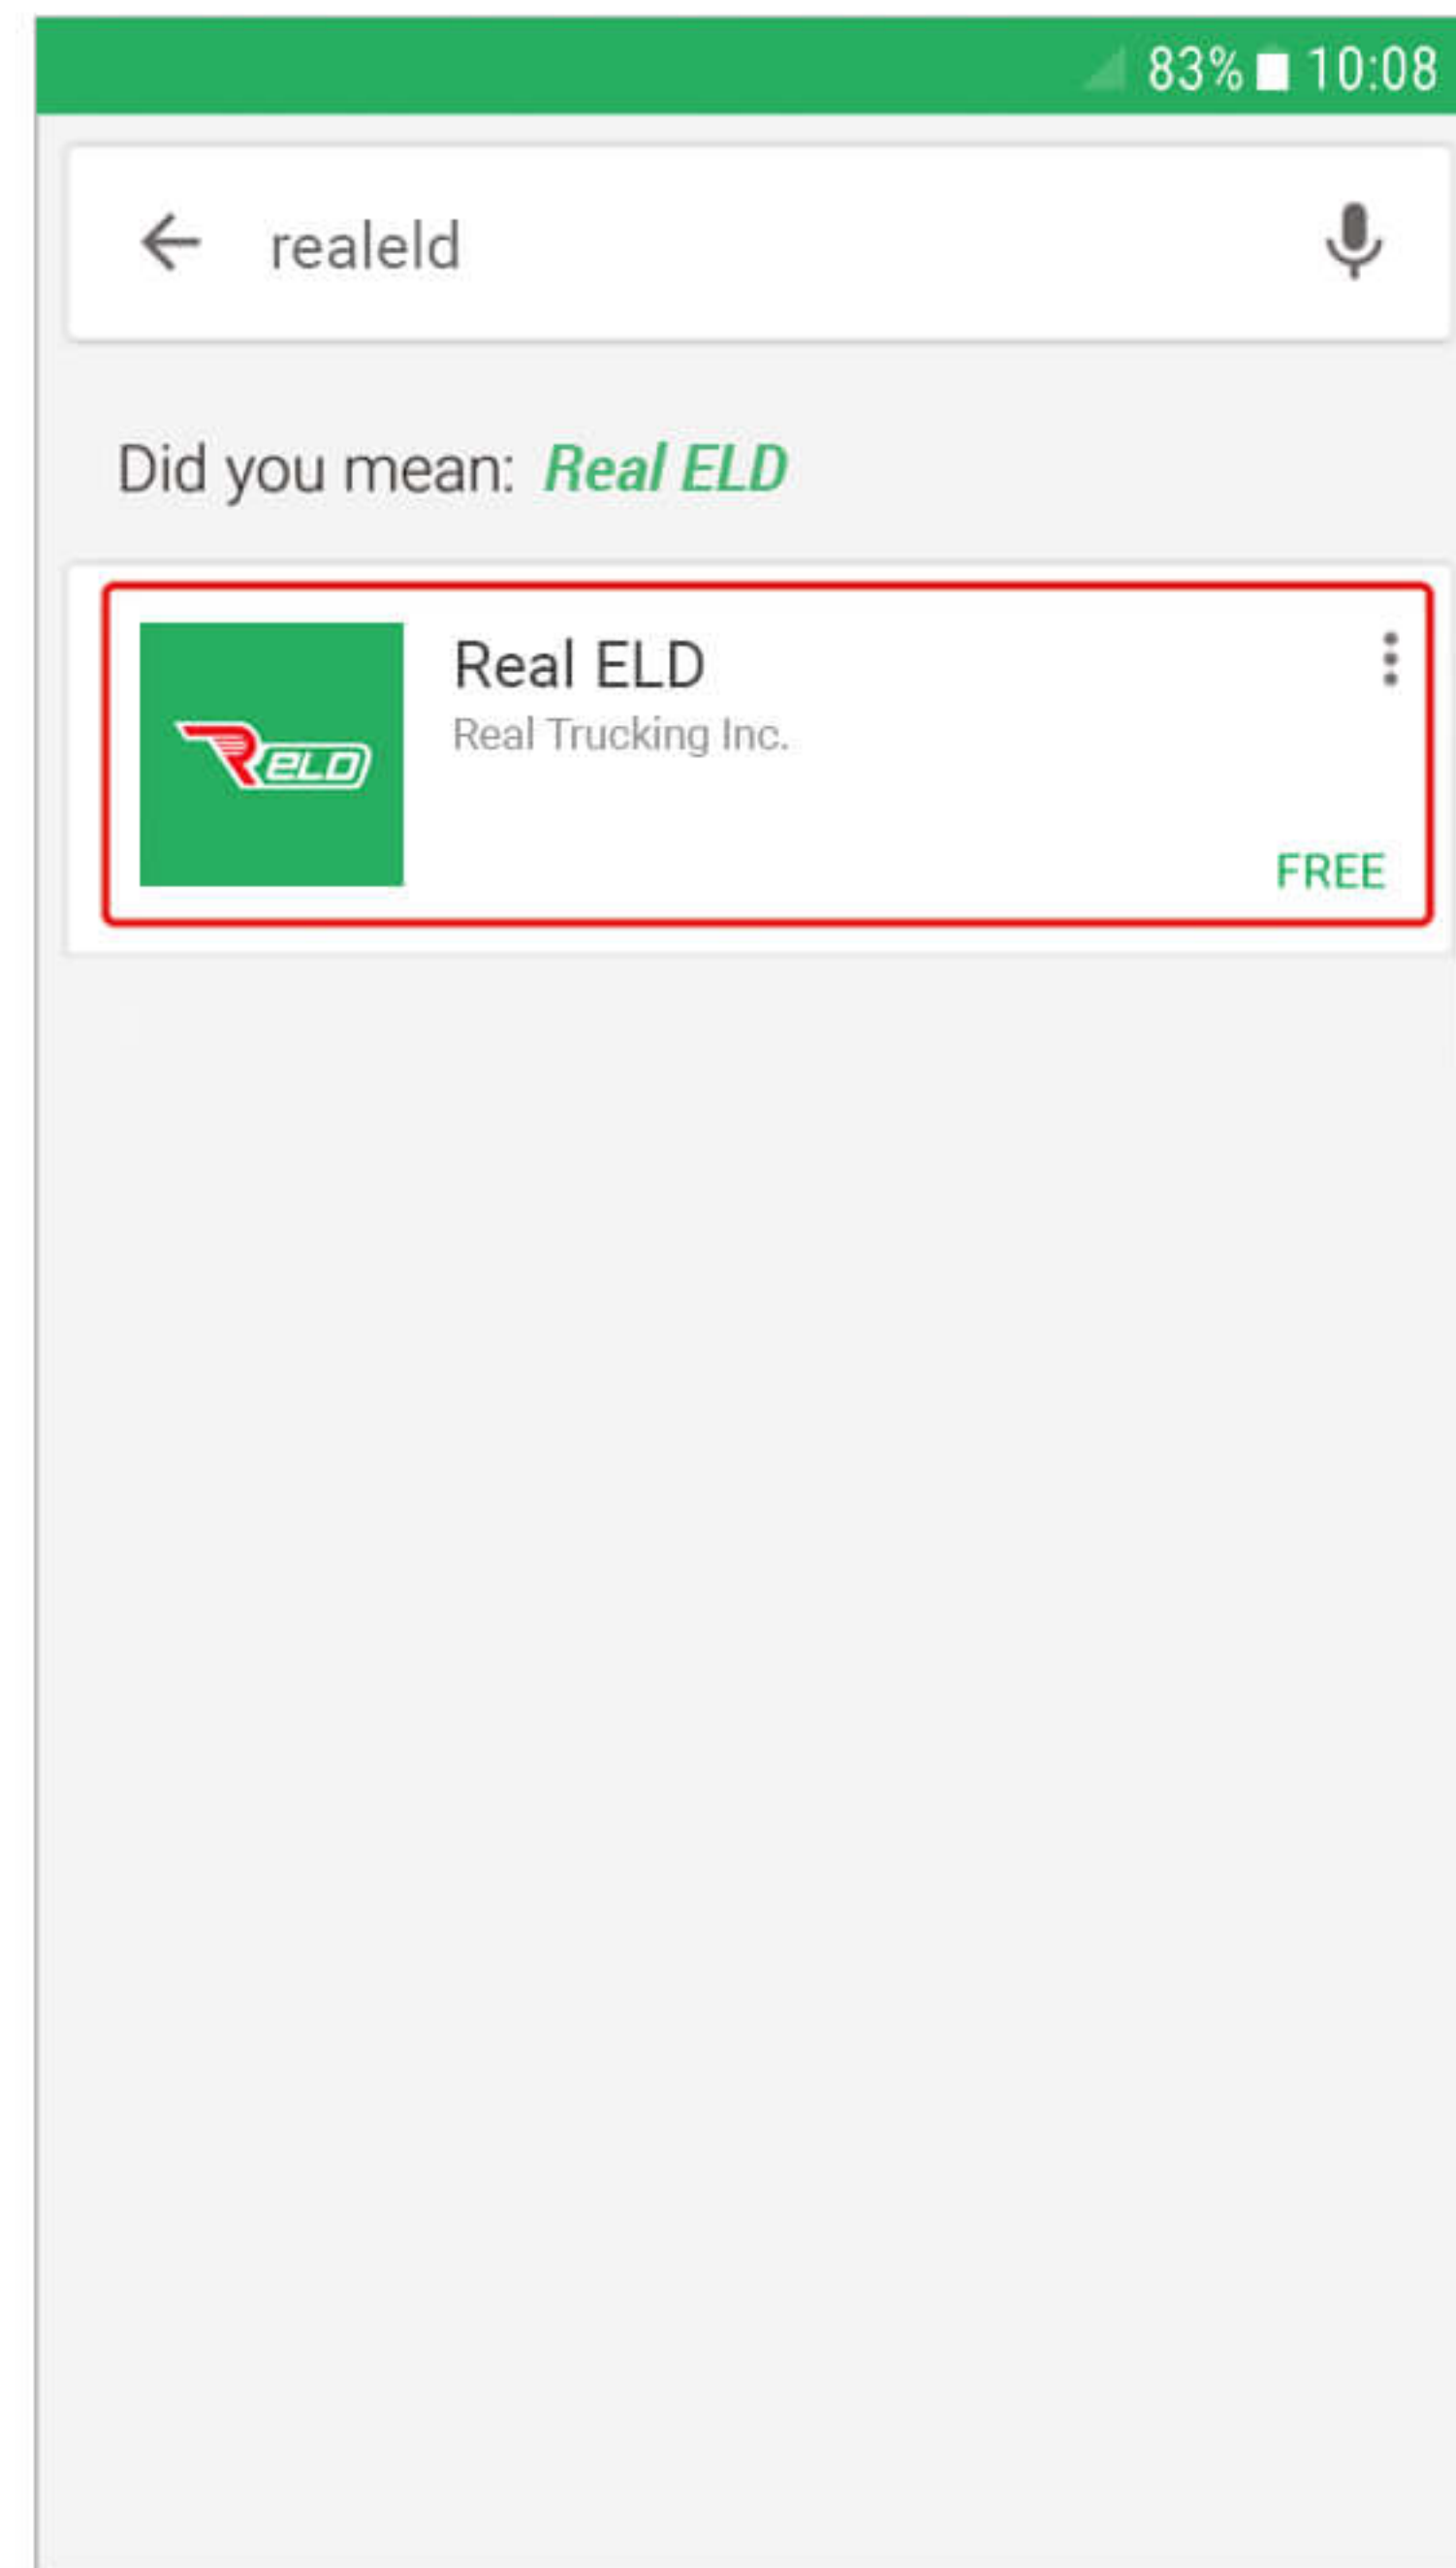

picture 1

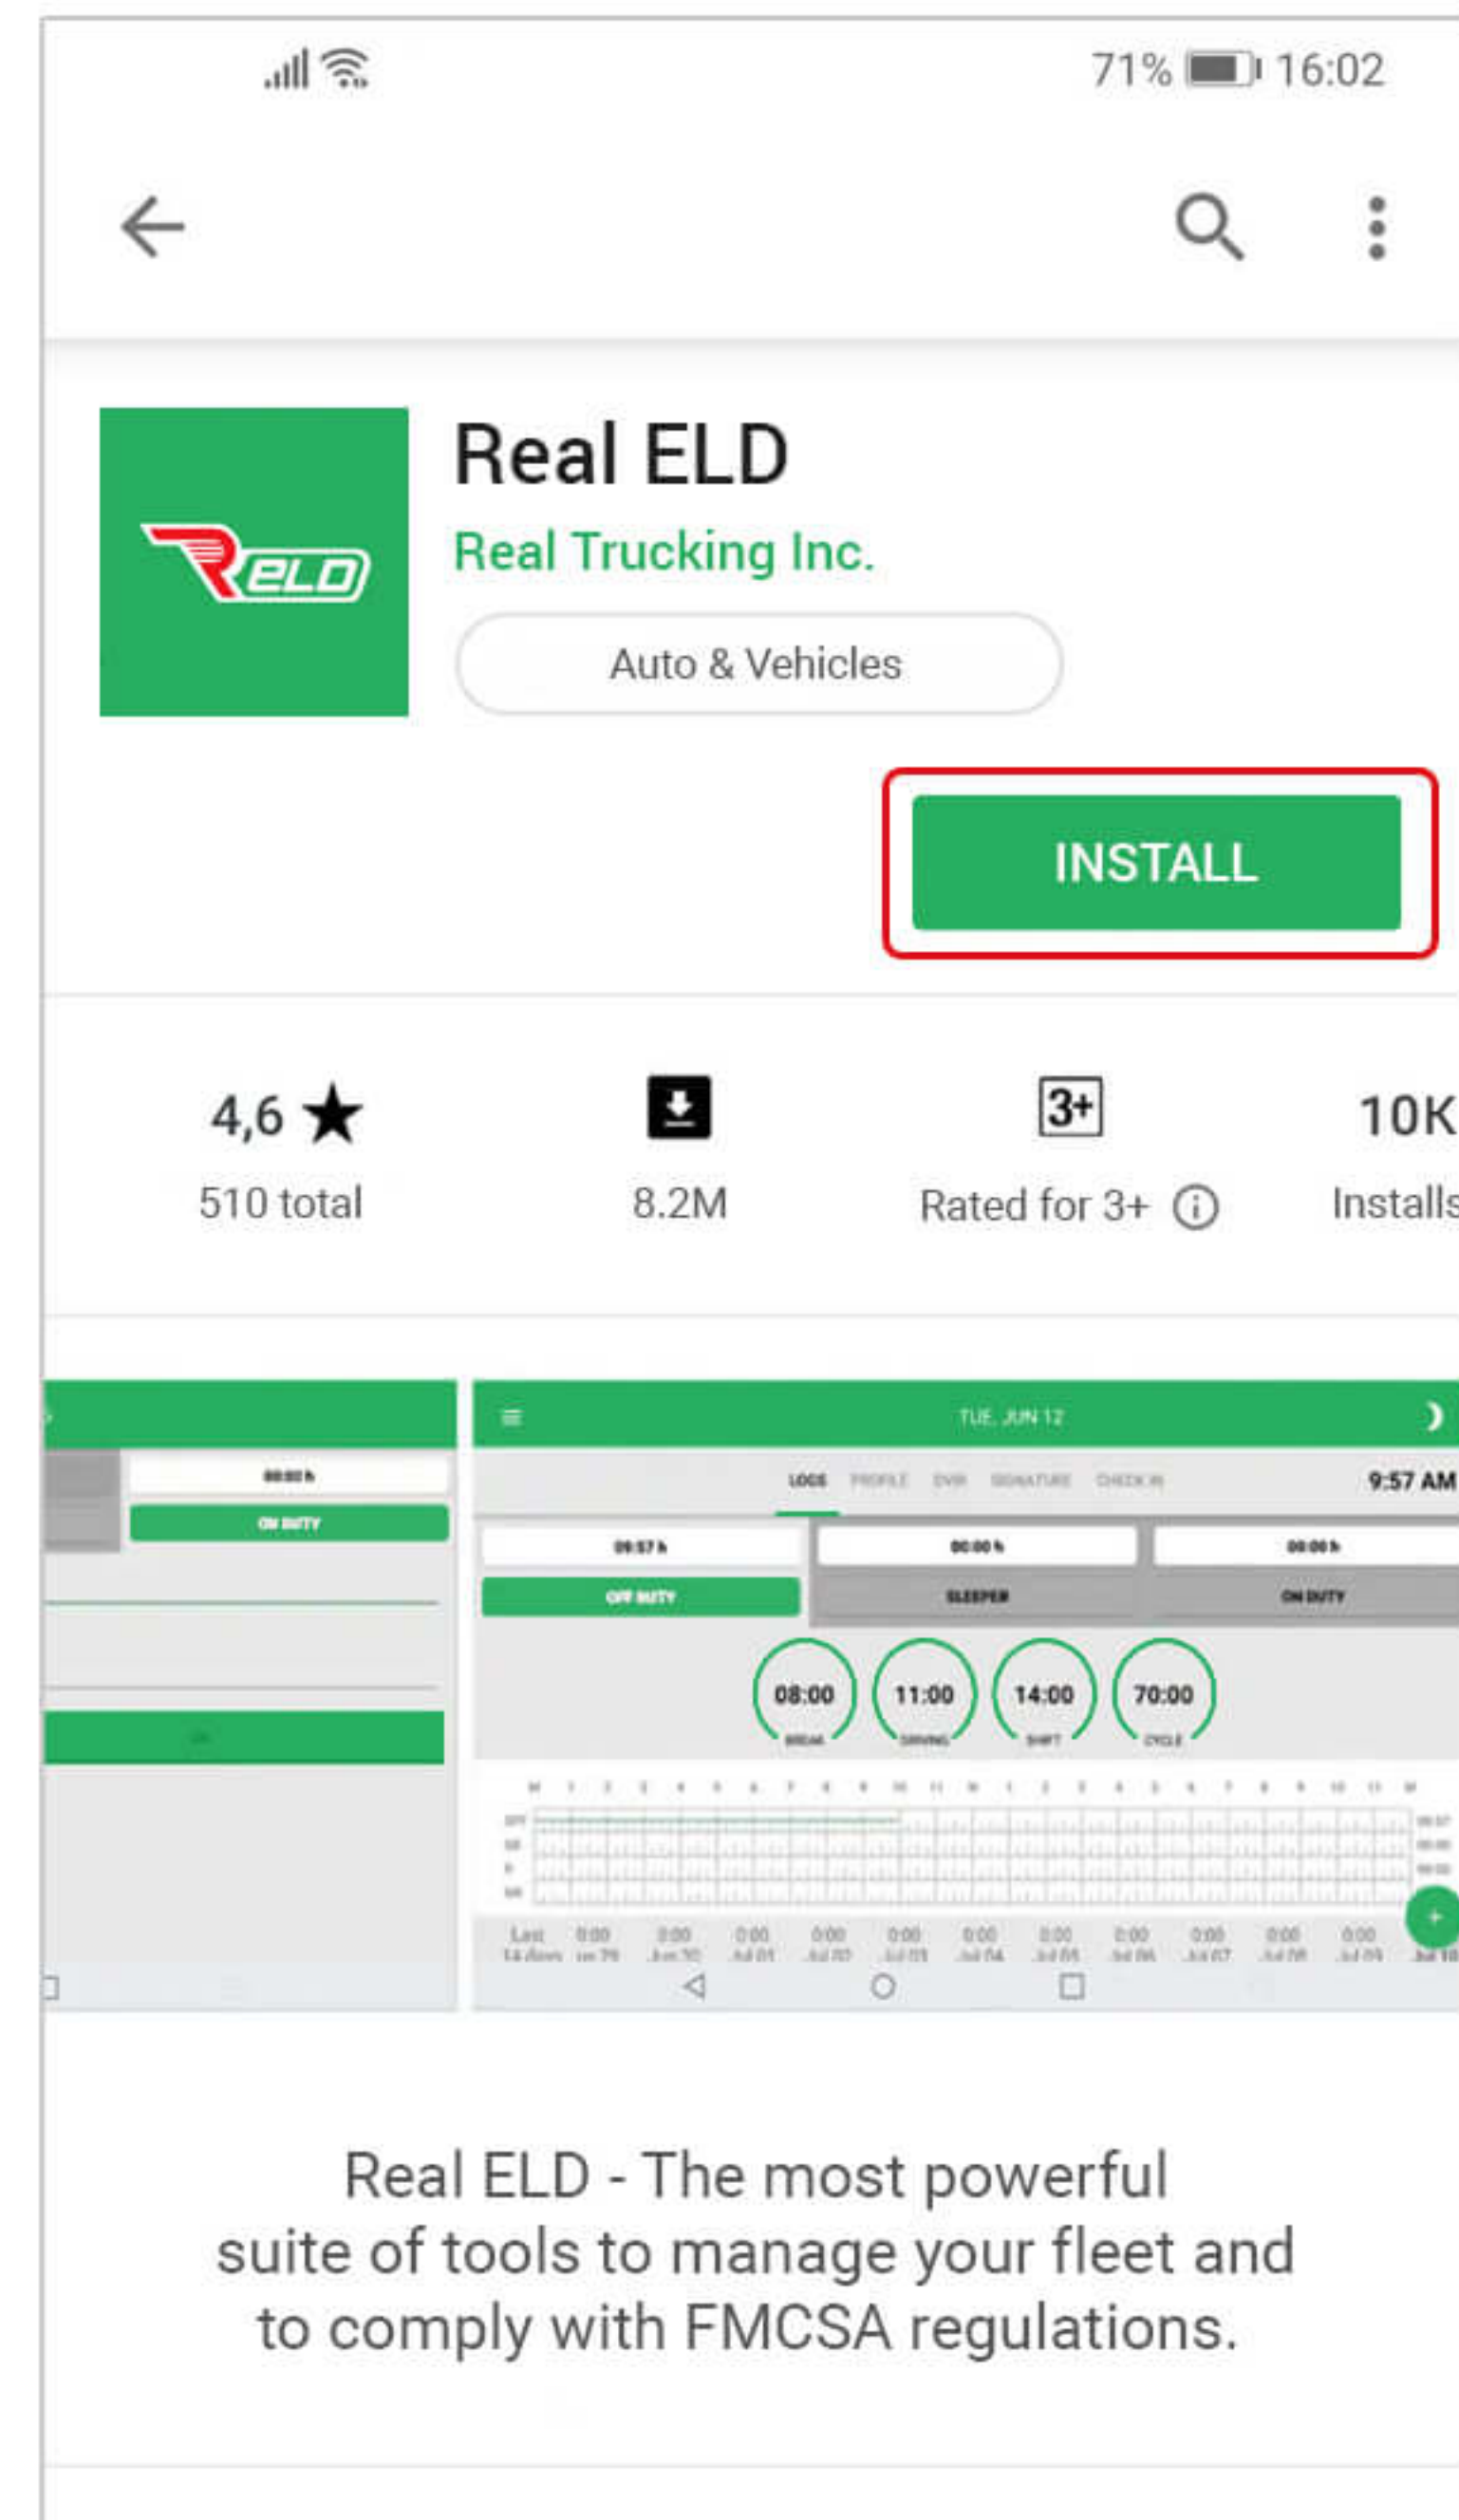

picture 2

3 Login to application using your email and password. (picture 3)  
If you don't have REAL ELD account, please contact your fleet manager.

ELD

Log In

UserName

---

Password


---

CONFIRM

[Forgot your password?](#)


picture 3

4 Select the vehicle from the list. (picture 4) If your vehicle number doesn't show up, please contact your fleet manager.

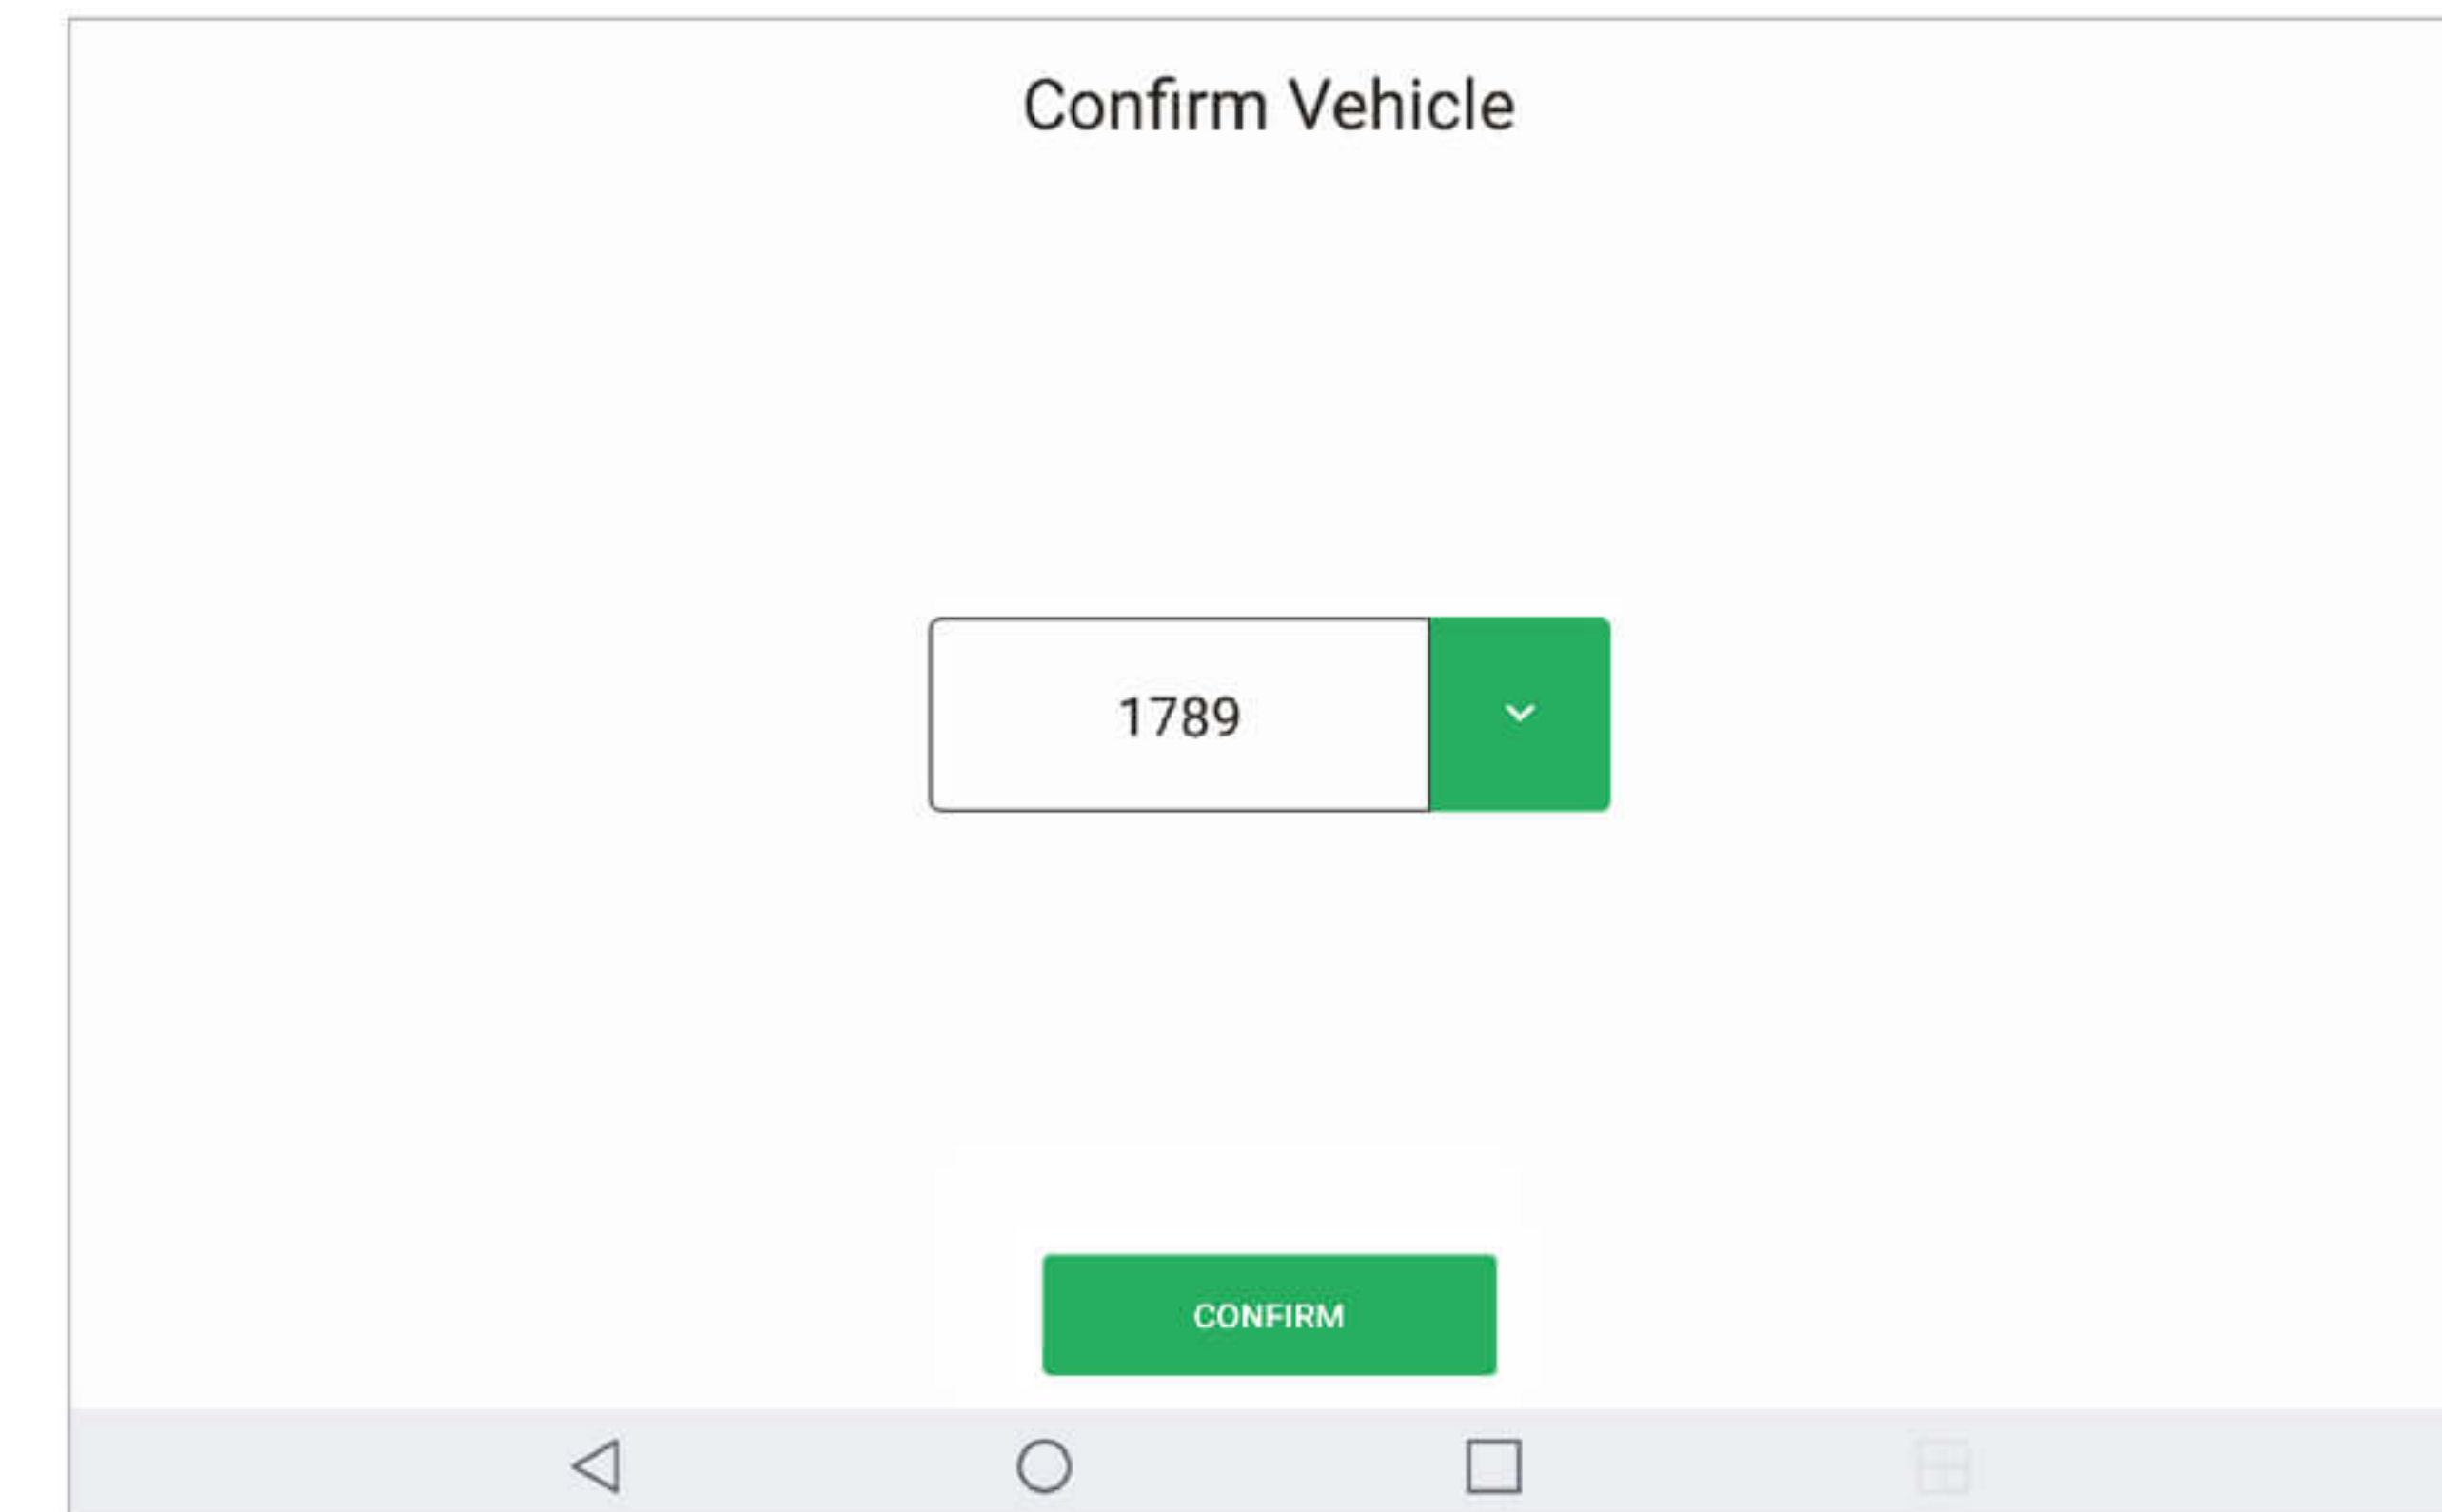

picture 4

5 Your cellular device will connect to ELD plug automatically. The status will be shown on top of the main screen. (picture 5)


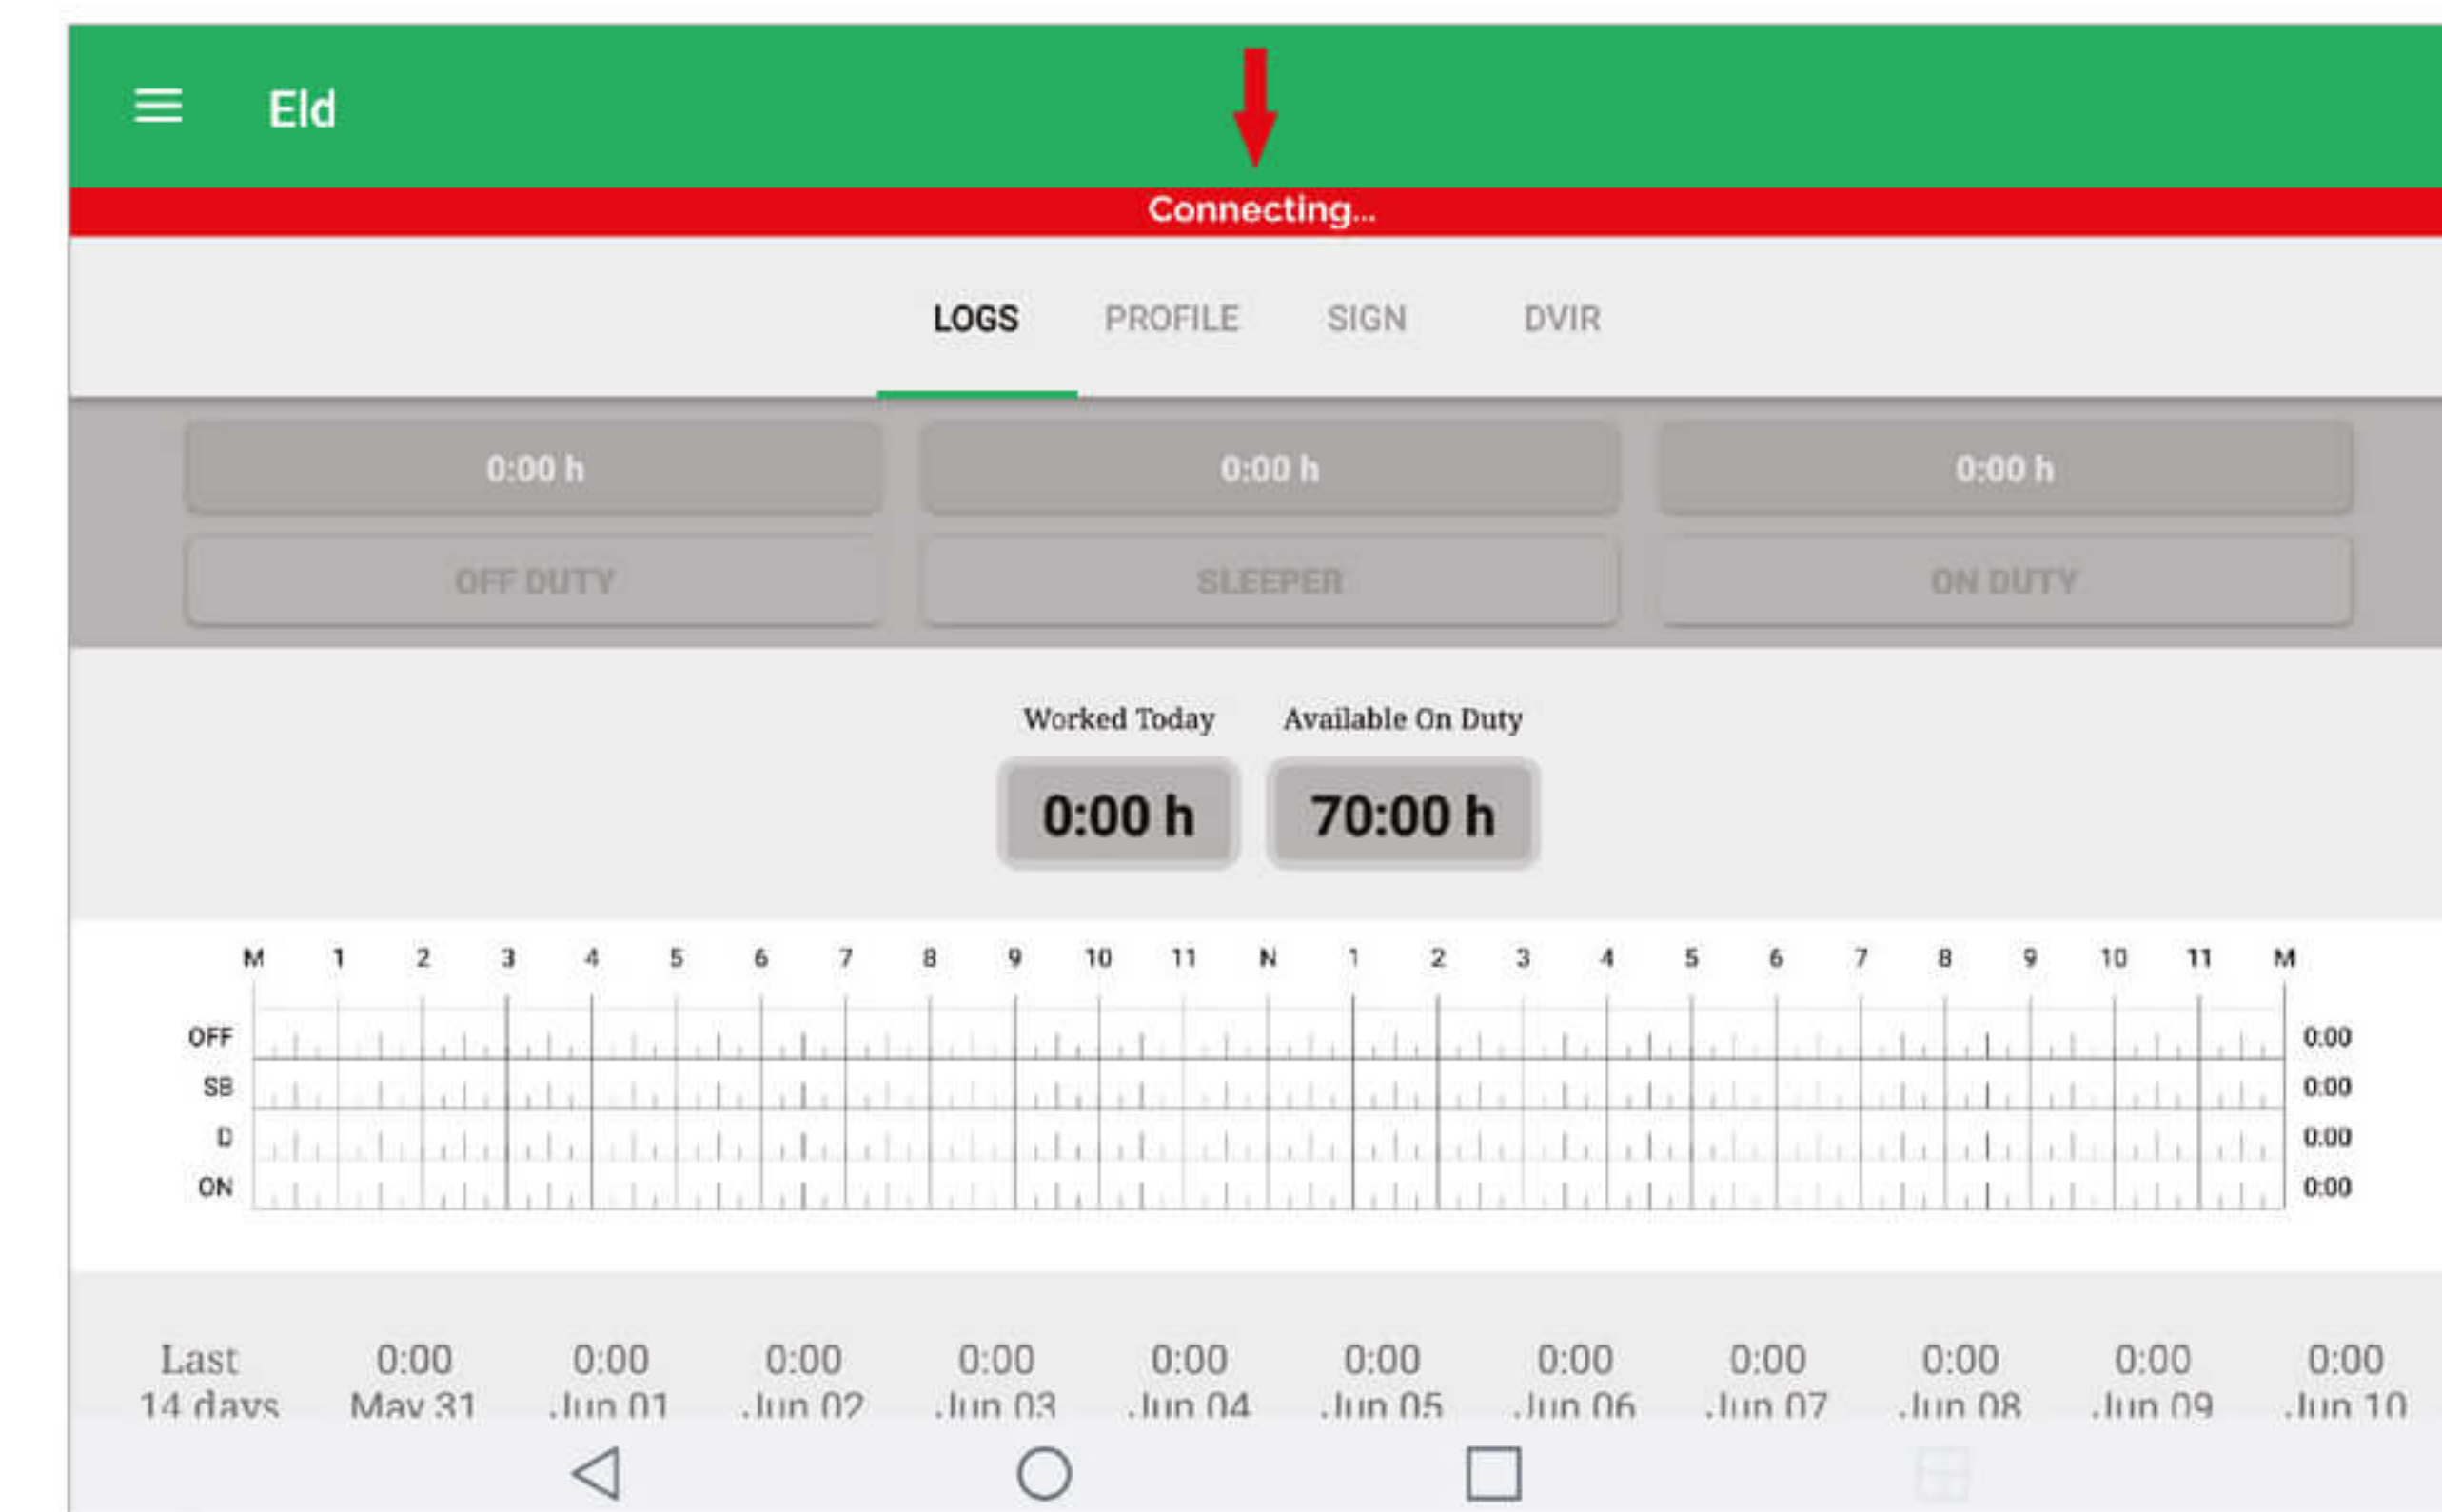


picture 5

6 The status line can be shown in 2 ways :

The device is trying to connect

The device cannot connect

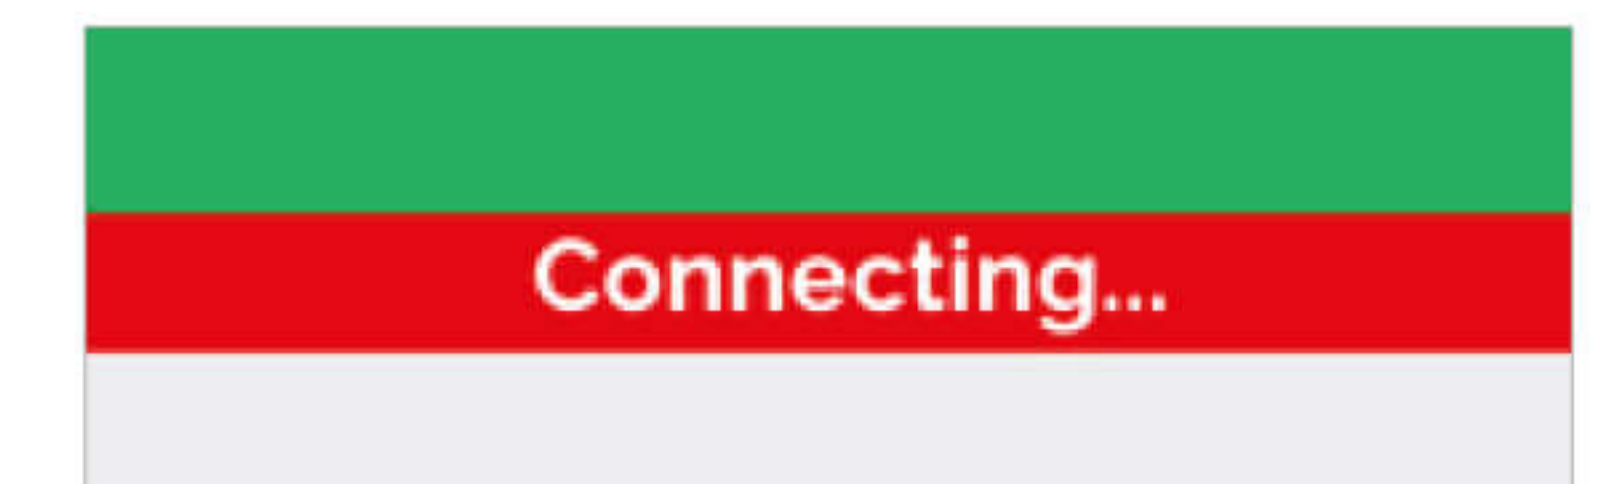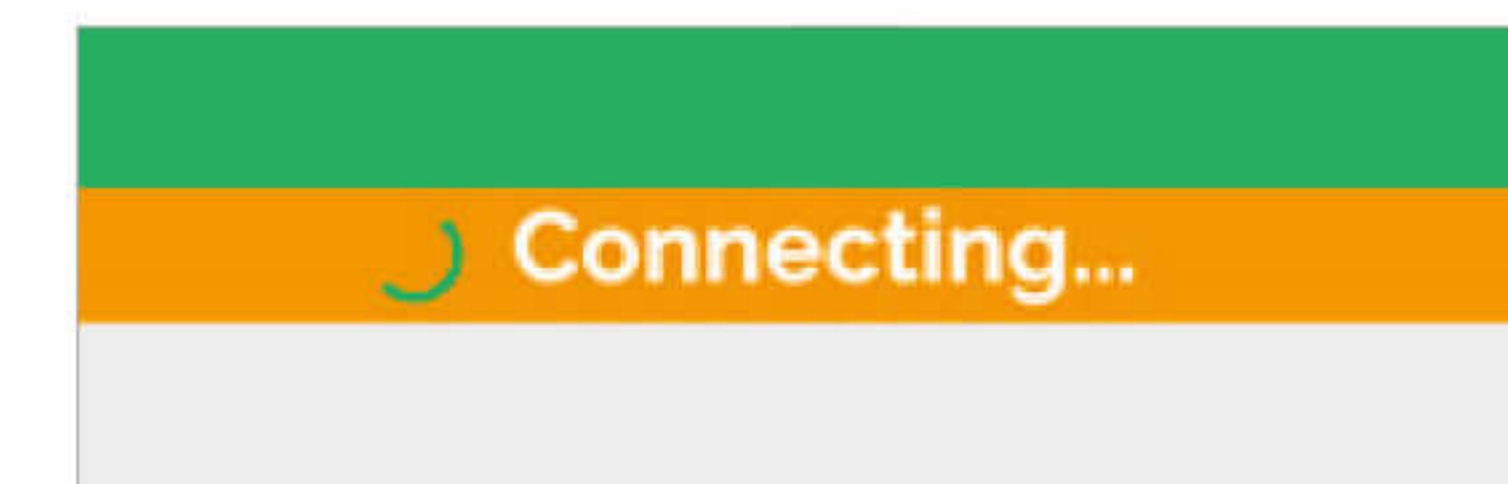

When the device is connected the status line will not be shown.




# INSTALL REAL ELD IN YOUR VEHICLE


**1** Make sure the engine of your vehicle is off. If the engine is on, please turn it off and turn the key to the off position before connecting ELD device.

**2** Locate the diagnostic port inside your vehicle's cabin. Diagnostic port is typically located in one of the following places:

- a** Under the left side of the dashboard
- b** Under the steering wheel
- c** Near the driver's left kick panel
- d** Under the driver's seat

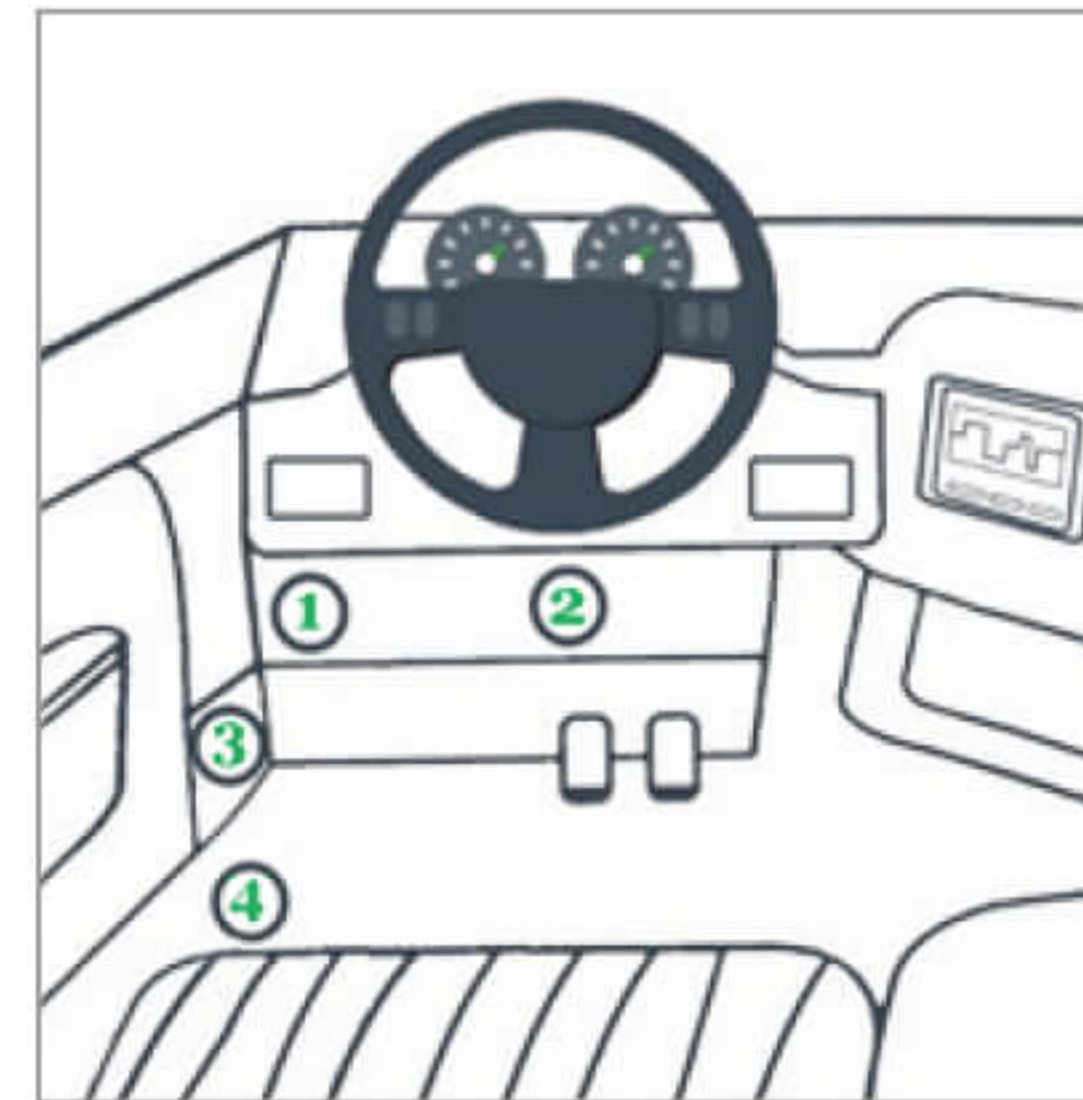

**3** Attach the REAL ELD plug to the diagnostic port of the vehicle. Twist the base of Right Trucking until it locks into place.

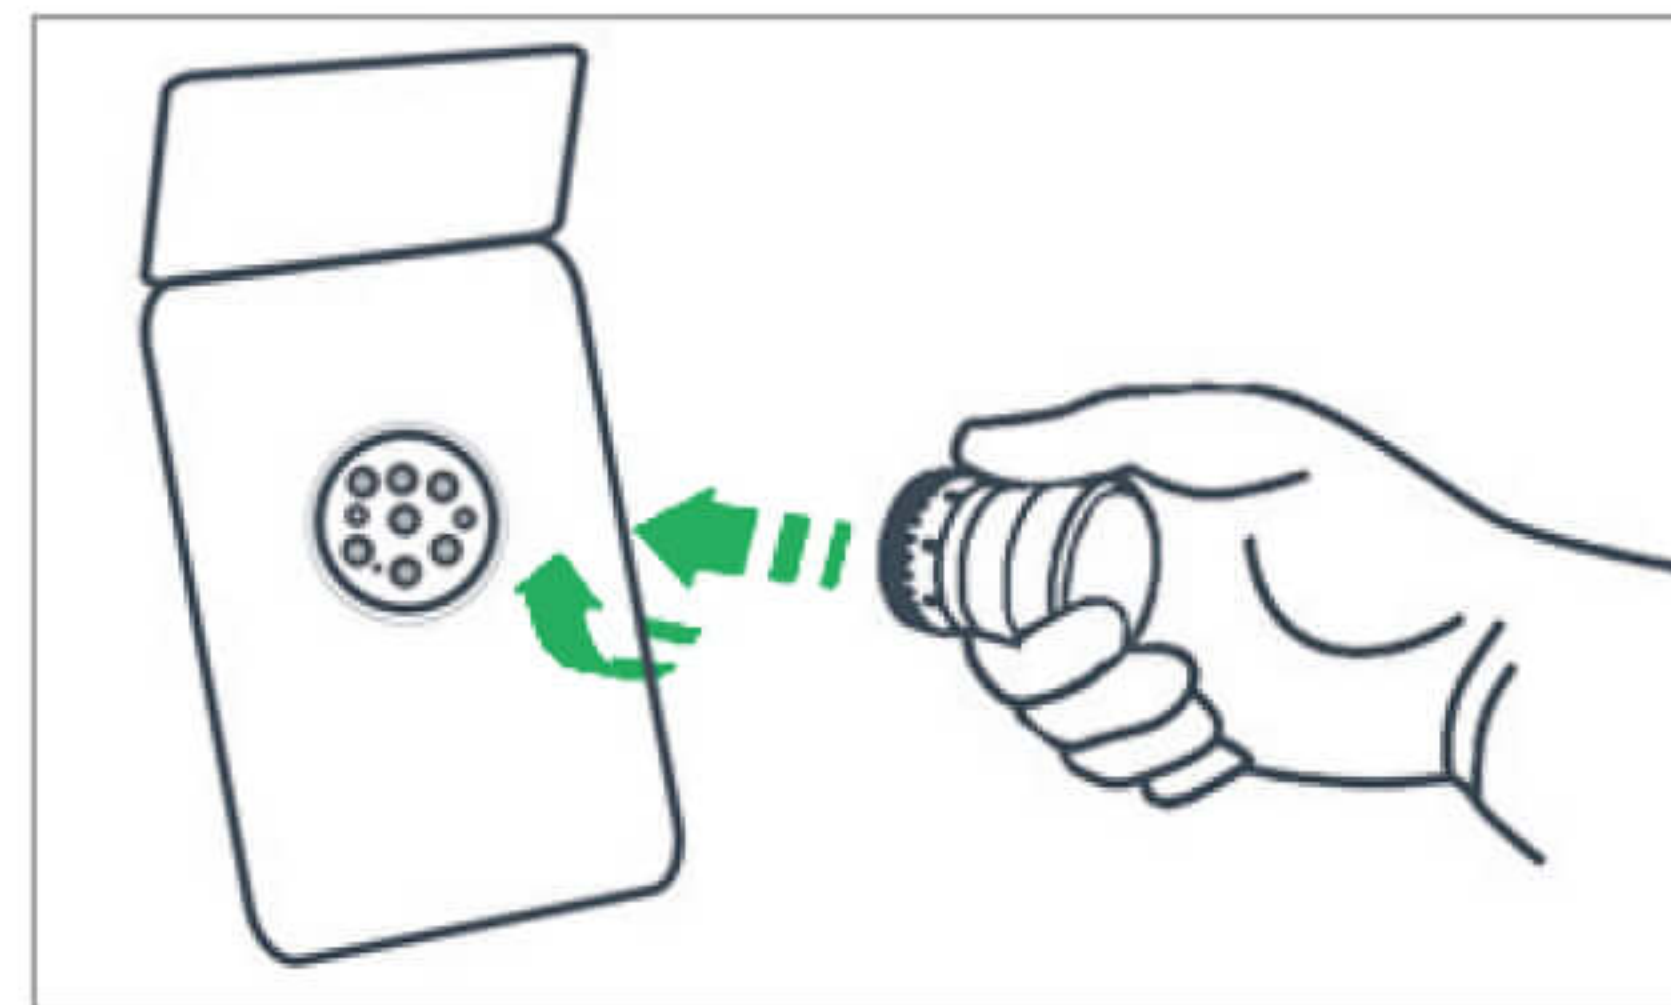

**4** Once plugged in, the device will start syncing with the ECM and the REAL ELD application on cellular device. The REAL ELD device has LED lights to simply indicate its status to the driver.

● Device **Not Plugged** into the truck's diagnostic port.

◐ **Blinking Green**  
The Adapter is waiting for the App to connect.


✓ ● **Slowly Blinking Green**  
The App is **Connected** and the Adapter is **Receiving** ECM data.



# USING REAL ELD ON ROAD


Once you have connected your mobile device to the Real ELD, your driving time will be automatically recorded.

When your vehicle begins moving at a speed of 5 mph or more, your duty status will automatically be set to Driving. (picture 6)

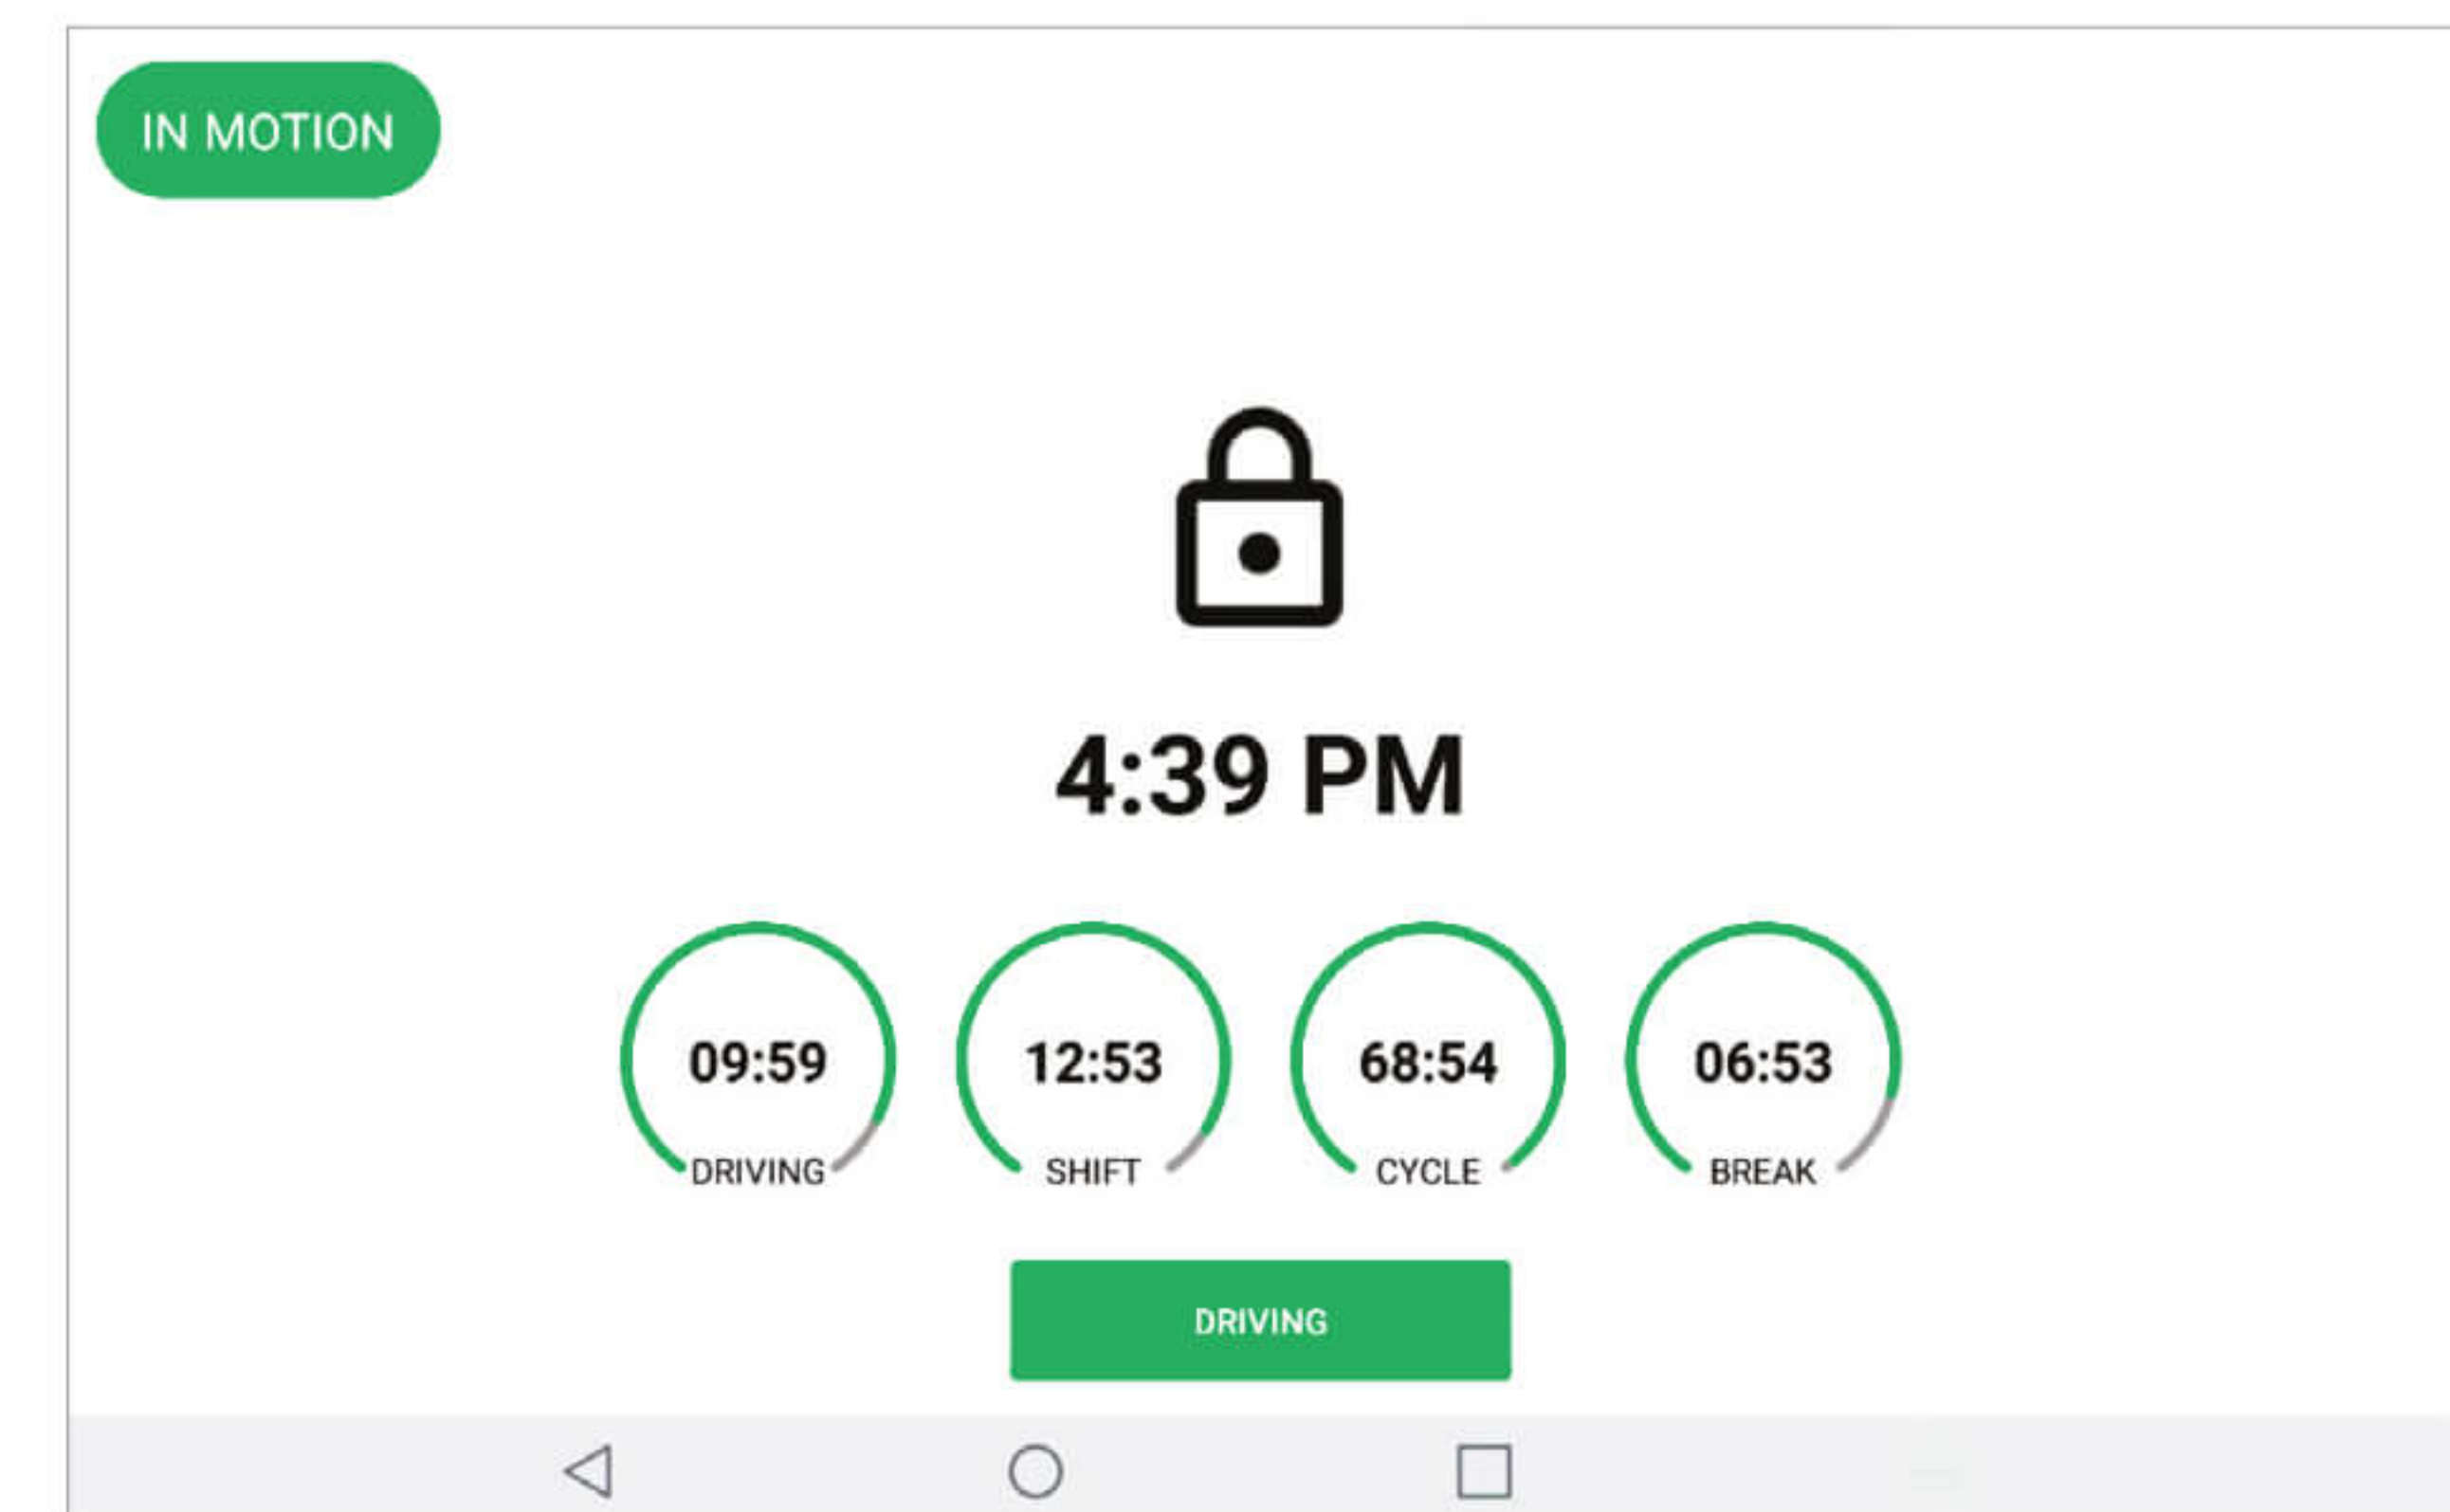

picture 6

At 0 mph the vehicle is considered to be Idle. When Idle, you can change your duty status by tapping and selecting one of the alternate duty status. (picture 7)

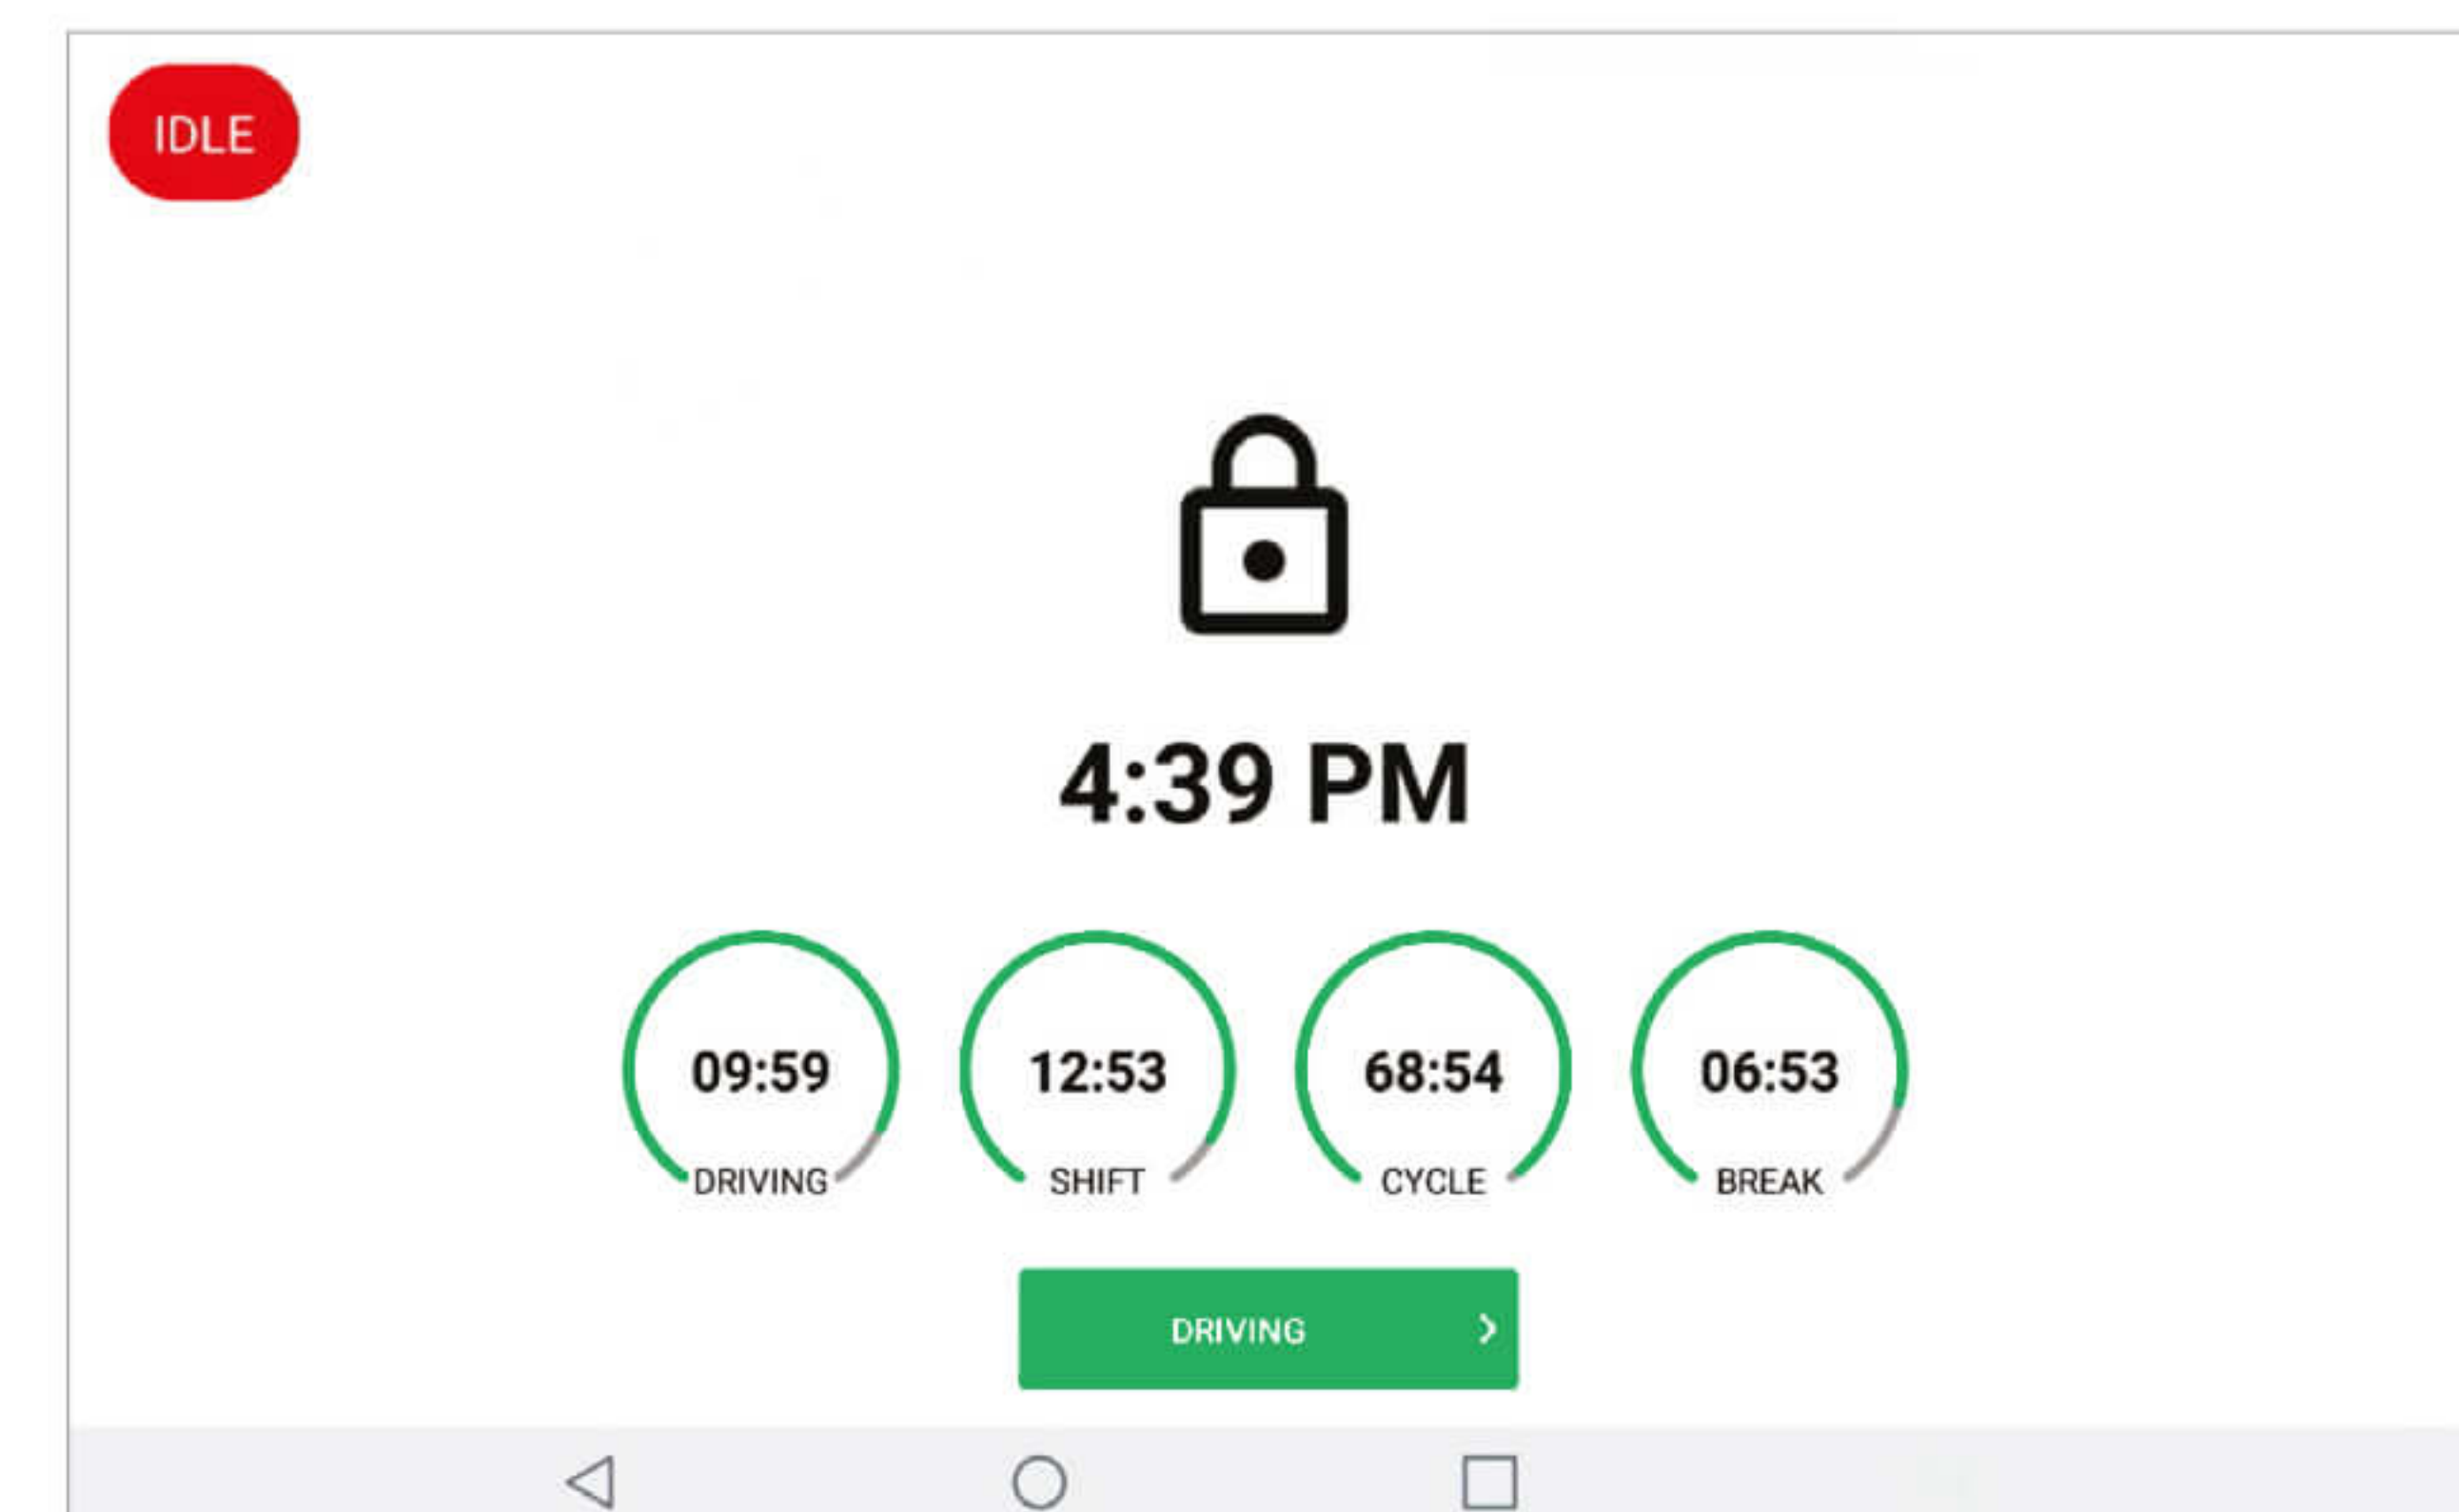


picture 7




# USING REAL ELD ON ROAD (CONTINUED)

If the vehicle remains **Idle** for 5 min, a pop-up window will appear asking if you would like to change your duty status. If no selection is made within 60 seconds, duty status will change automatically to "On Duty". (picture 8)

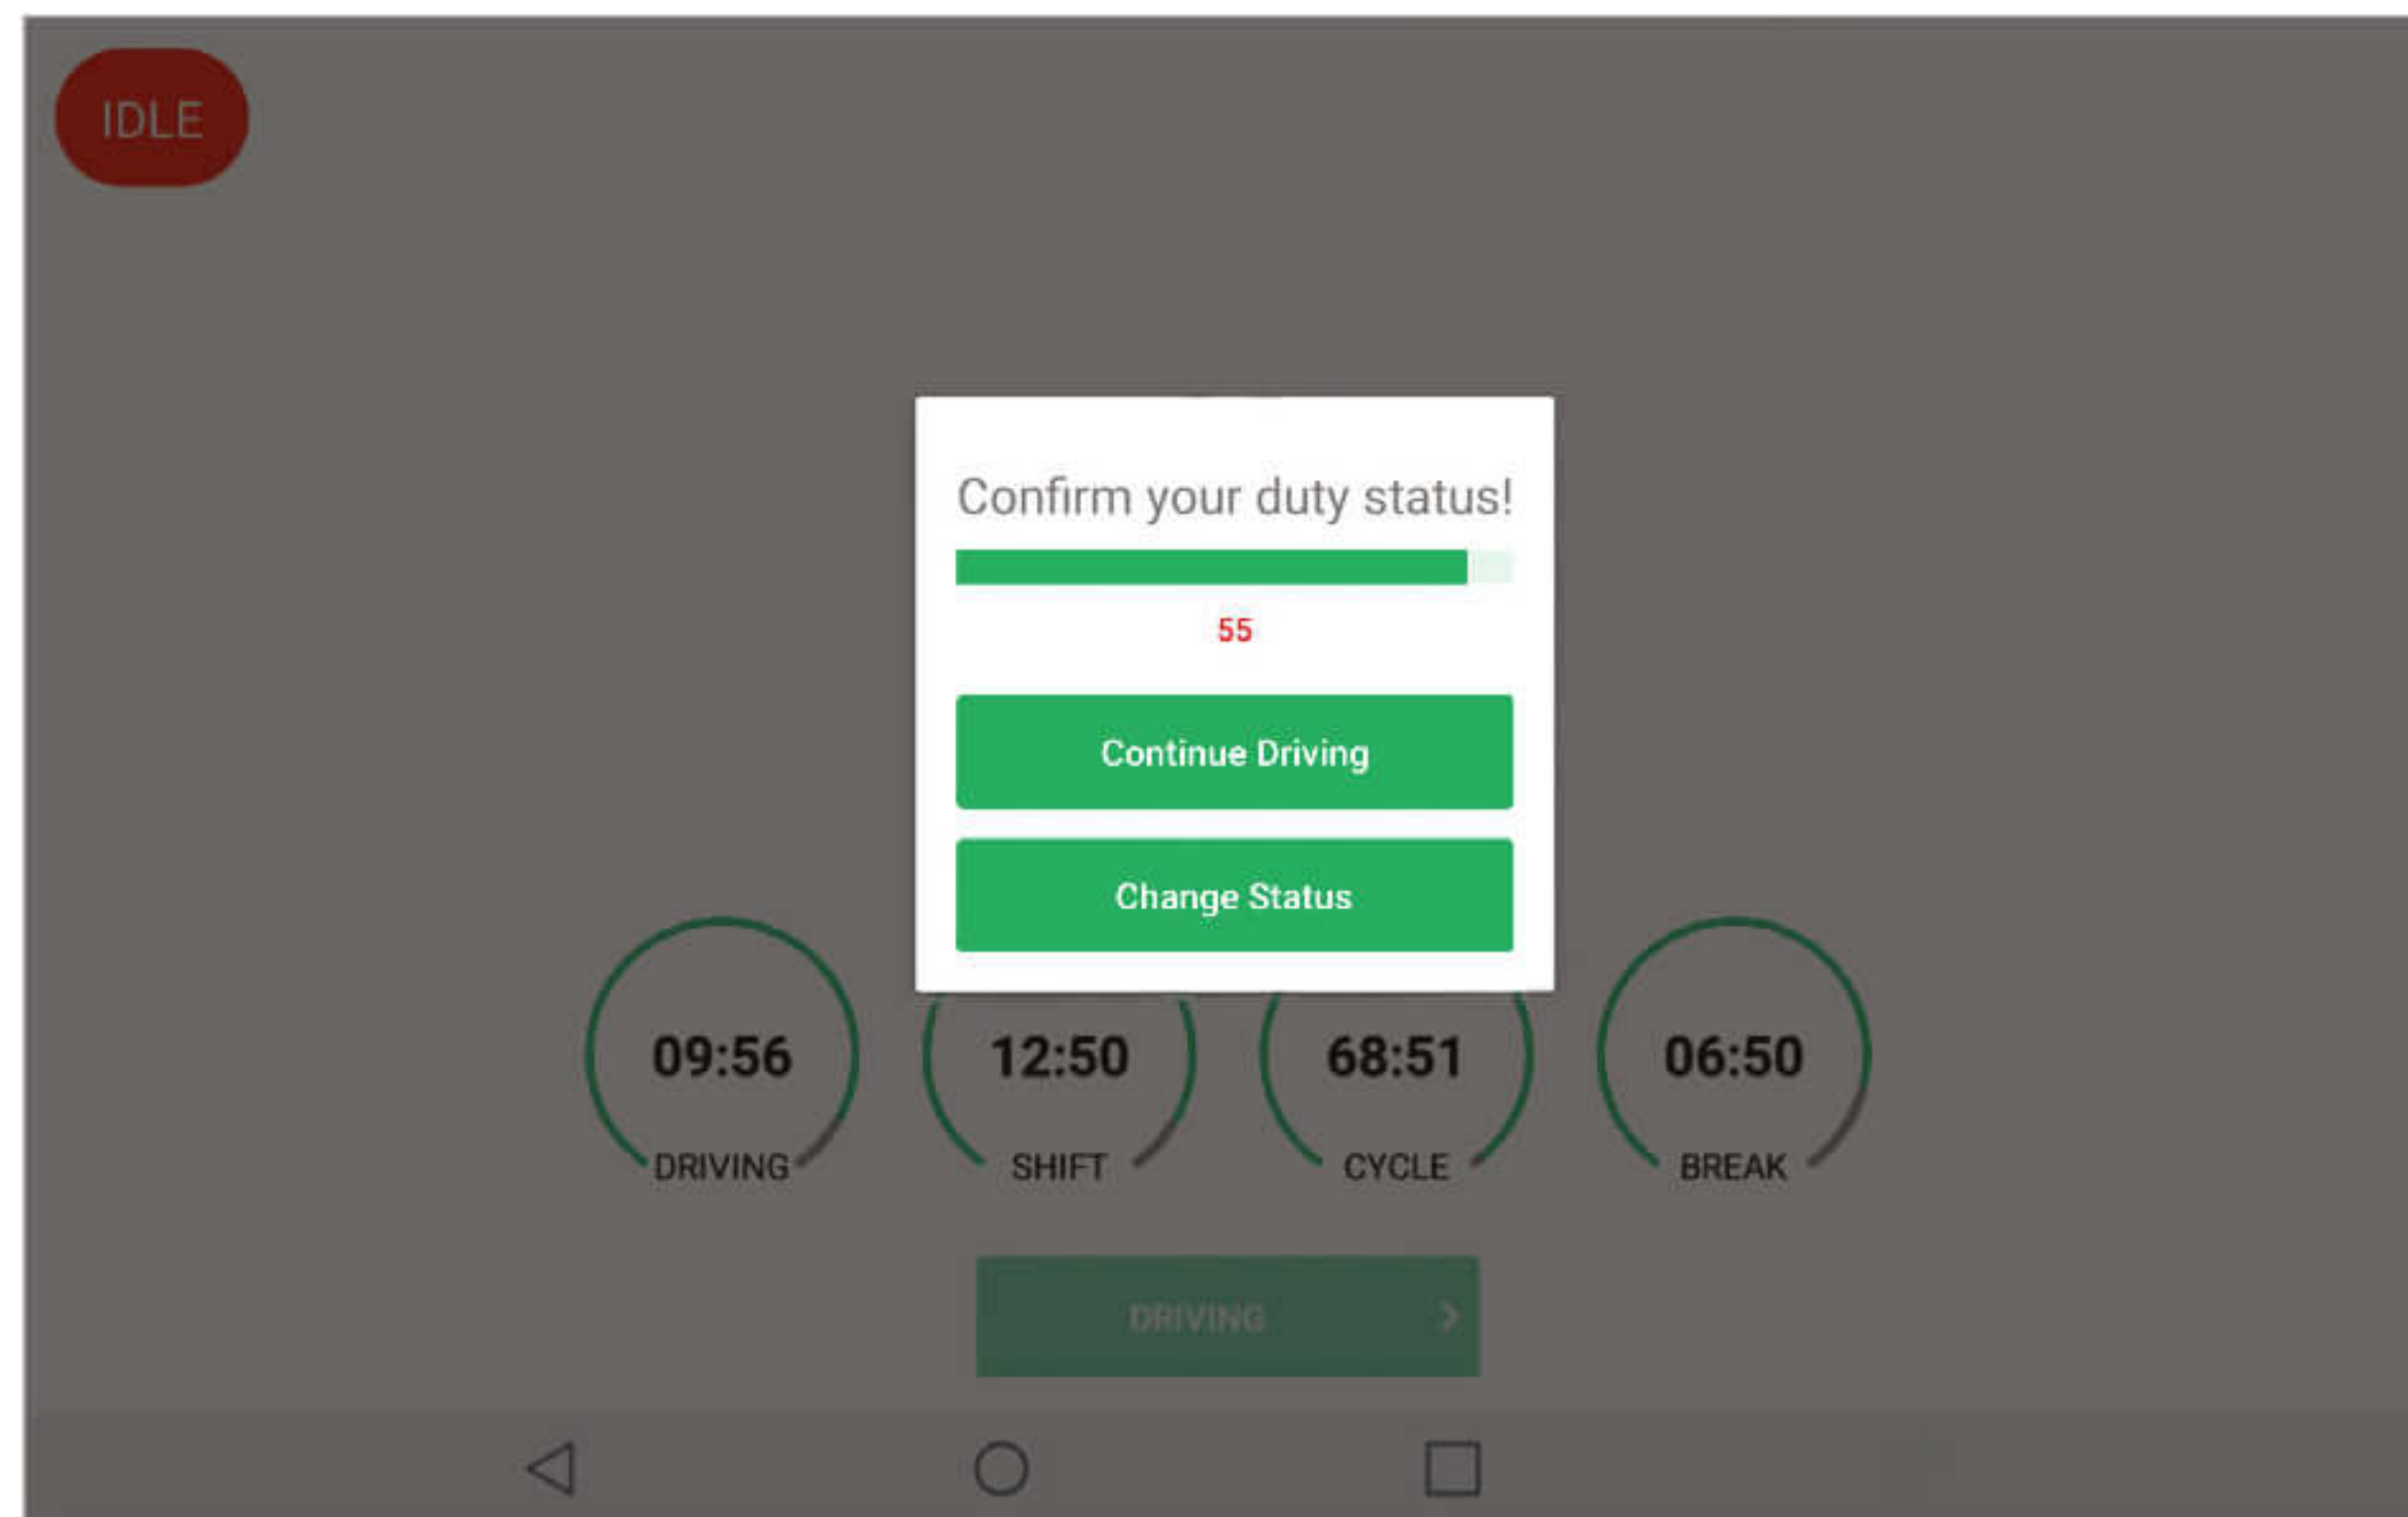

picture 8


When not driving, main window is in the foreground. (picture 9)

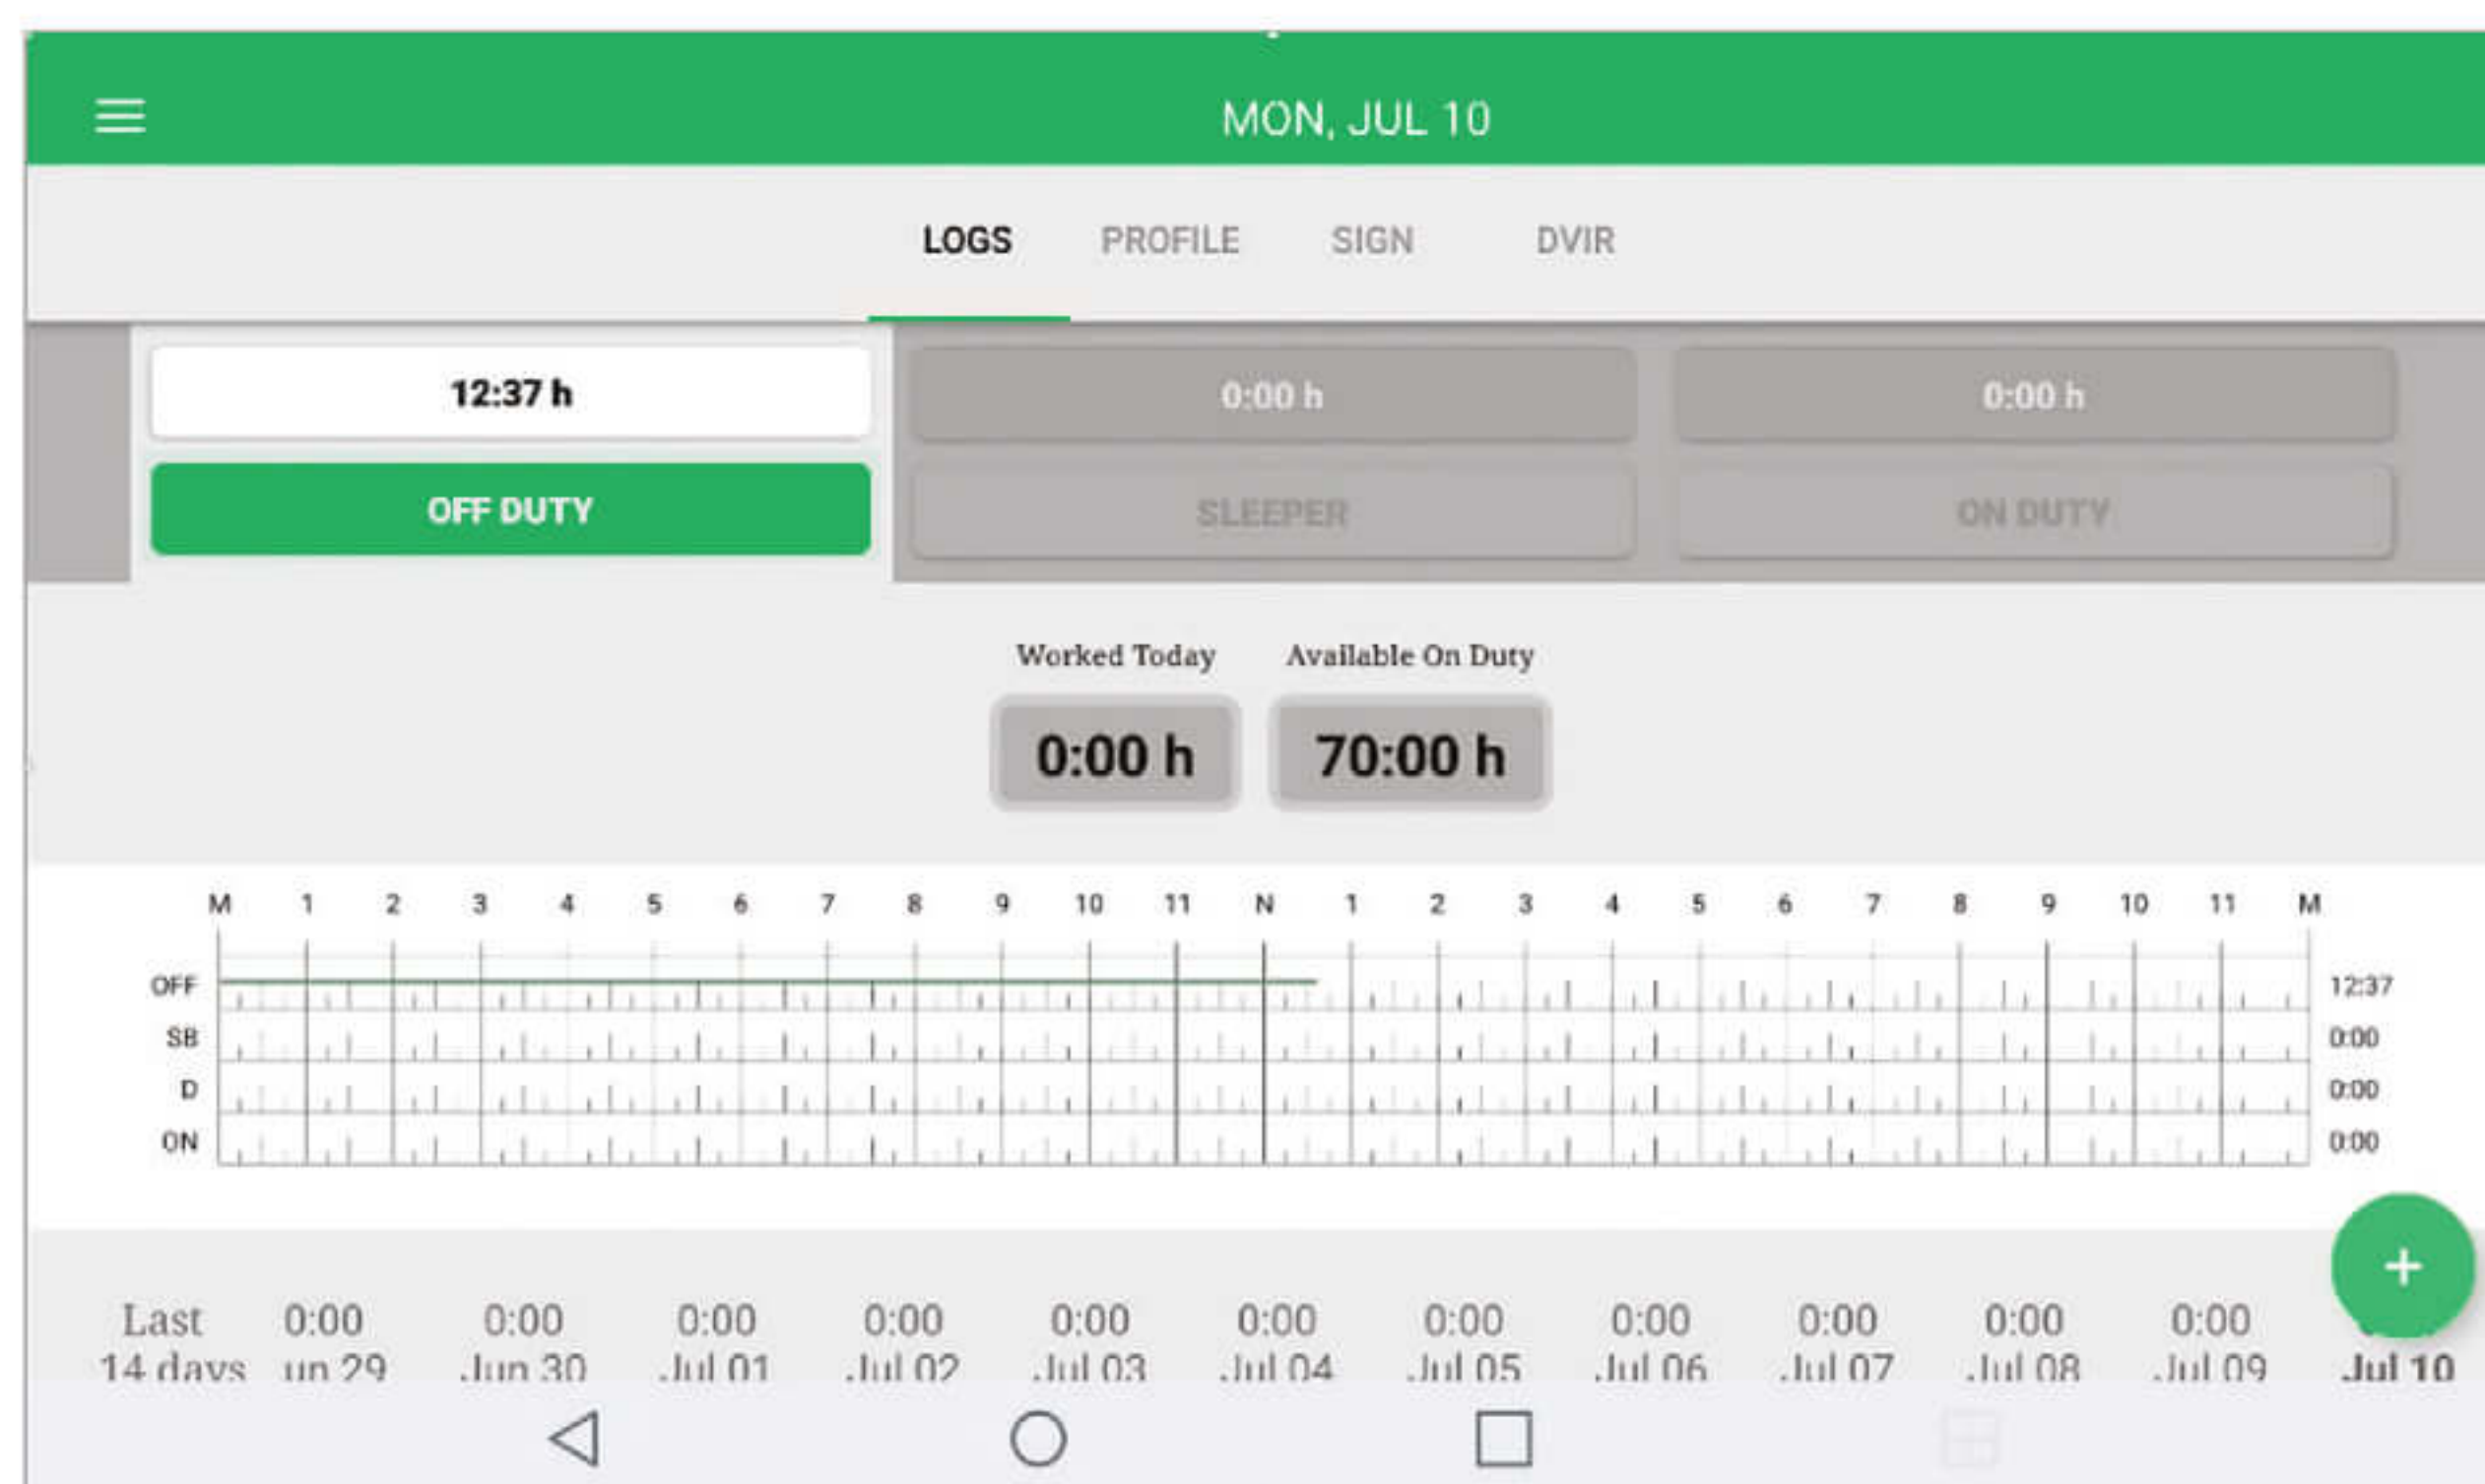

picture 9


Changes in status are made from the main screen.

- a change the status, OFF DUTY, SLEEPING, ON DUTY. (picture 10)

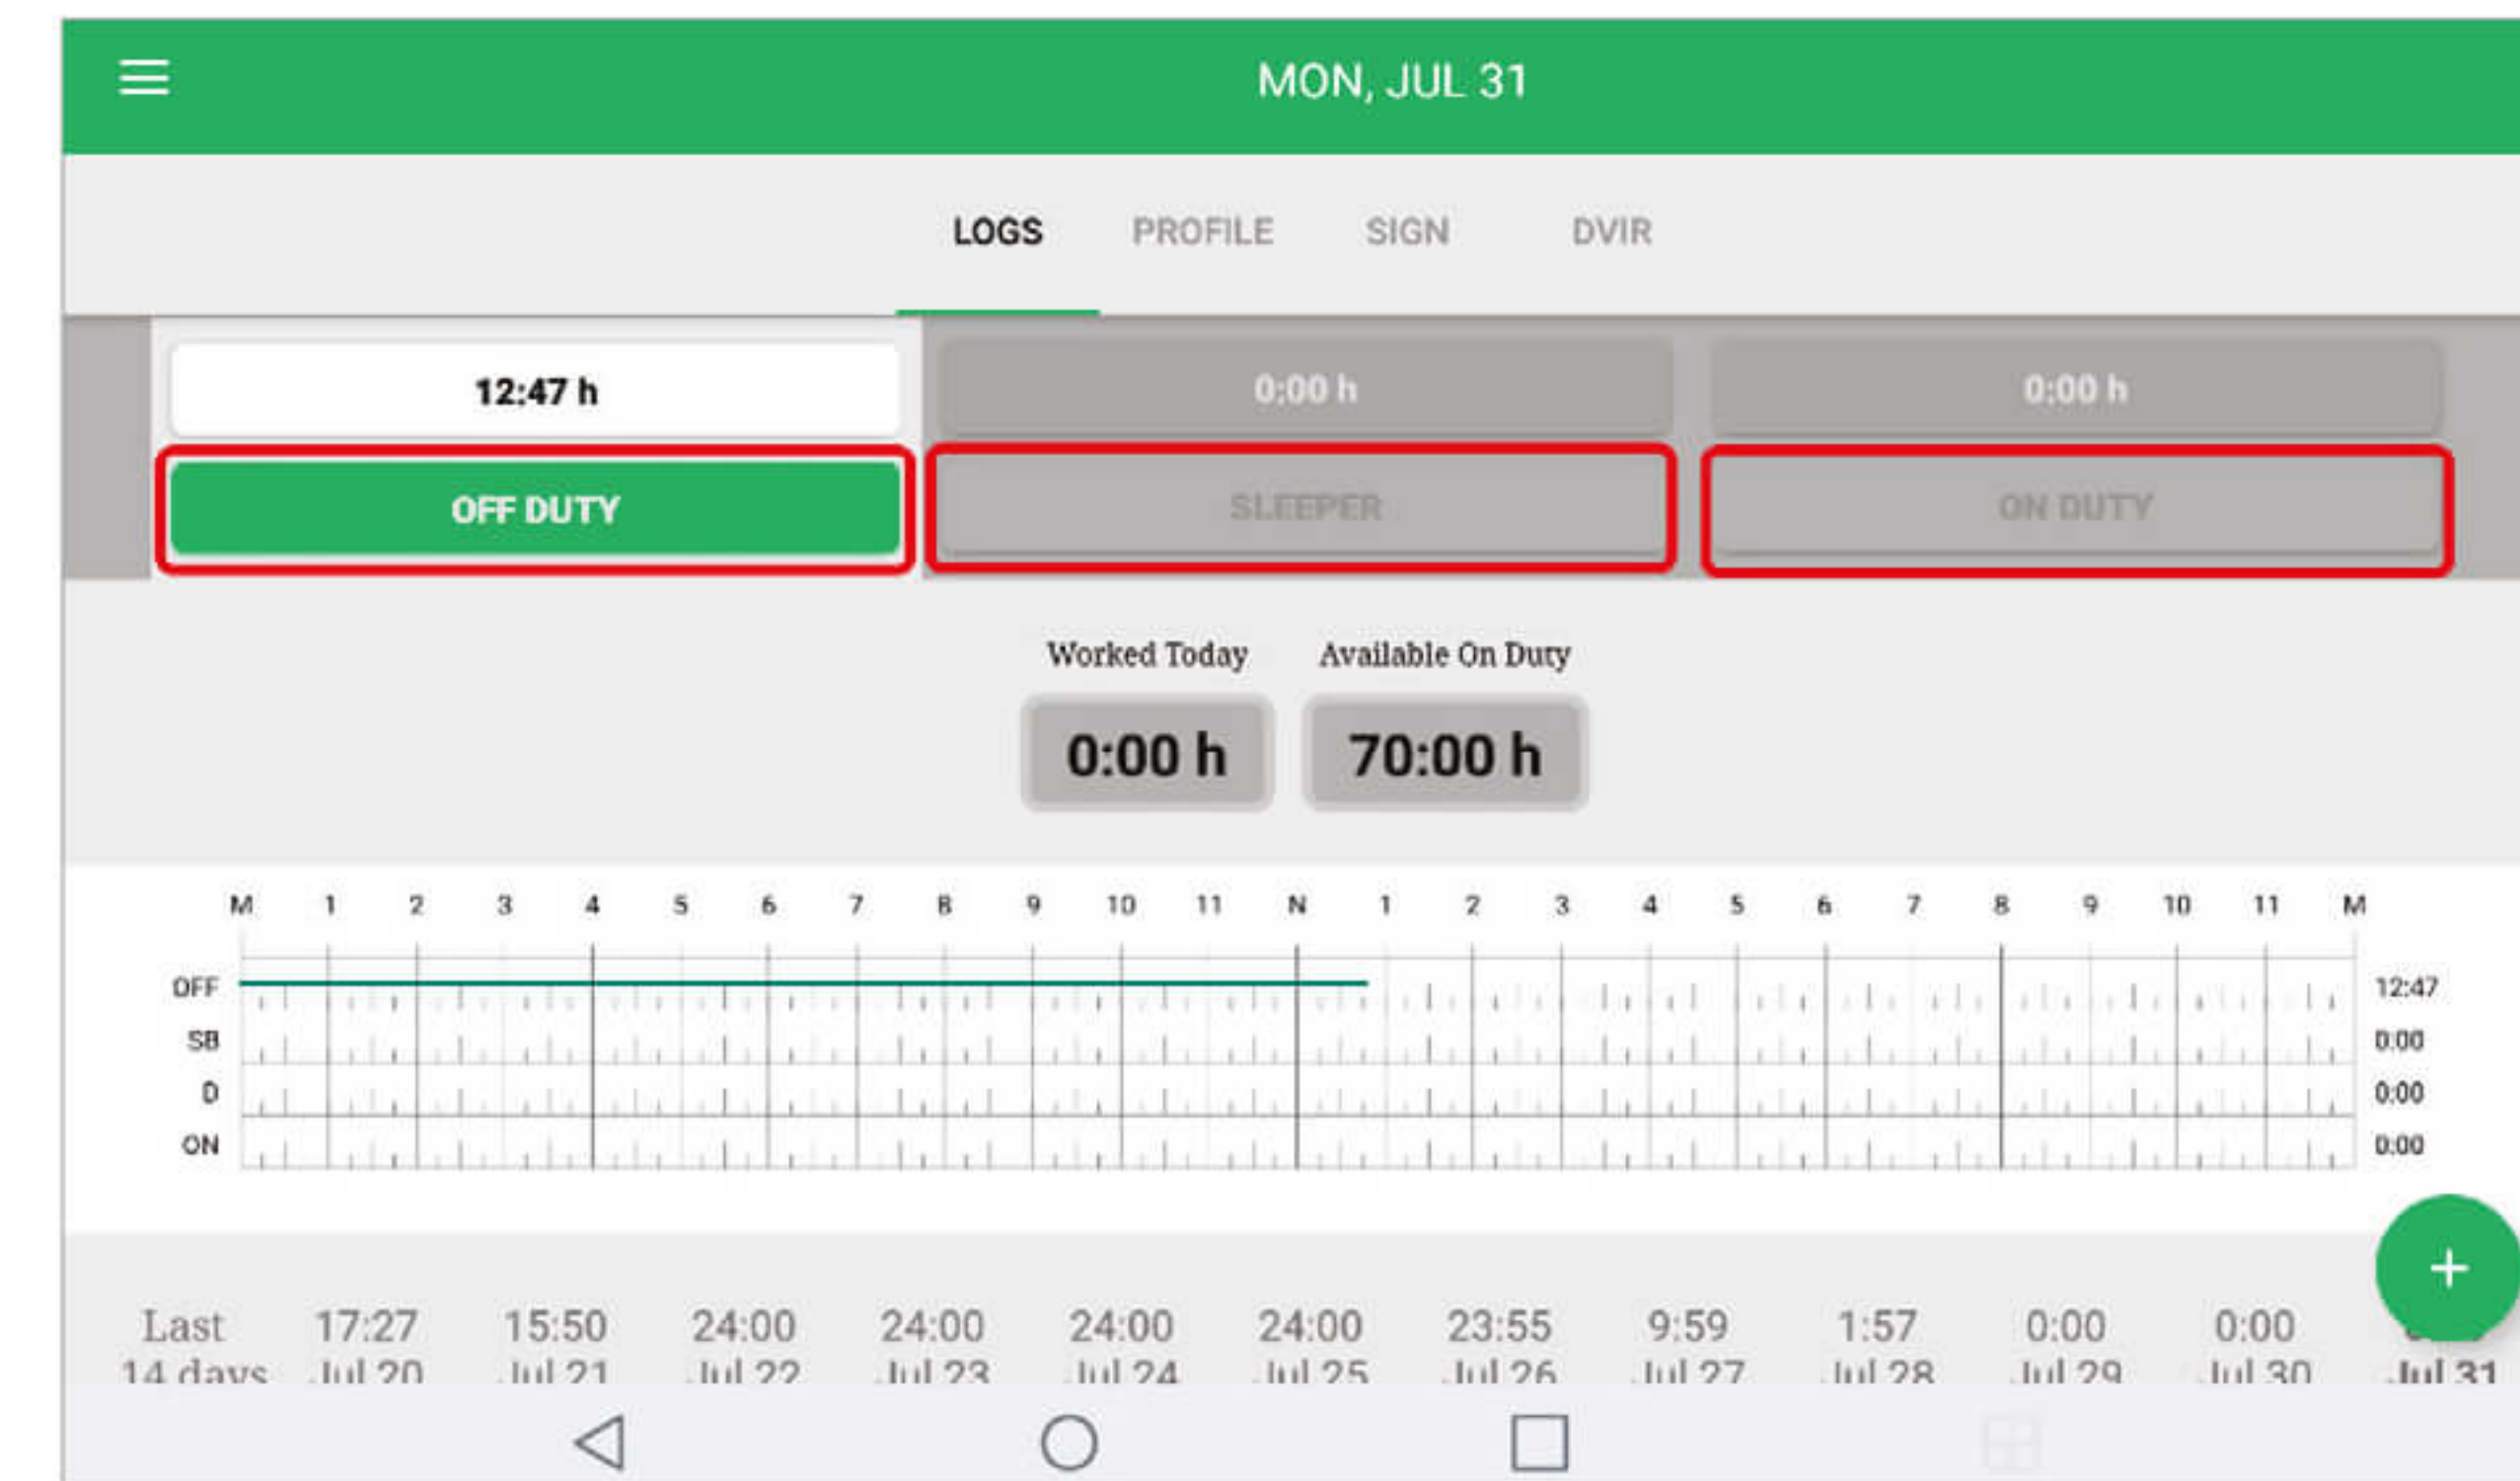

picture 10

Fill out the location field and put remarks, such as "Pre-trip inspection" or "coffee break" (If leave the location field empty, it will be set automatically). (picture 11)

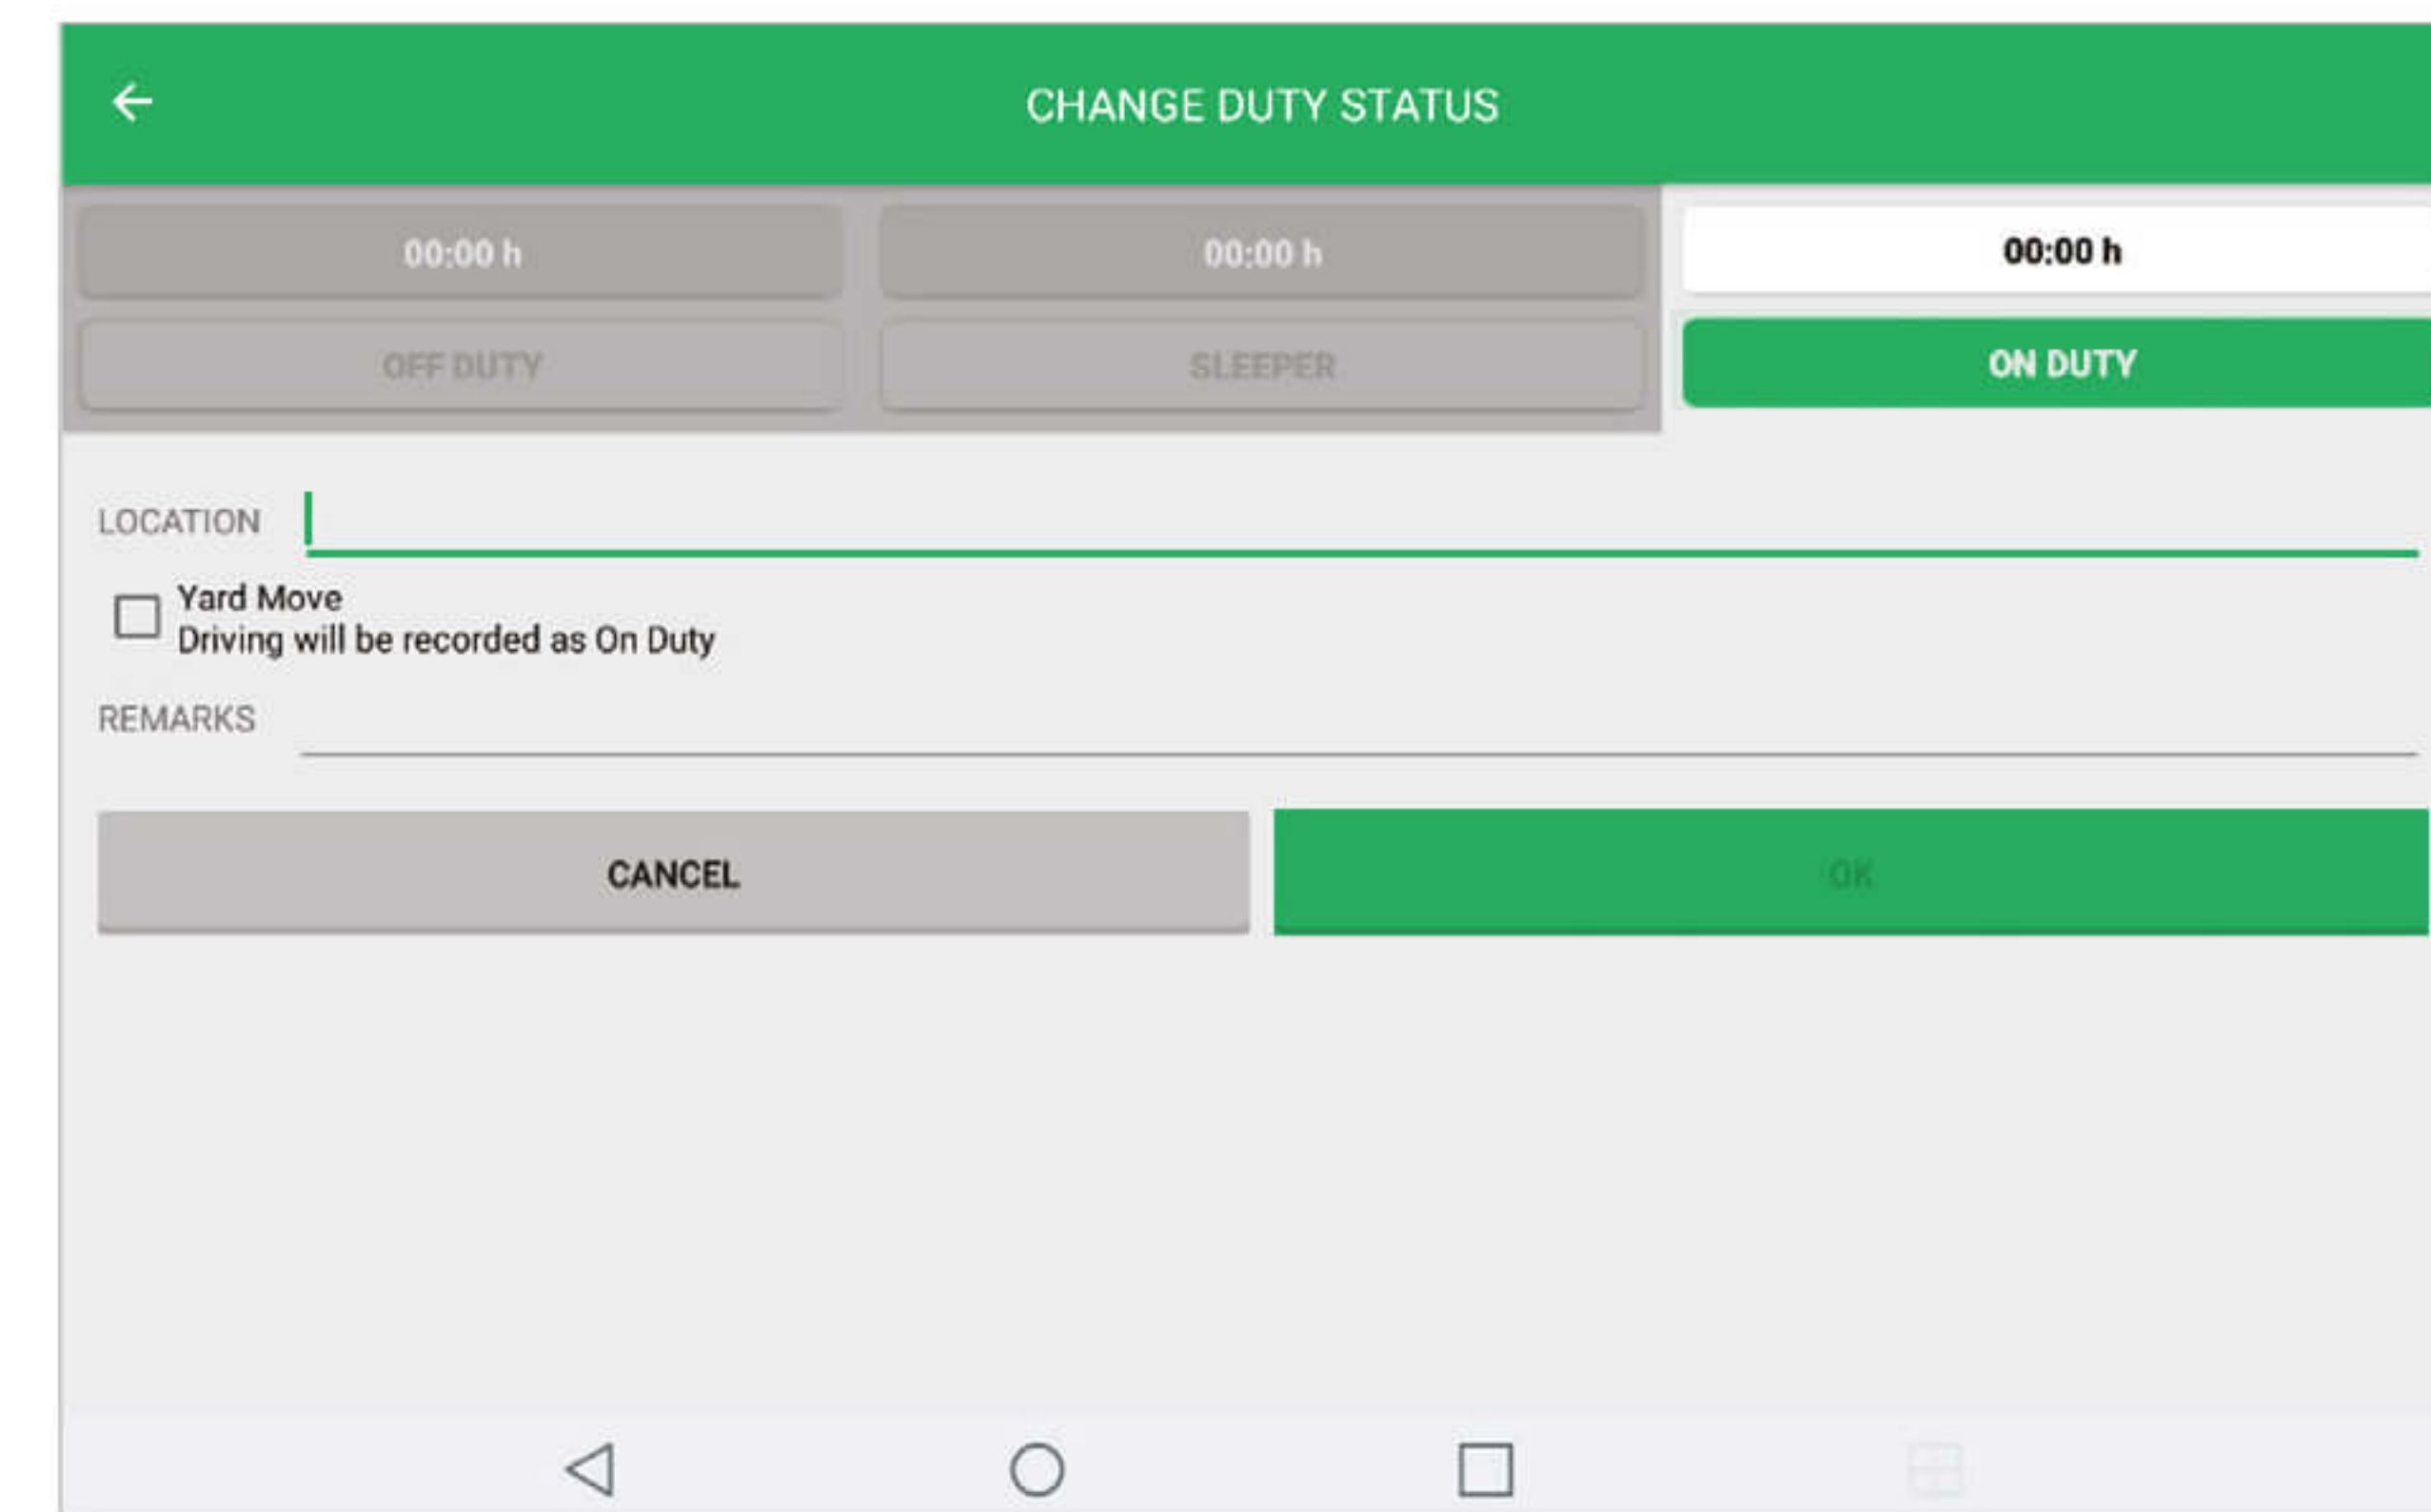


picture 11




# USING REAL ELD ON ROAD (CONTINUED)

If you need to add corrections to your e-log, you can insert missing status by tapping  or edit existing one by tapping  (picture 12)

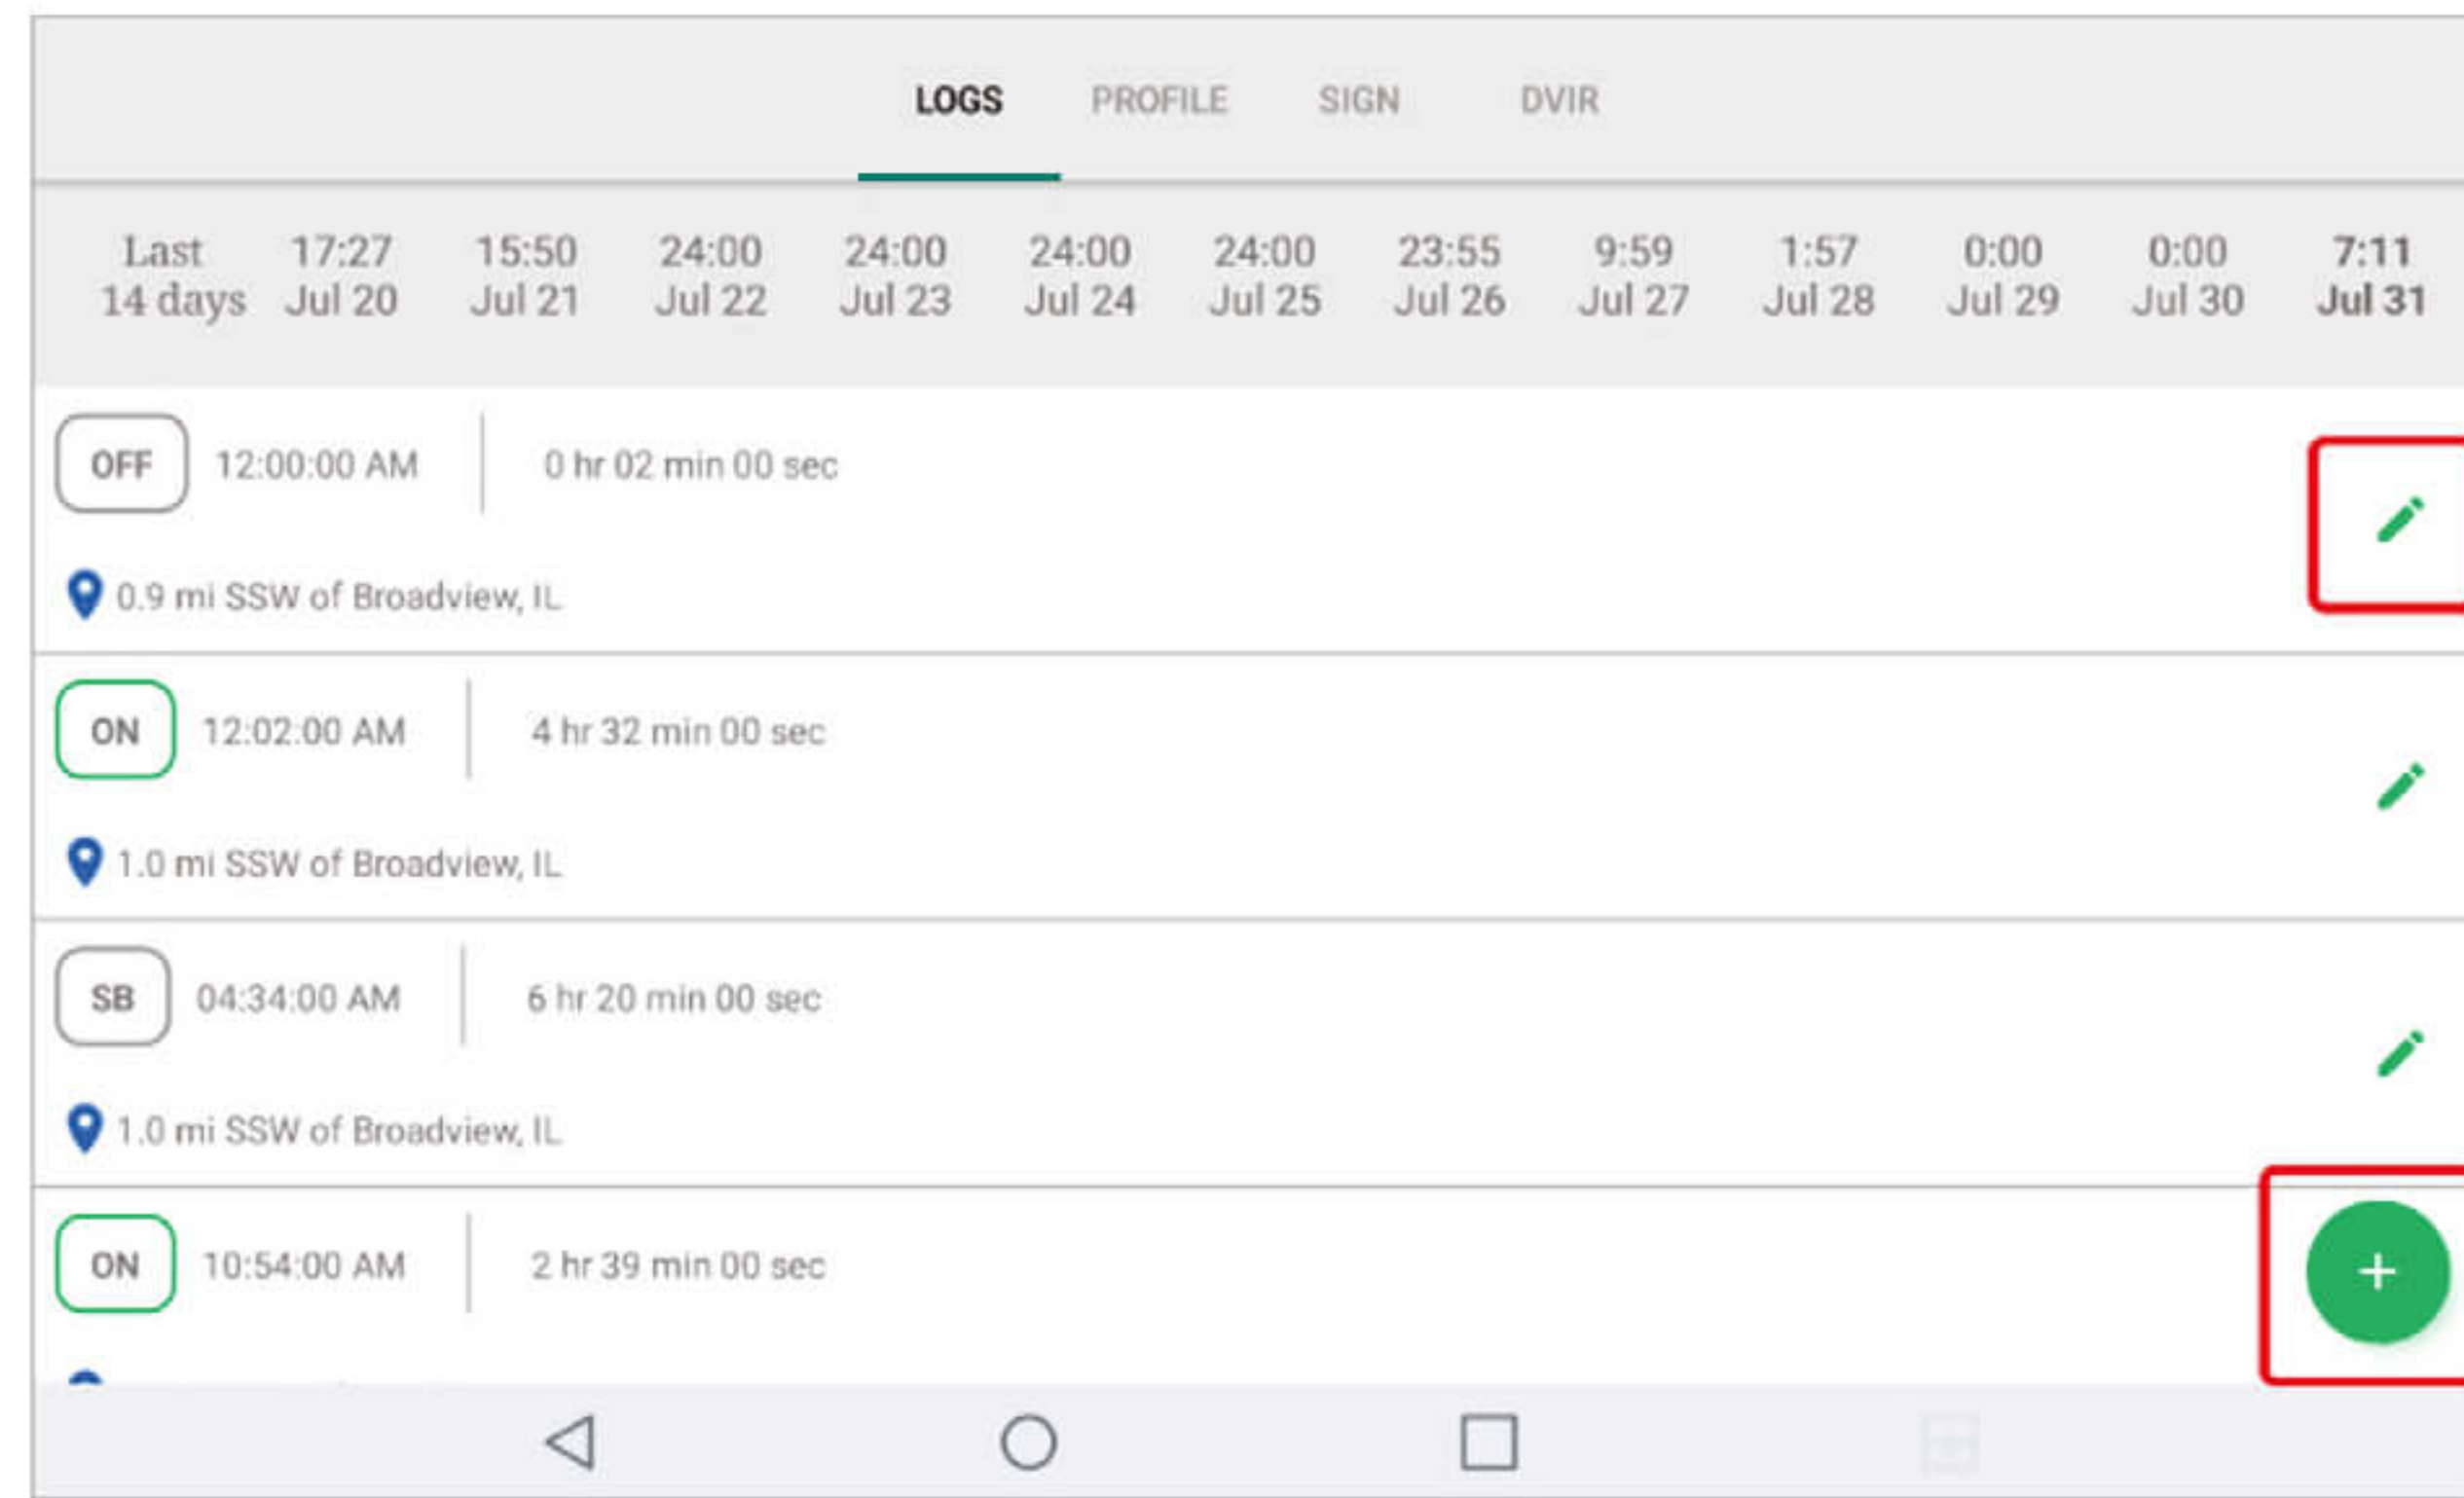


picture 12

You can drag the boarder dots (picture 14), or set the time using the popup window. (picture 15)

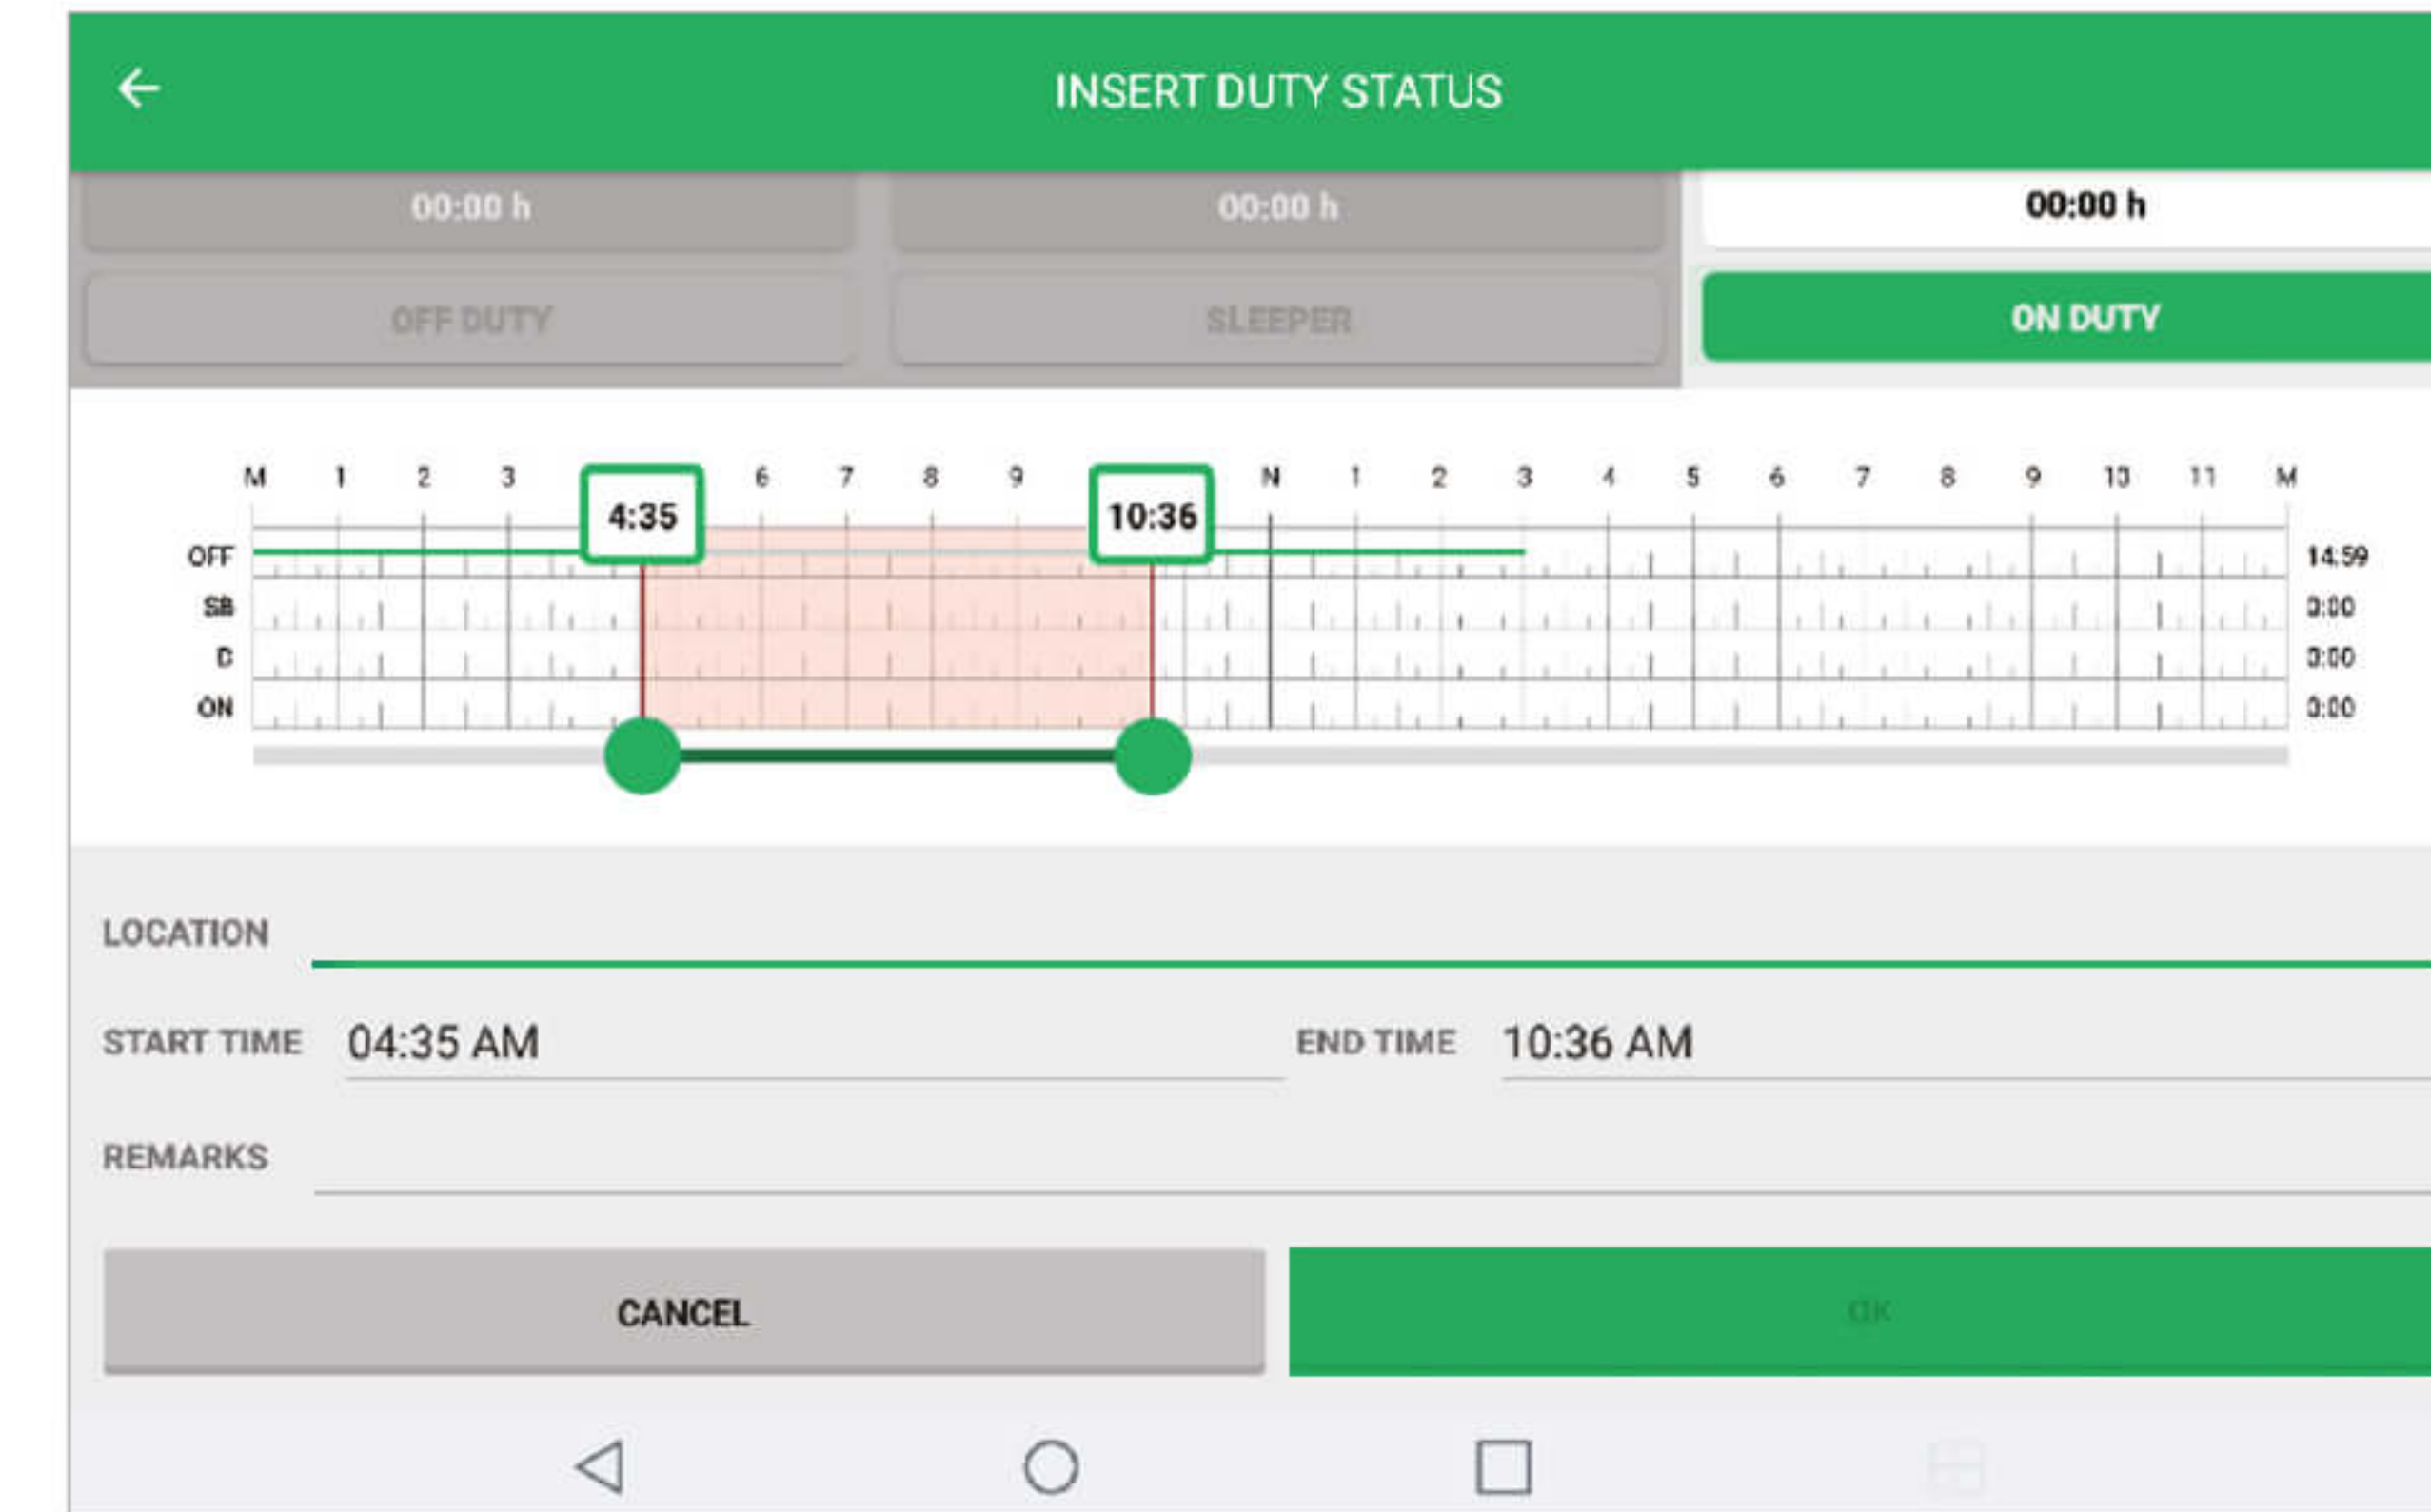


picture 14

Choose the status you want to change to and set the time frame. (picture 13)

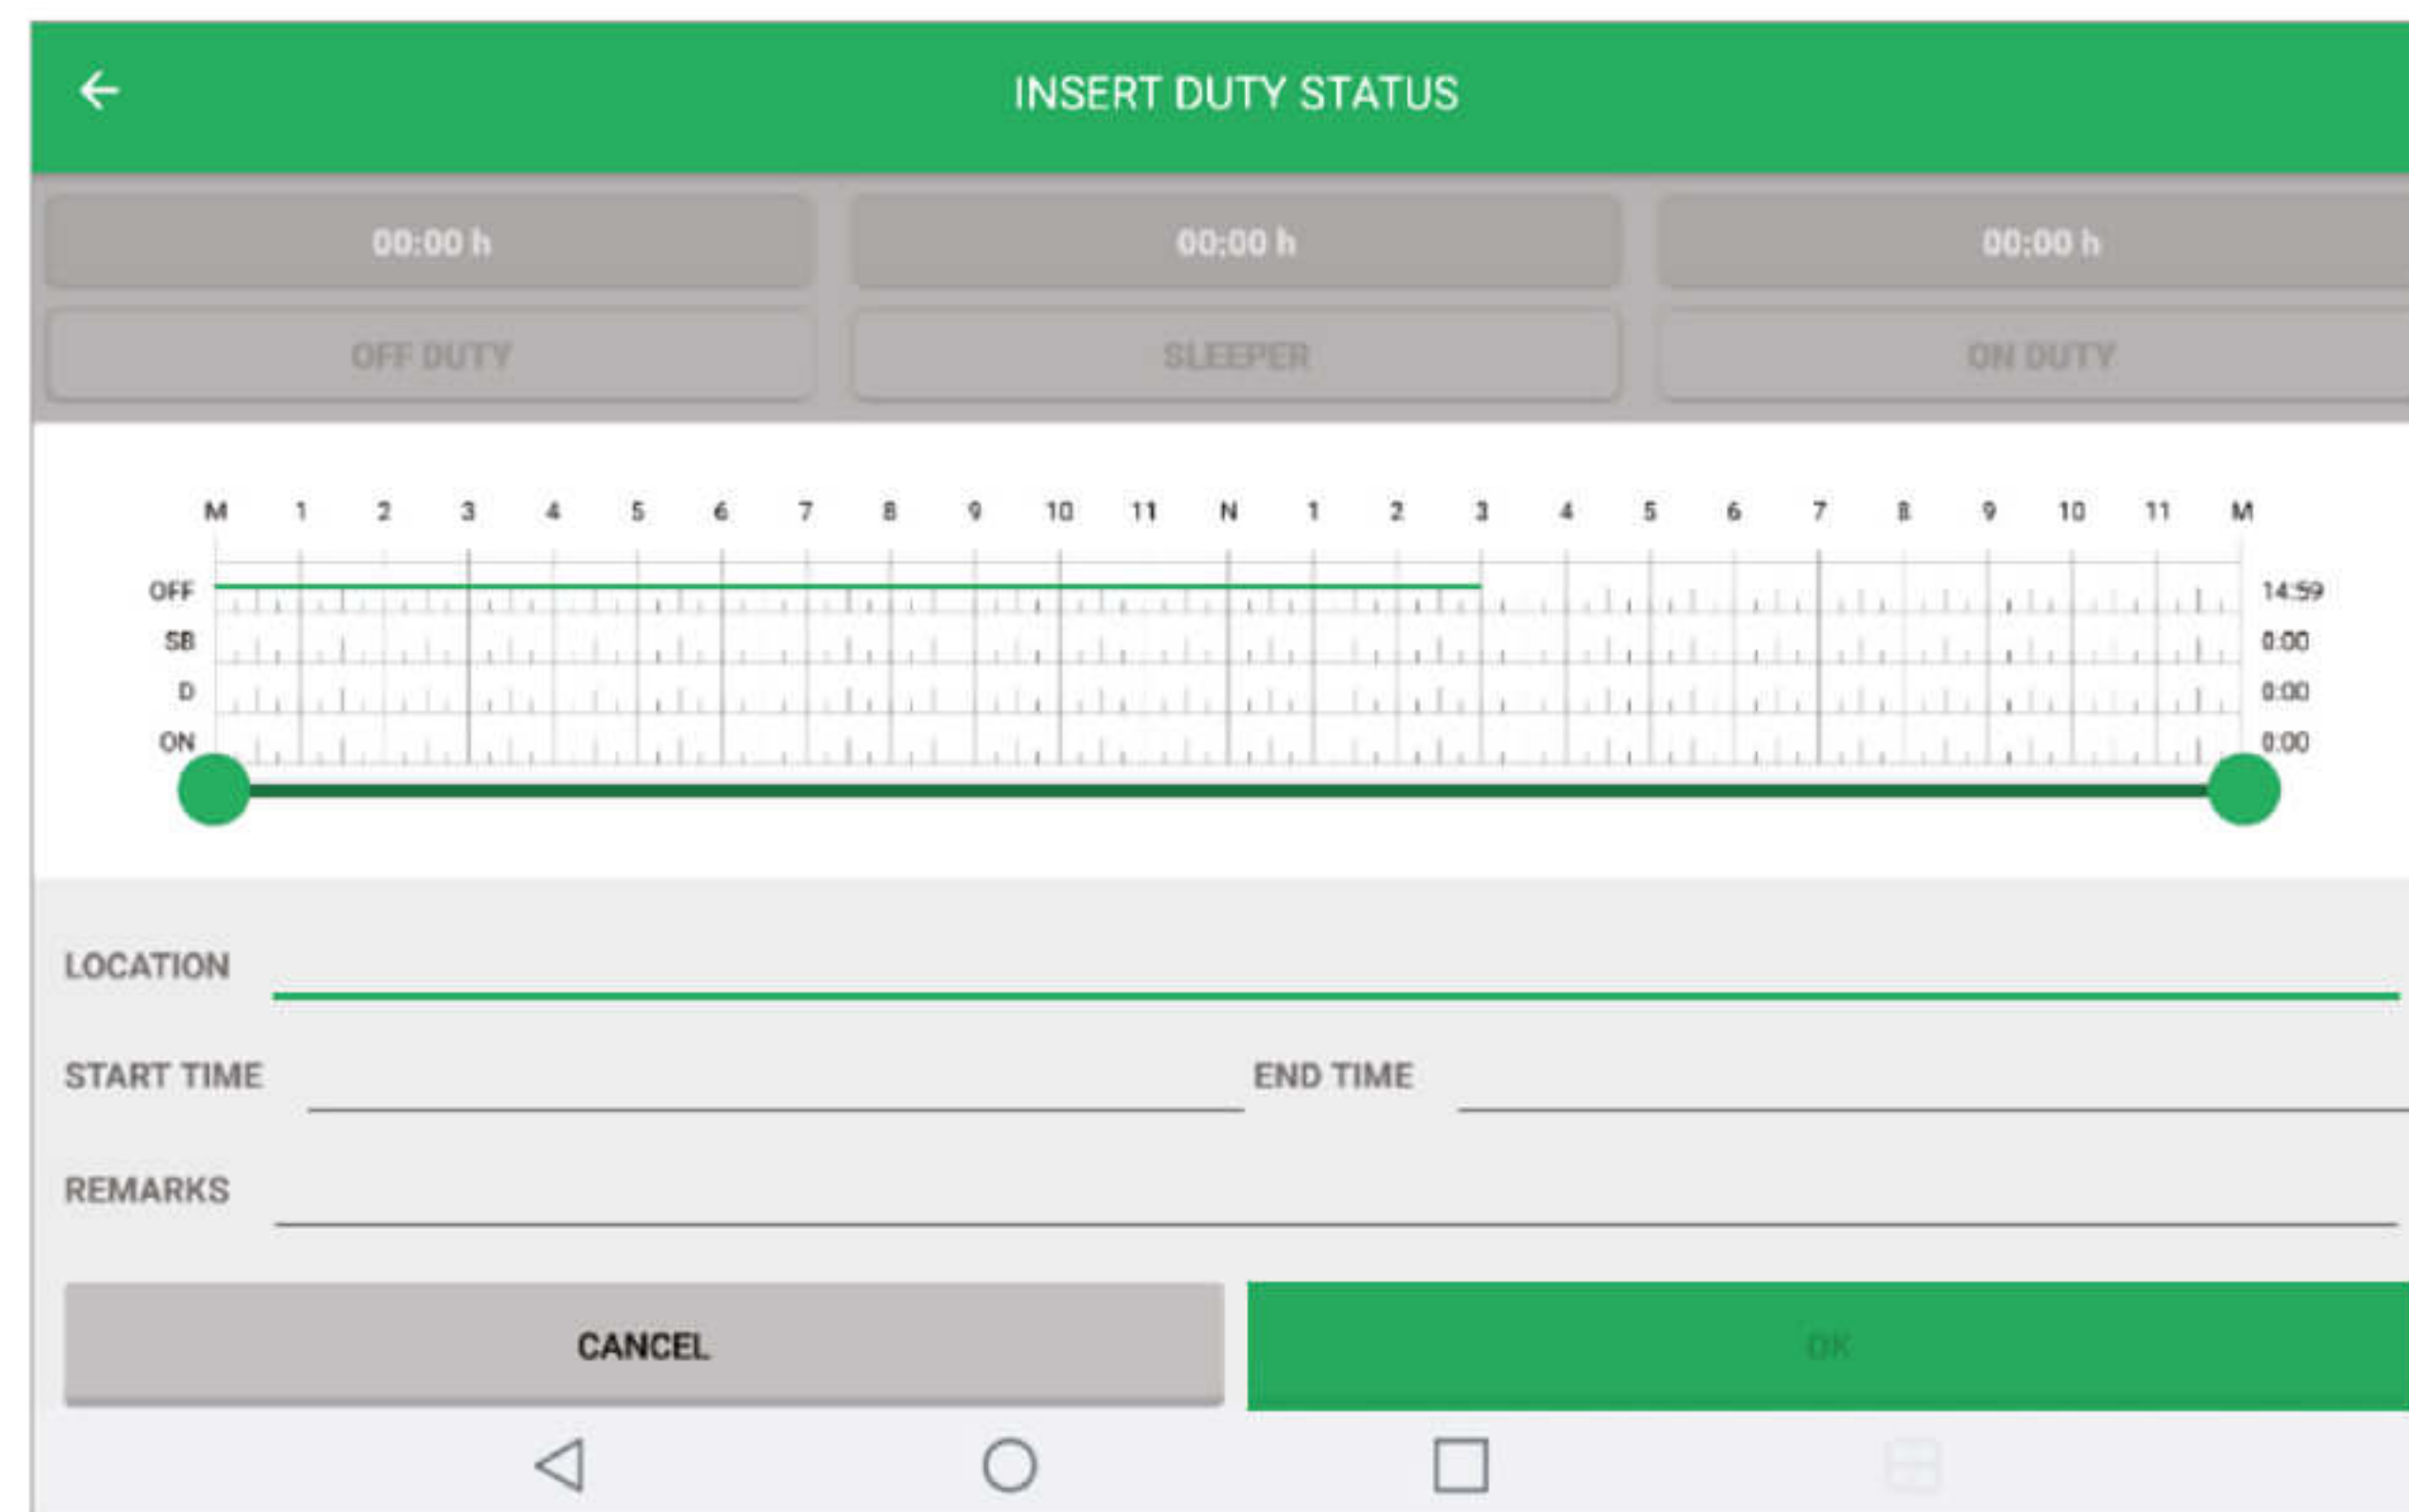

picture 13

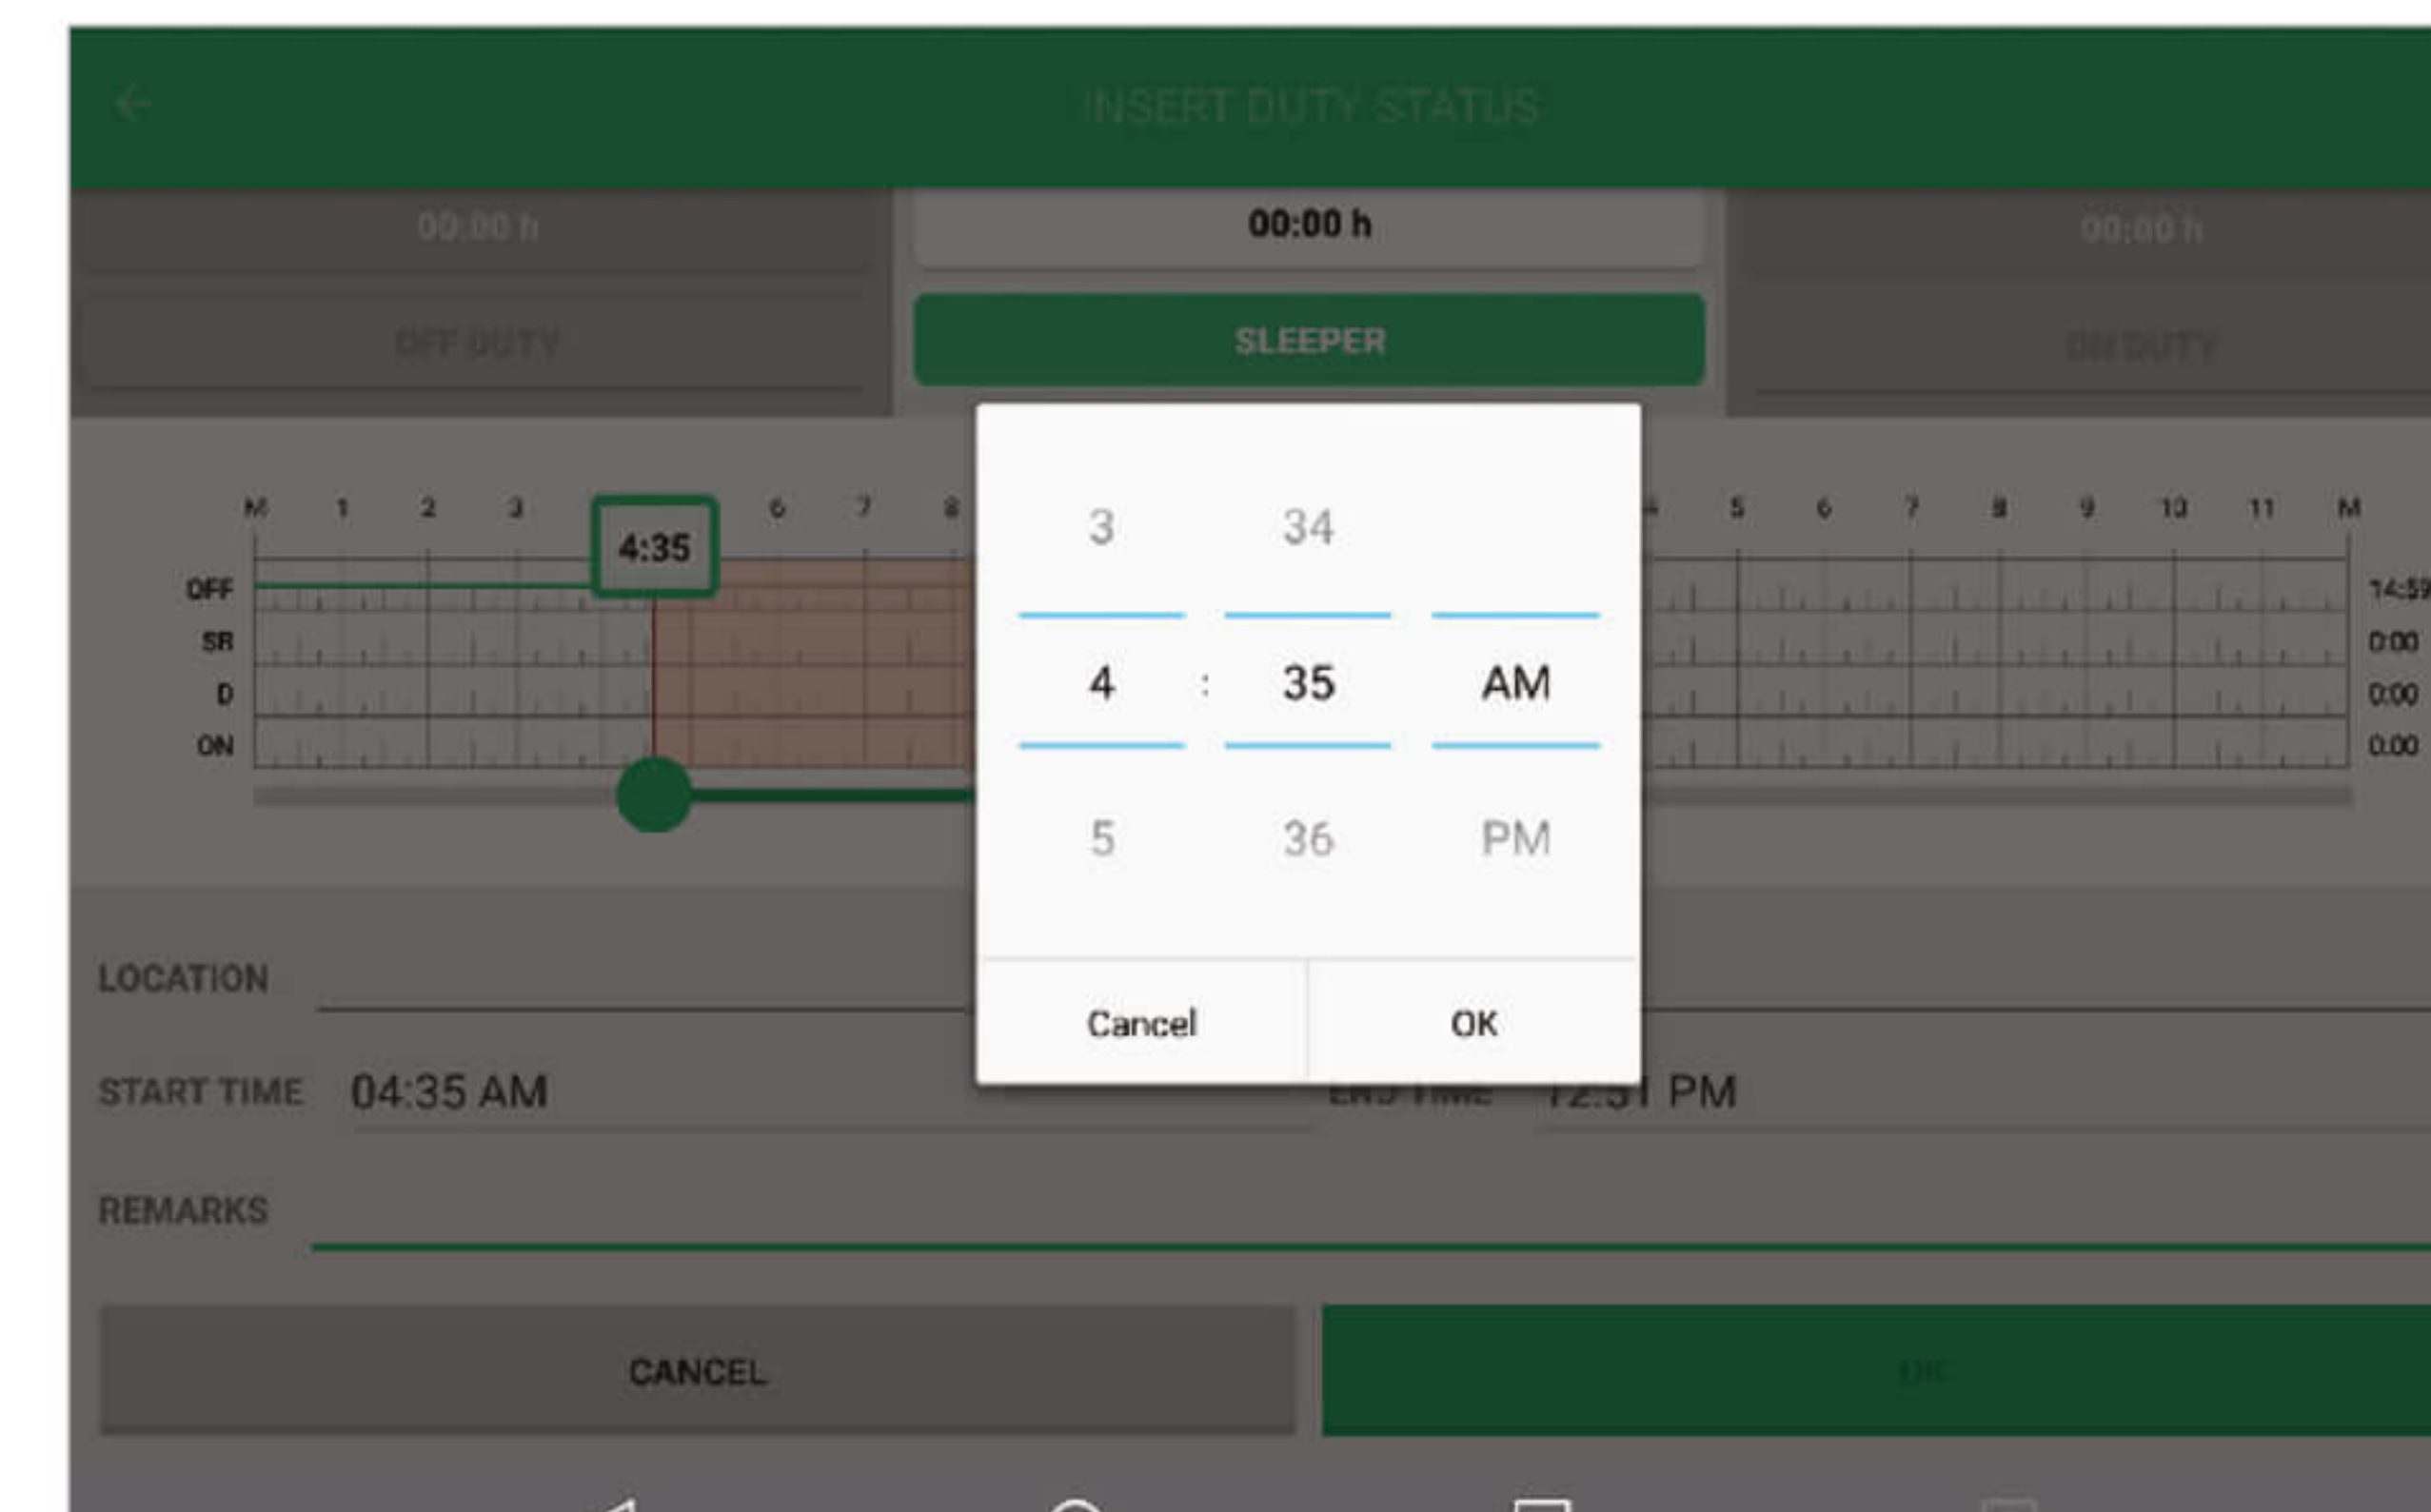


picture 15



**a** check your profile, (picture 16)

**b** sign your e-log, (picture 17)

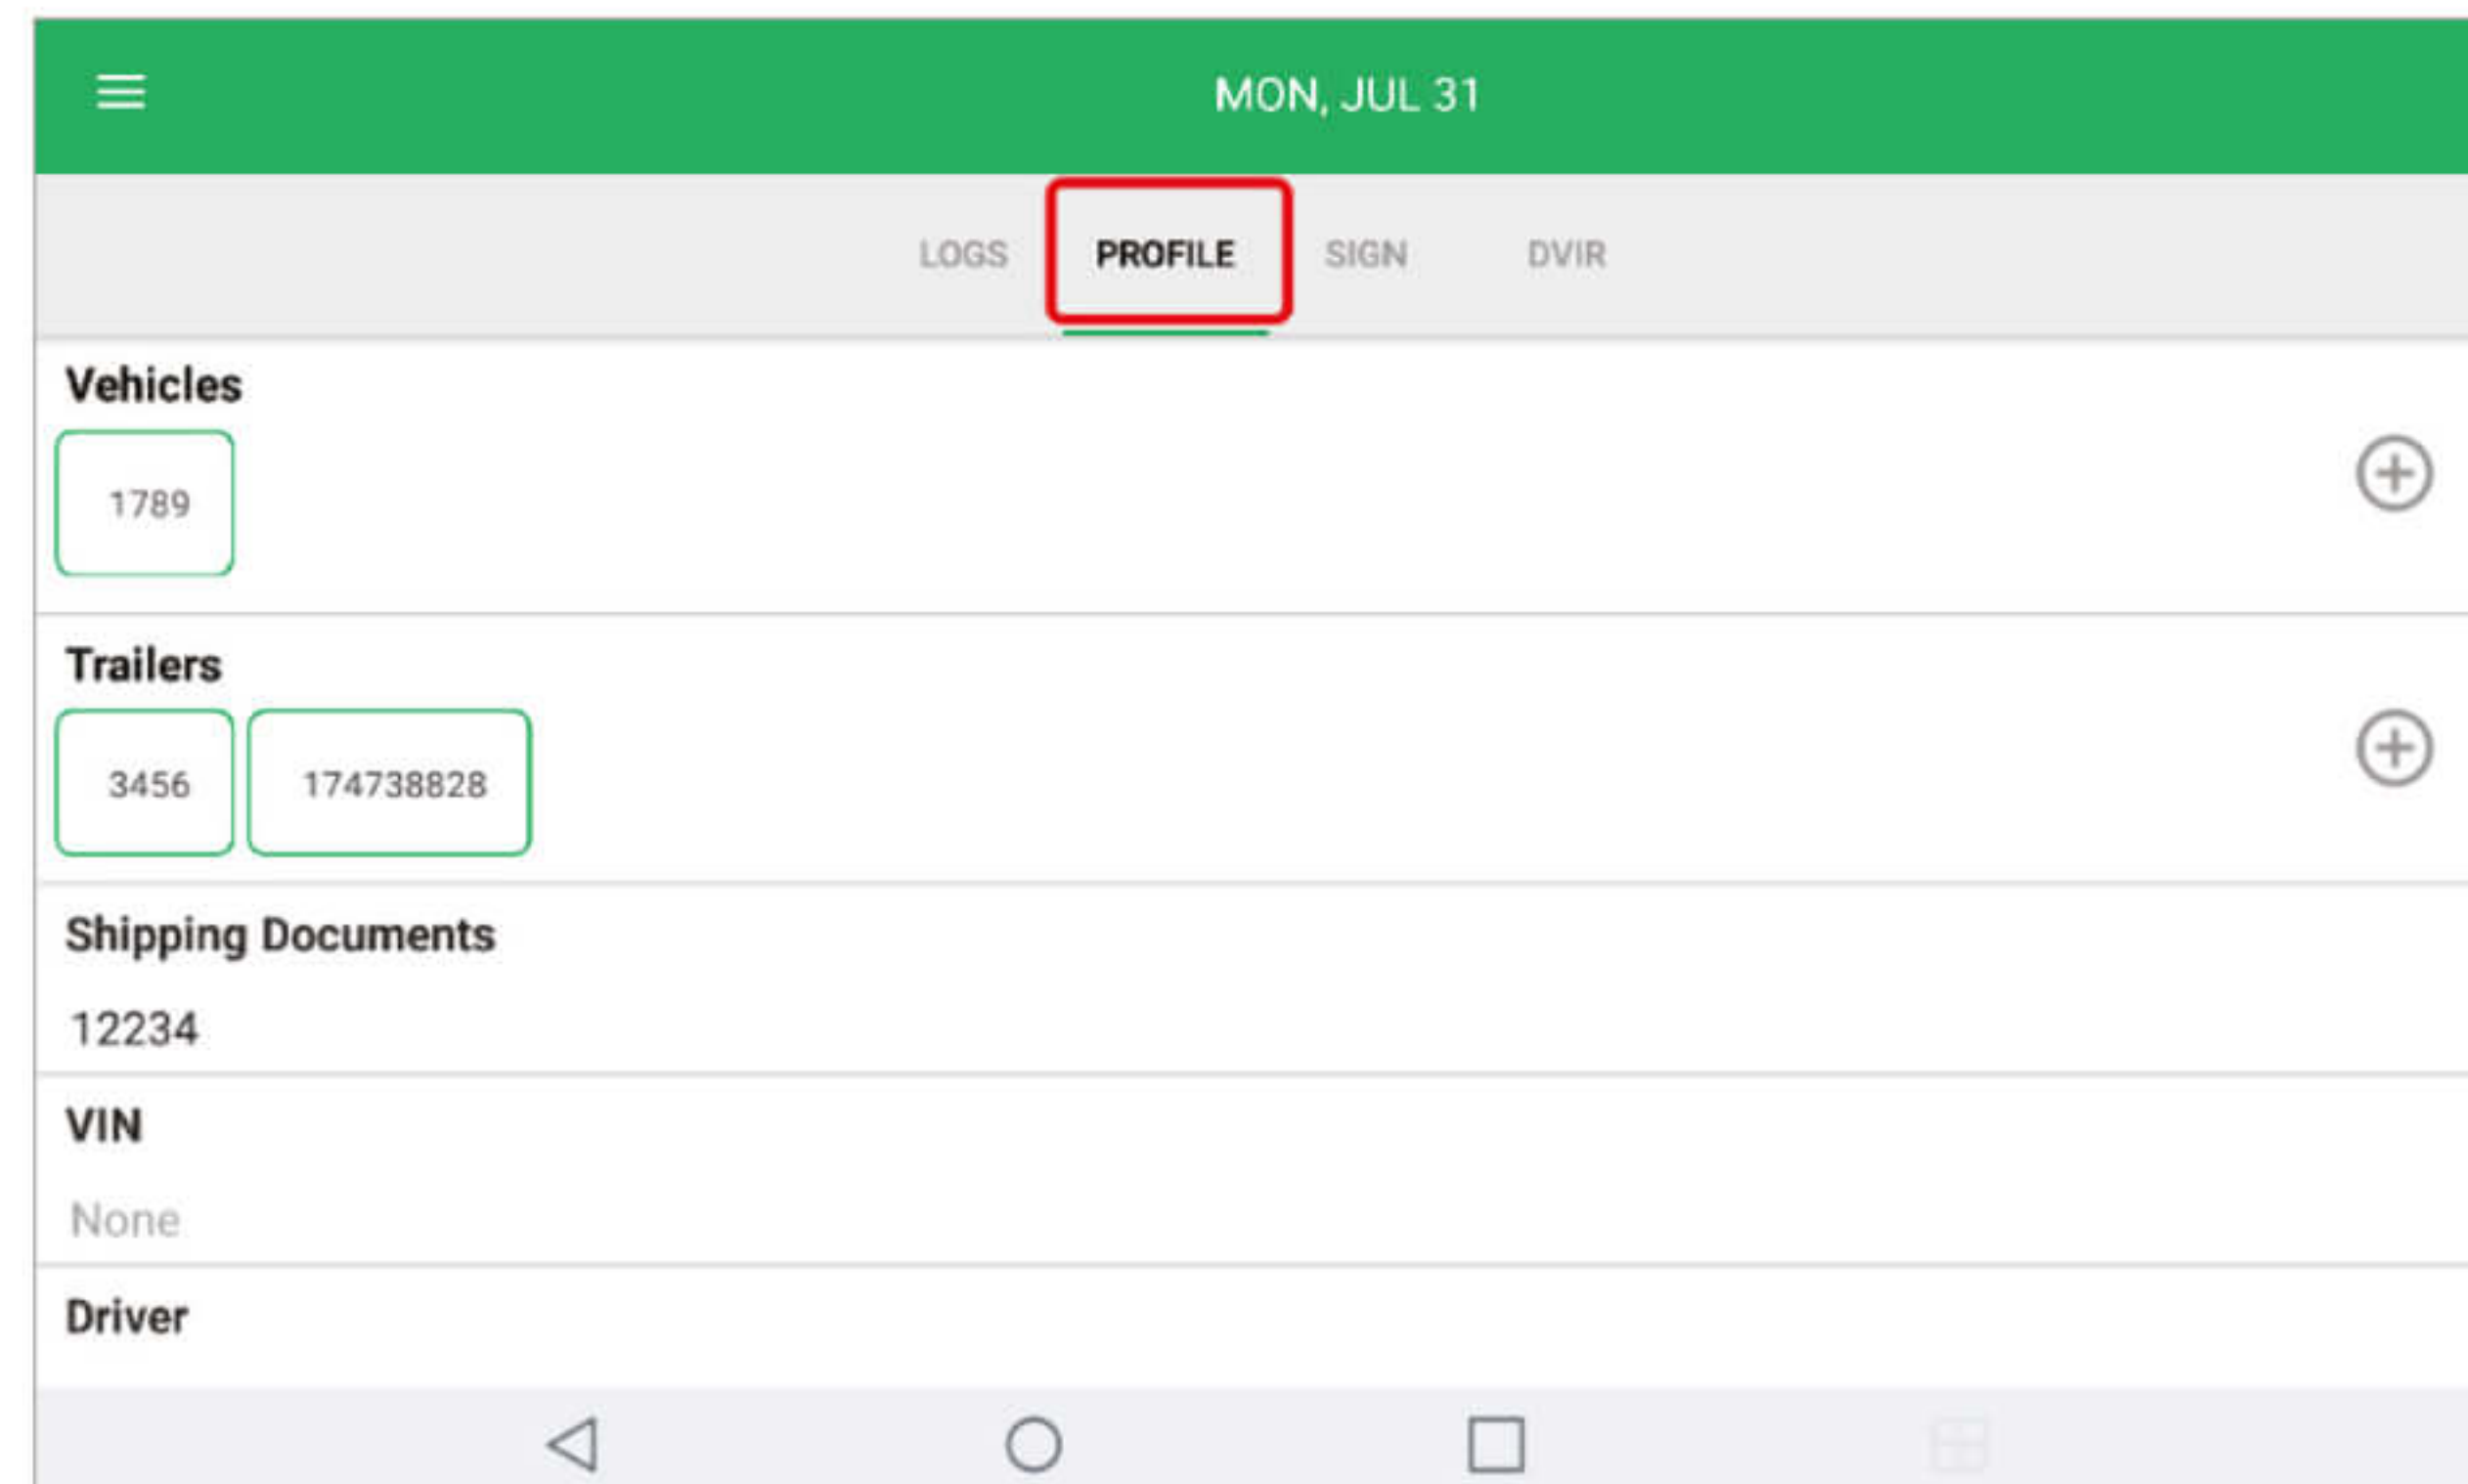


picture 16



picture 17

**c** make a DVIR inspection (picture 18)

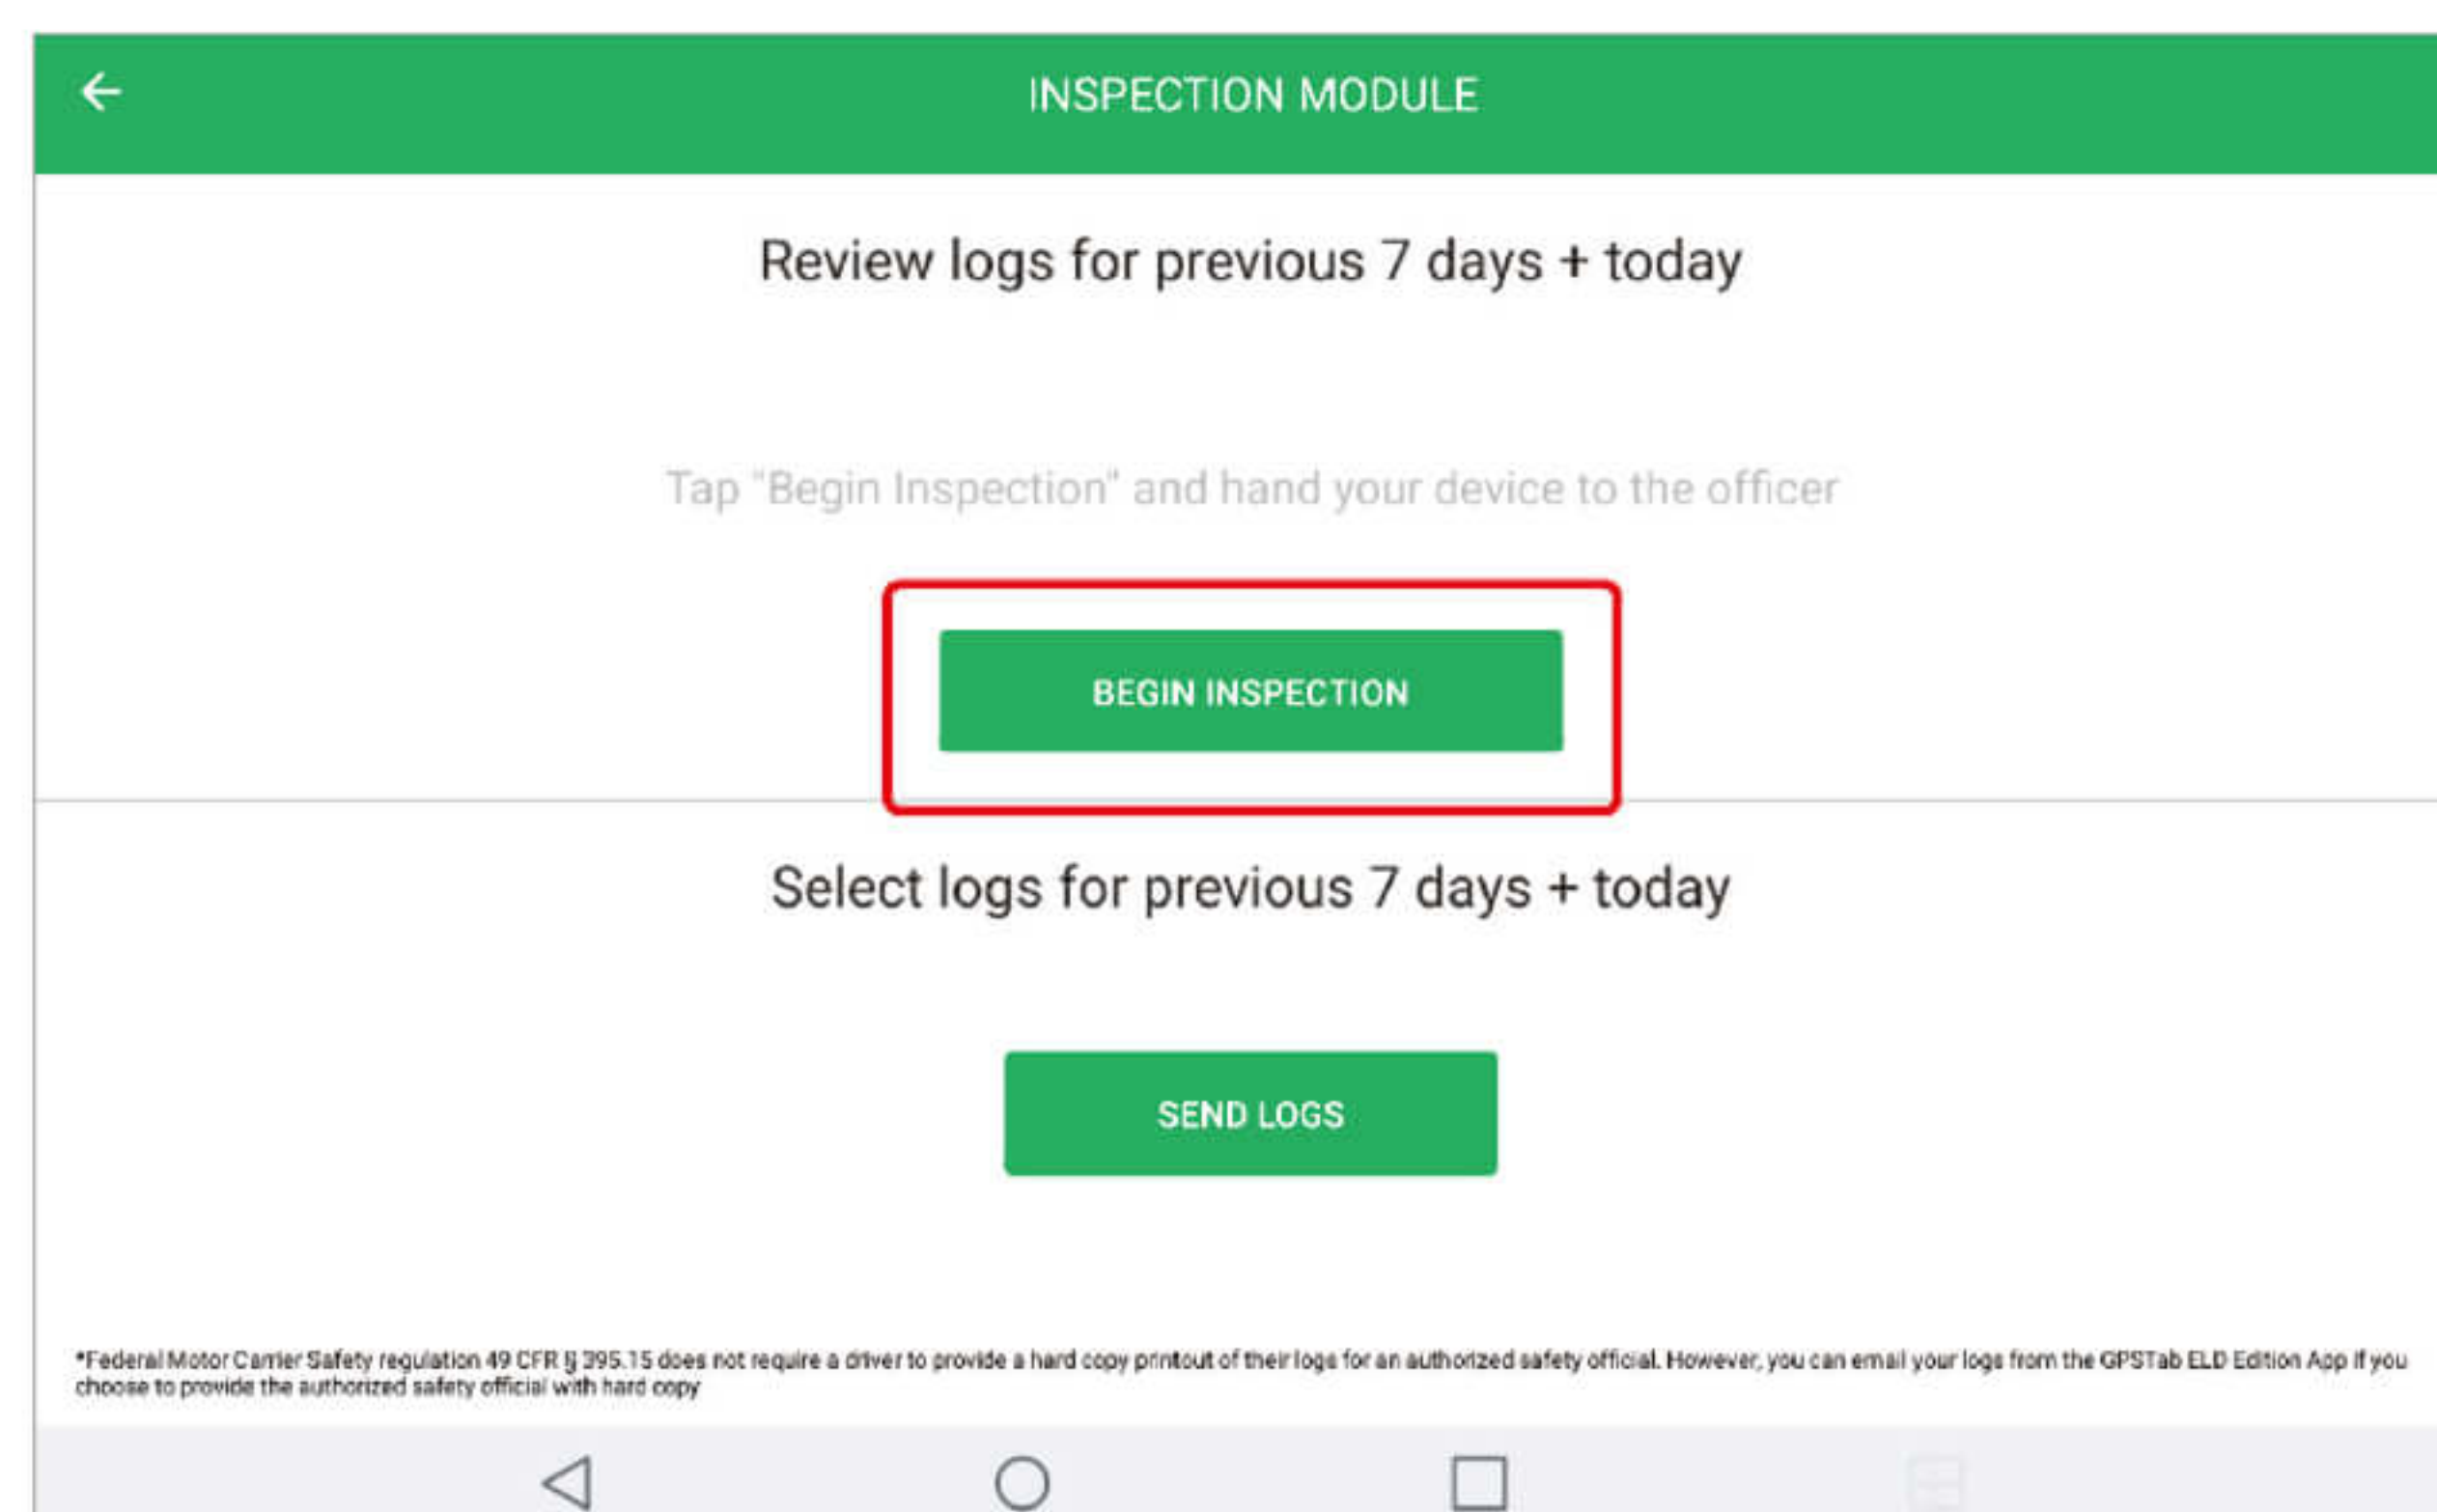


picture 18

# OFFICER INSPECTION


It's easy to provide an officer with your driving log information.

**1** Tap menu icon on the top left corner, or swipe from left side of your device to the right side and Select "Inspection Module". (picture 19)

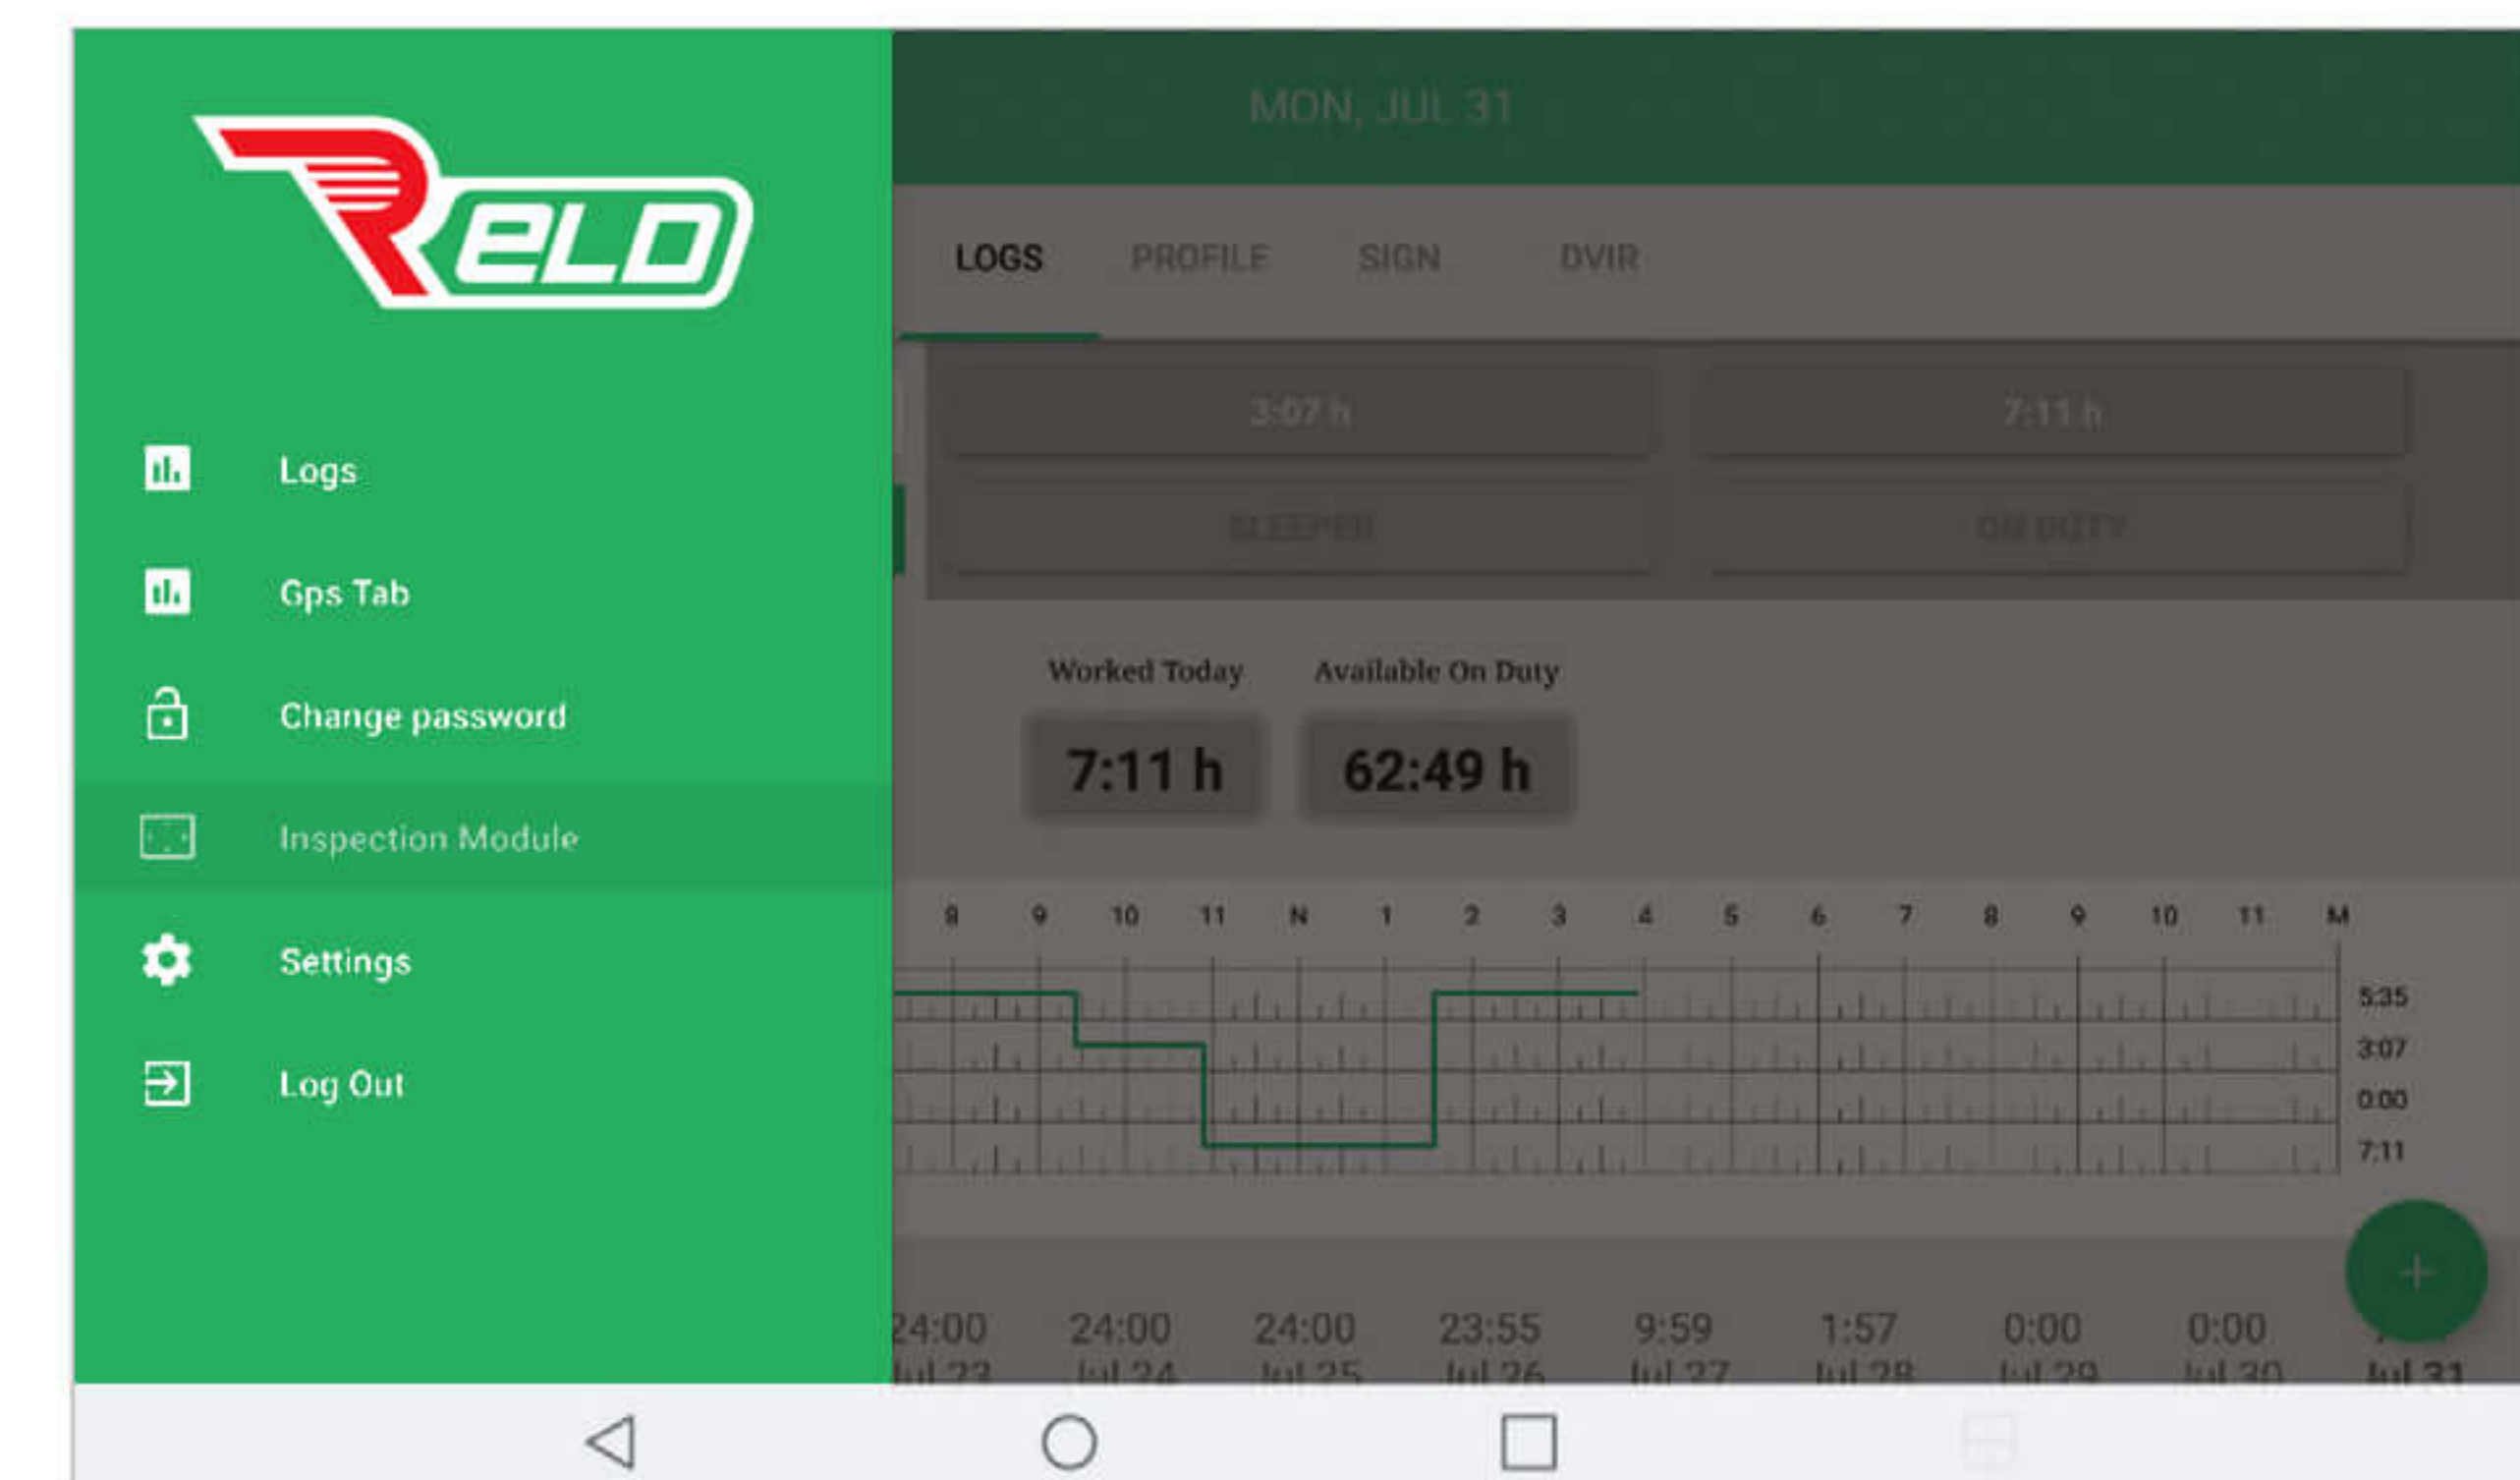


picture 19

**2** Tap "Begin Inspection" and hand your device to the officer (picture 20) or tap "Send Logs" to send the report through email. (picture 21)

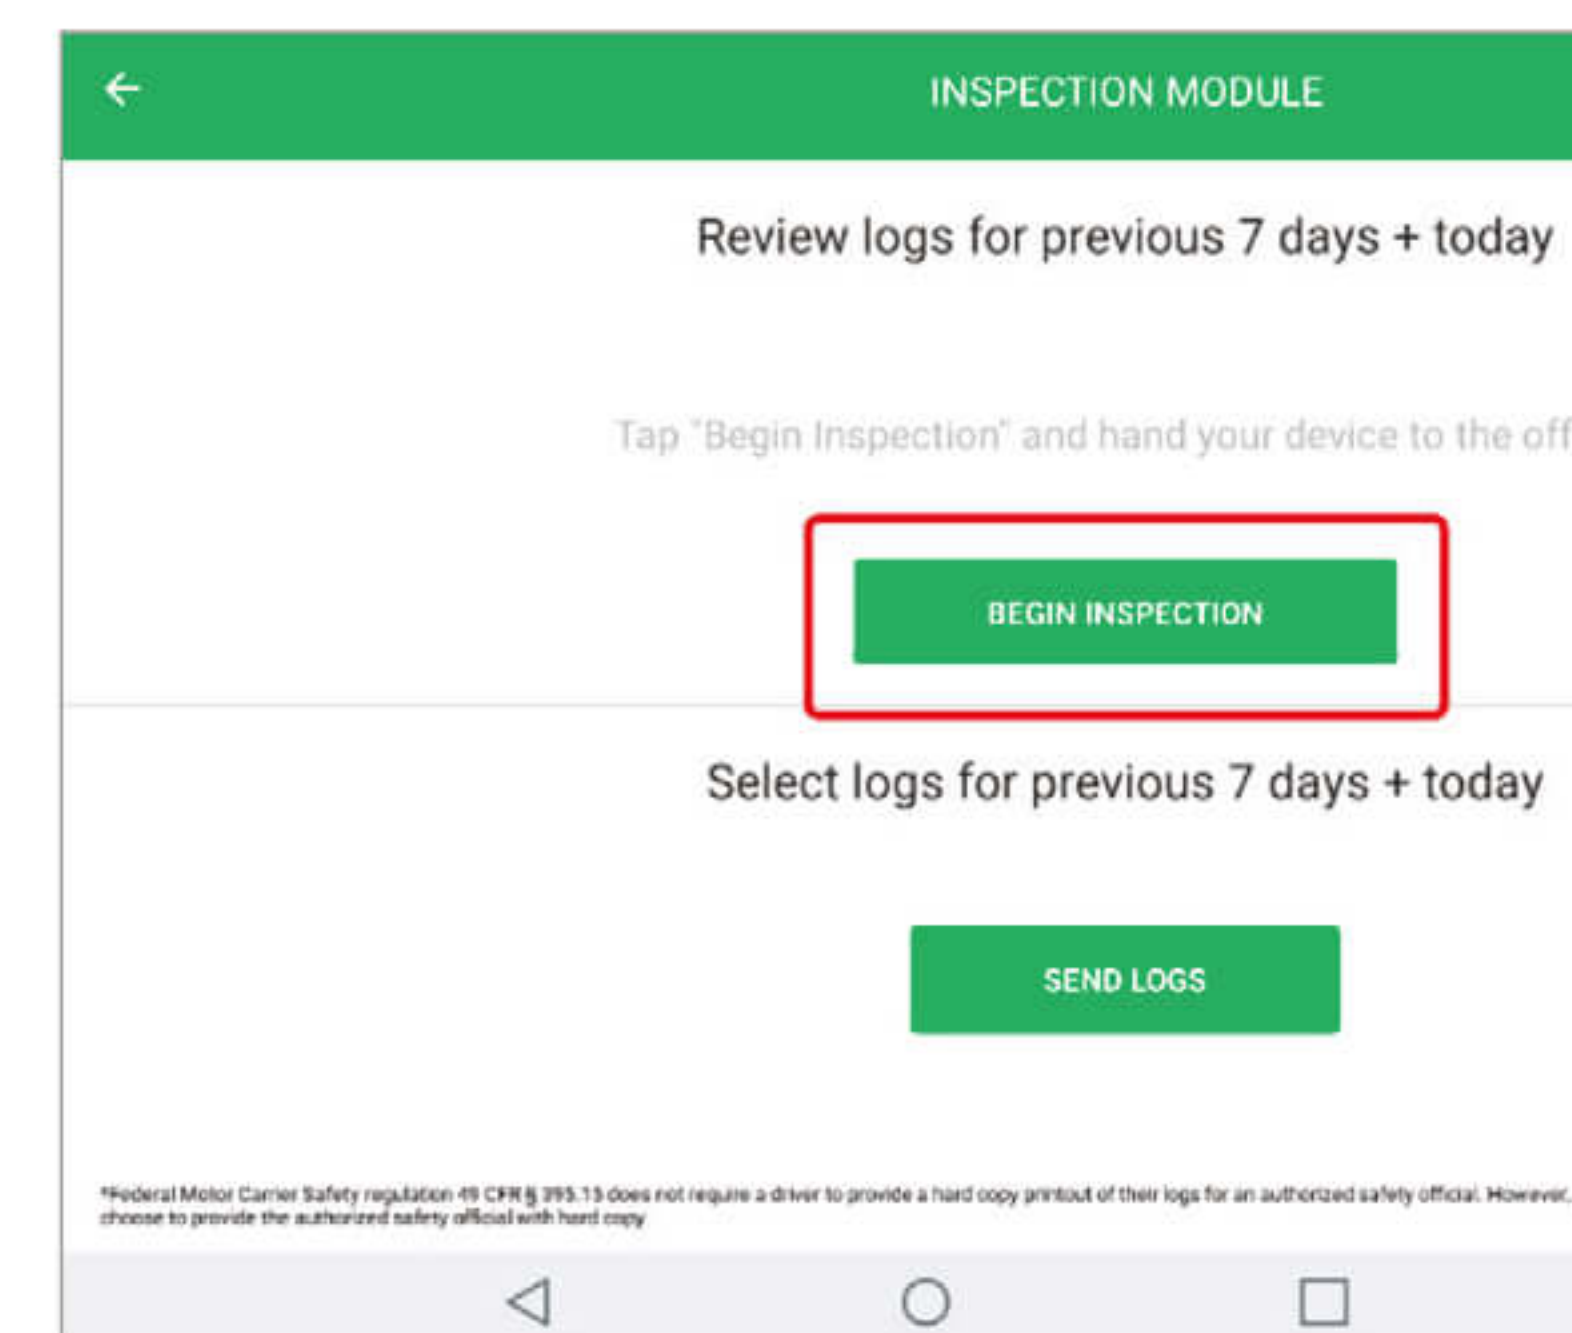

picture 20

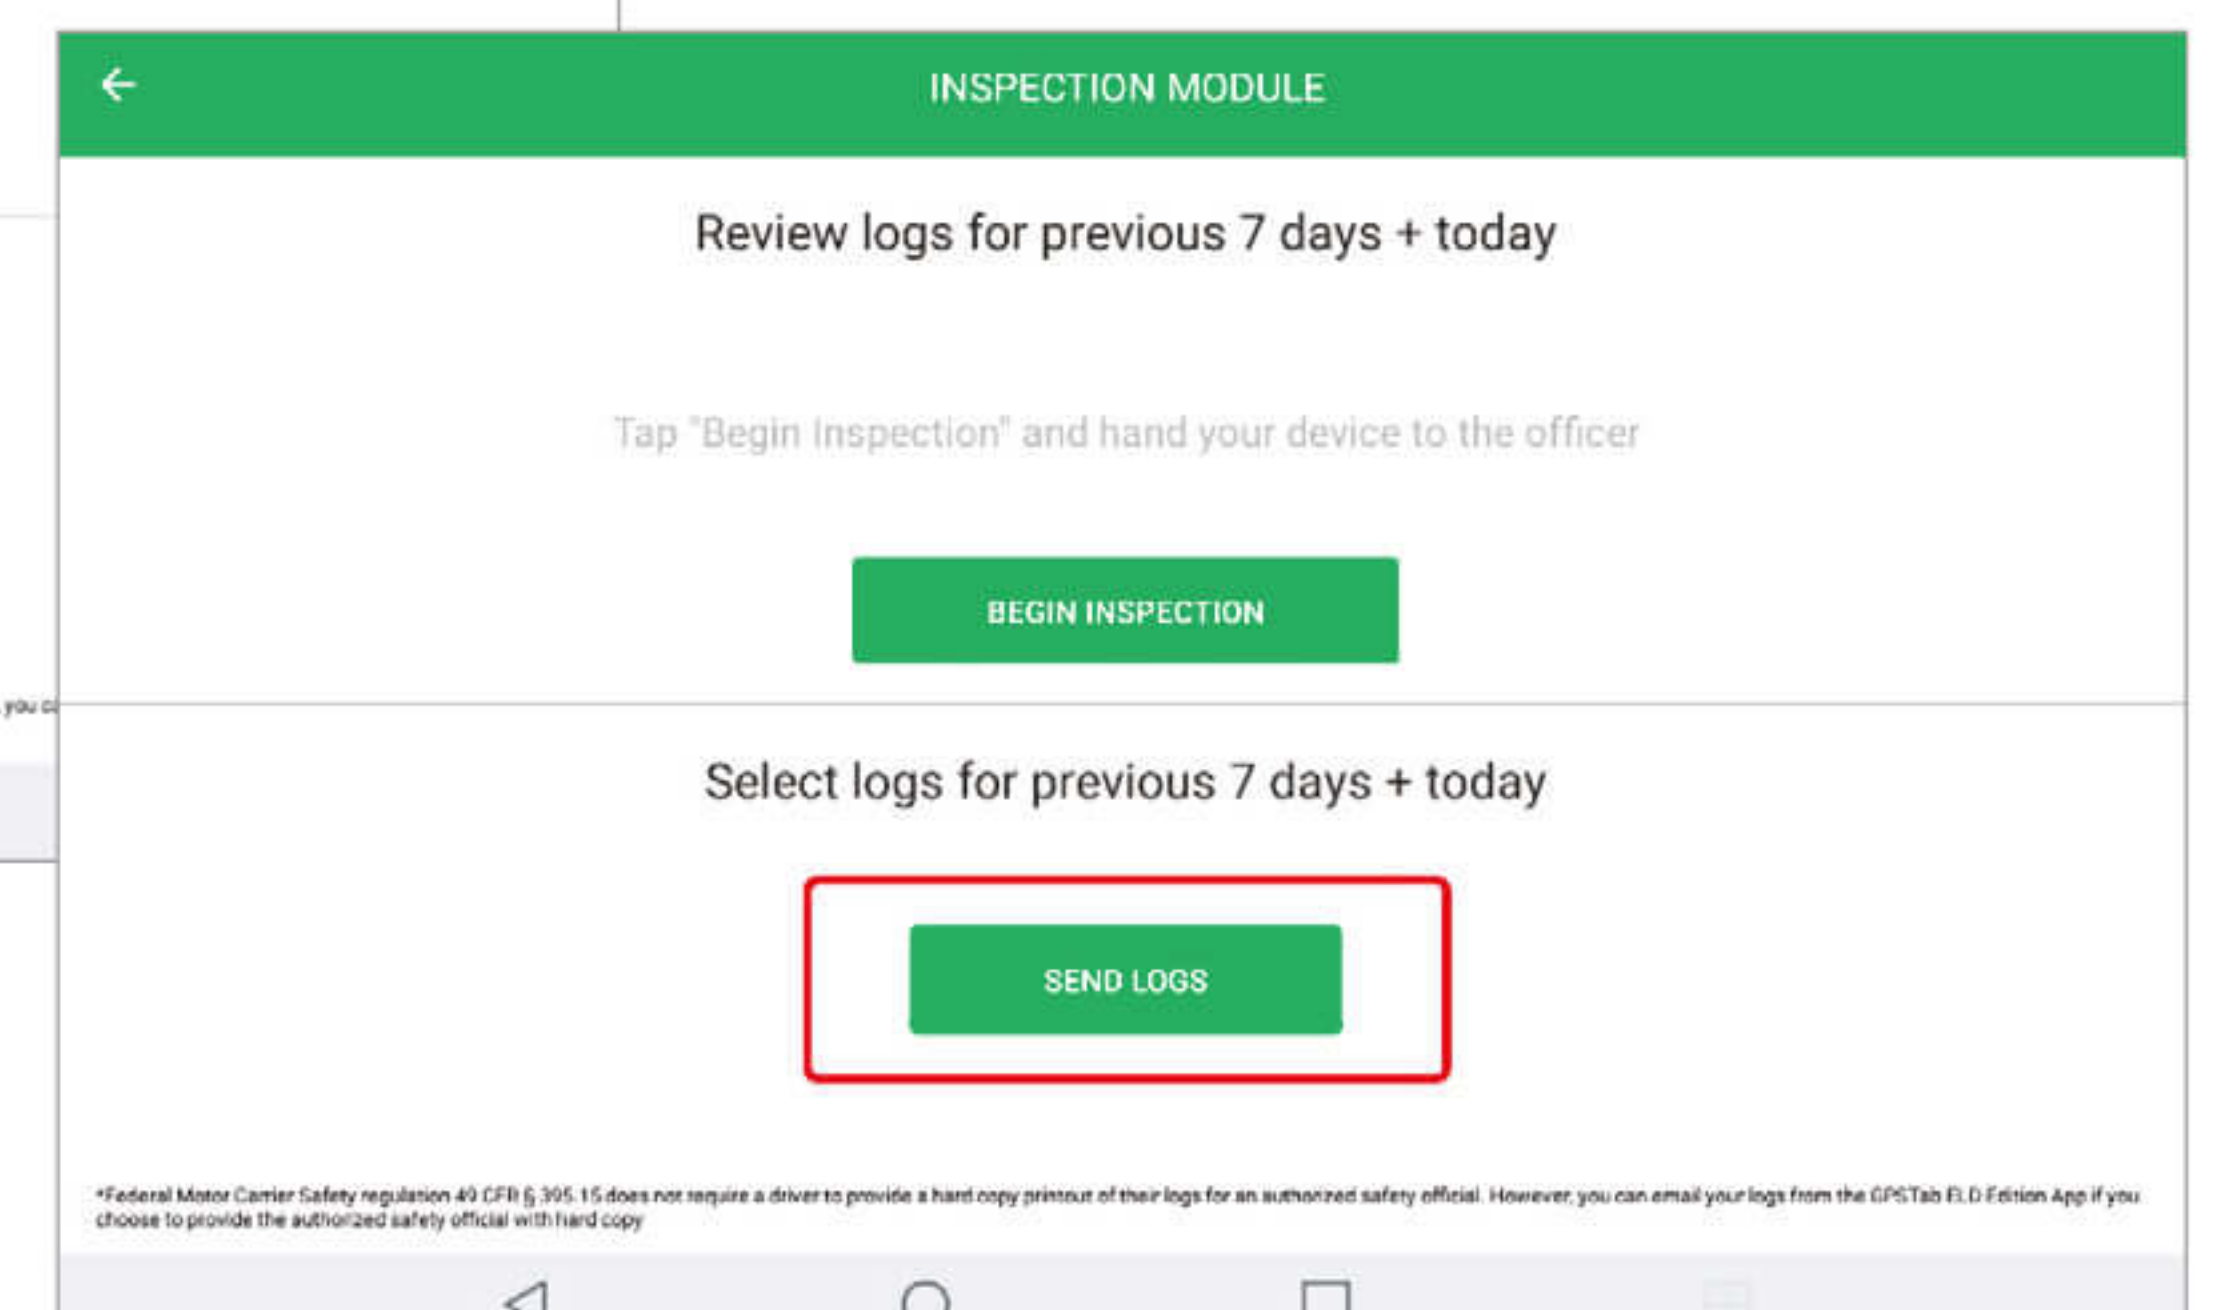

picture 21



# OFFICER INSPECTION (CONTINUED)

The application will generate the report for the officer. (picture 22)

**REPORT**

Aug 29, 2017 Aug 30, 2017 Aug 31, 2017

**REAL ELD** DRIVER'S DAILY LOG USA Property 70 hour / 8 day  
Wednesday, August 30, 2017

Driver	Utech Corp	ID	123	Co-Drivers (ID)	Test T (3333)
DL Number	ST	Time Zone	CST		
ELD ID	123456789	24 Period Starting Time	Midnight		
ELD Provider	UTech Corp.	Exempt Driver Status	No		
Carrier	Utech Corp	Vehicles (VIN)	1789 (fd876df), 123 (44gd84g85fg78545), 55556		
Main Office	2100 W 21ST Street, Broadview, IL 60155	Trailers	3456, 174738828		
Home Terminal	245 s street	Distance	2 mi		
From Address		To Address			
Shipping Docs	67hkk				
Current Location	0.9 mi S of Broadview, IL	Unidentified Driver Records	No		
Notes					

Vehicle	Start	End	Distance
1789	874787	874787	0 mi

No	Status	Time (CST)	Duration	Location	Odometer	Eng. Hours	Notes
1	SB	12:00:00 AM	9 hr 5 min	0.9 mi S of Broadview, IL	874789.0	25779.2	

I certify these entries are true and correct \_\_\_\_\_  
Driver's Signature

picture 22

Tap  on the top left corner to exit DOT inspection

*\*Federal Motor Carrier Safety regulation 49 CFR § 395.15 does not require a driver to provide a hard copy printout of their logs for an authorized safety official. However, you can email your logs from the REAL ELD Edition App if you choose to provide the authorized safety official with hard copy.*

# SETTINGS

To change sound settings or visibility of violations notes please choose settings from side menu.

**REAL ELD**

TUE, SEP 19  
Not Connected  
LOGS PROFILE SIGN DVIR 12:27 PM

- Logs
- Gps Tab
- Change password
- Inspection Module
- Settings**
- Log Out

Worked Today: 23:59 h  
Available On Duty: 00:00 h

picture 23

**SETTINGS**

- Highlight violations
- Enable sound



# ELD MALFUNCTION MANUAL

## § 395.22 Motor Carrier Responsibilities

A motor carrier must ensure that its drivers possess onboard a commercial motor vehicle and ELD information packet containing the following items:

An instruction sheet for the driver describing ELD malfunction reporting requirements and recordkeeping procedures during ELD malfunctions.

*The following instructions are in accordance with the guidelines set forth in § 395.34*

## How does the driver know if REAL ELD is malfunctioning?

The REAL ELD device has LED lights to **simply indicate its status** to the driver.

### DURING INSTALLATION

● Device **Not Plugged** into the truck's diagnostic port.

◐ **Blinking Green**  
The Adapter is waiting for the App to connect.



### DURING ELD OPERATION

This applies when the Adapter is recording data.

✓ ● **Slowly Blinking Green**  
The App is **Connected** and the Adapter is **Receiving** ECM data.



● Device **Not Plugged** into the truck's diagnostic port.

◐ **Blinking Green**  
The Adapter is waiting for the App to connect.



# ELD MALFUNCTION MANUAL

## (CONTINUED)

REAL ELD will monitor and report malfunction data based on section 4.6 ELD's Self-Monitoring of Required Functions table 4:

P - "Power compliance" malfunction

E - "Engine synchronization compliance" malfunction

T - "Timing compliance" malfunction

L - "Positioning compliance" malfunction

R - "Data recording compliance" malfunction

S - "Data transfer compliance" malfunction

O - "Other" ELD detected malfunction

### What does the driver need to do if the ELD is malfunctioning?

- 1 Please Contact Real Trucking Inc. support immediately after discovering a malfunction at 708-983-7325 or [eld@real.us](mailto:eld@real.us) to troubleshoot the issue.
- 2 Provide written notice to your fleet management within 24 hours of malfunction discovery.
- 3 Keep a paper log for that day and until ELD is repaired or replaced.

### What does the fleet need to do if the ELD is malfunctioning?

- 1 A motor carrier must take action to correct the malfunction of the ELD within 8 days of discovery of the malfunction or a driver's notification to the motor carrier, whichever occurs first.
- 2 Upon notification by fleet manager, REAL ELD will send a new device.
- 3 If a motor carrier needs a time extension, they must notify the FMCSA Division Administrator for the State of the motor carrier's principal place of business within 5 days after a driver notifies the motor carrier according to the guidelines set forth in § 395.34 (2).





# MANUAL

Real Trucking Inc.

eld@real.us  
708-983-7325