




TIMETRACK
ELD

User manual

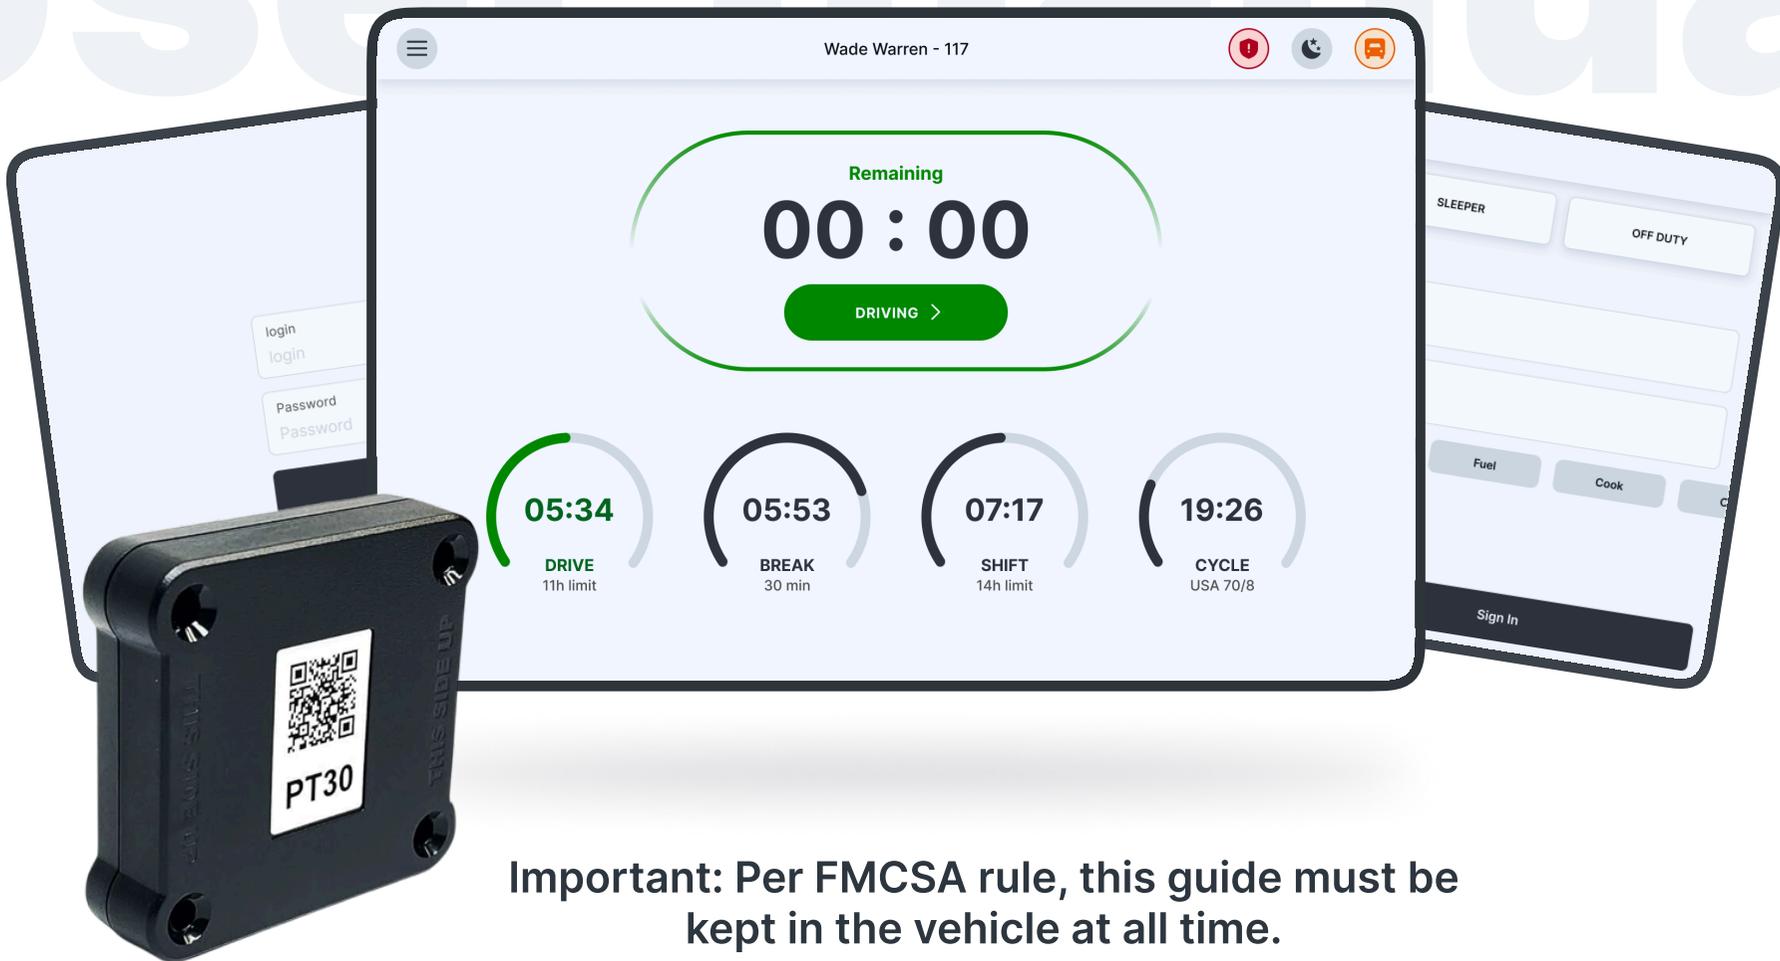

Important: Per FMCSA rule, this guide must be kept in the vehicle at all time.




Installation & Recording Driving Time

Install the PT30 ELD device in your vehicle	4
Download the Timetrack ELD App	5
Connect Timetrack ELD App to the PT30 ELD device	6
Adding signature	7
Enable app permissions	8
Home screen	9
Status update	10
Let an officer inspect your logs (DOT inspection)	11
Accessing previous day logs & certifying	12
Co-driver	13
Disconnected & Trouble connecting with the ELD	14
ELD Malfunction	15

Install the PT30 ELD device in your vehicle


1

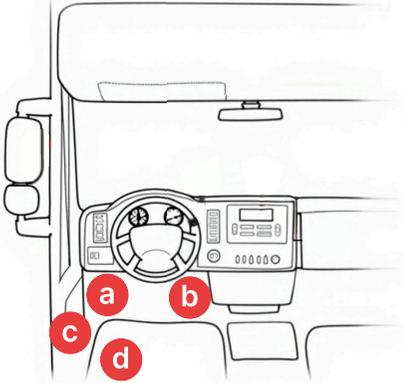

With the engine off, locate the diagnostic port inside the vehicle. The diagnostic port is generally located in one of four places:

- a. Underneath the left side of the dash.
- b. Underneath the steering wheel.
- c. Near the driver's left kick panel.
- d. Below the driver's seat.


2

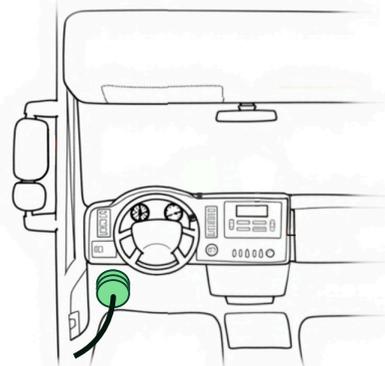

Attach the 9-pin, 6-pin or OBDI cable to the diagnostic port of the vehicle.



3

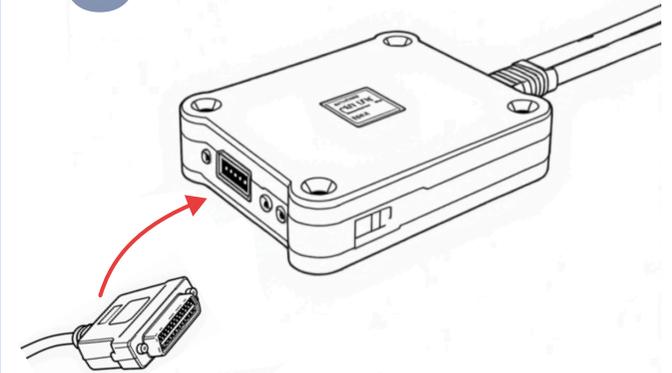


Attach the other side of the cable to the Timetrack ELD. Screw down the thumbscrews on the 15-pin connector to secure the cable to the ELD.



Install the PT30 ELD device in your vehicle

4

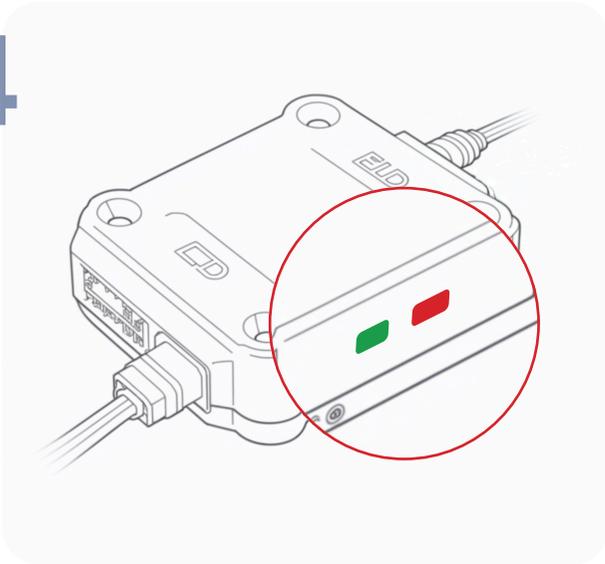

Once plugged in, the indicator lights will flash momentarily before turning solid red. After approximately one minute, the left-side indicator light will turn green, indicating a successful GPS connection. If this does not occur, try moving the ELD to increase exposure to the sky.

-  Device is powered
-  The signal is locked

5

Choose a spot on the top of the dashboard to mount your ELD. The mounting spot should be near the windshield, but away from any vents or electrical components that may cause interference.

6

Before you mount the ELD, use the provided alcohol swab to clean the mounting area.

7

Remove the backing from the adhesive strip and mount the ELD to the cleaned area.



Download & login the Timetrack ELD App

1



For Android phones and tablets, download the Timetrack ELD App from the Google Play Store.

2

The screenshot shows the Timetrack ELD login interface. At the top is the Timetrack ELD logo. Below it are two input fields: the first is labeled 'login' and contains the text 'login'; the second is labeled 'Password' and contains the text 'Password'. Below the fields is a dark 'Sign In' button. At the bottom, there is a small line of text: 'By clicking "Sign In" you agree to our [Terms and Privacy](#)'.

1. Contact your fleet manager.
2. Open the Timetrack ELD driver account.


3

The screenshot shows the Timetrack ELD login interface. At the top is the Timetrack ELD logo. Below it are two input fields: the first is labeled 'login' and contains the text 'your_login'; the second is labeled 'Password' and contains a series of asterisks. Below the fields is a dark 'Sign In' button. At the bottom, there is a small line of text: 'By clicking "Sign In" you agree to our [Terms and Privacy](#)'.

1. Enter your username&password;.
2. Click 'Sign In'.




Connect Timetrack ELD App to PT30 device

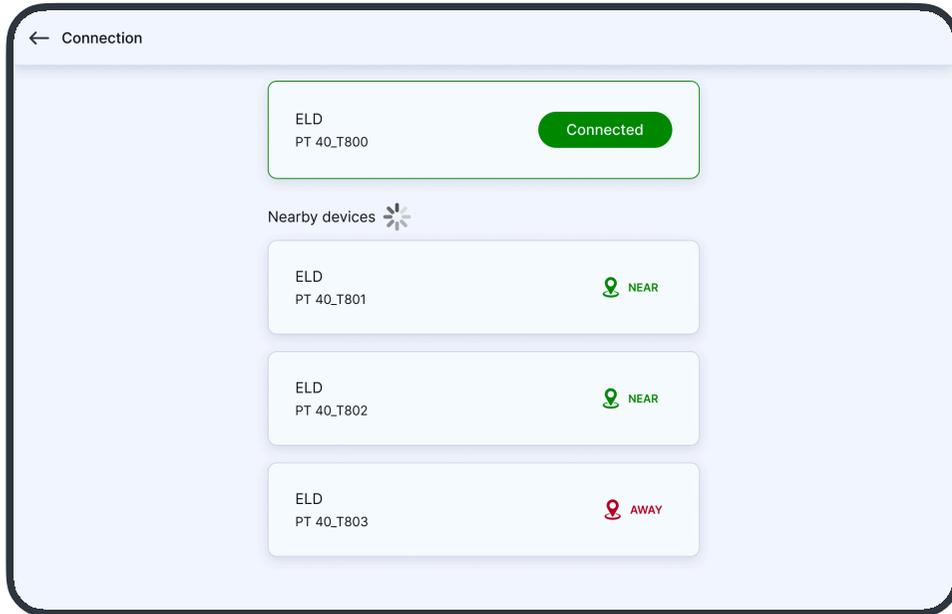


The driver scans for nearby vehicle's ELD. The app shows which devices are close enough to connect ("NEAR") or too far away ("AWAY")

Select the vehicle that you want to connect to.

The connected device appears at the top with a green "Connected" status.

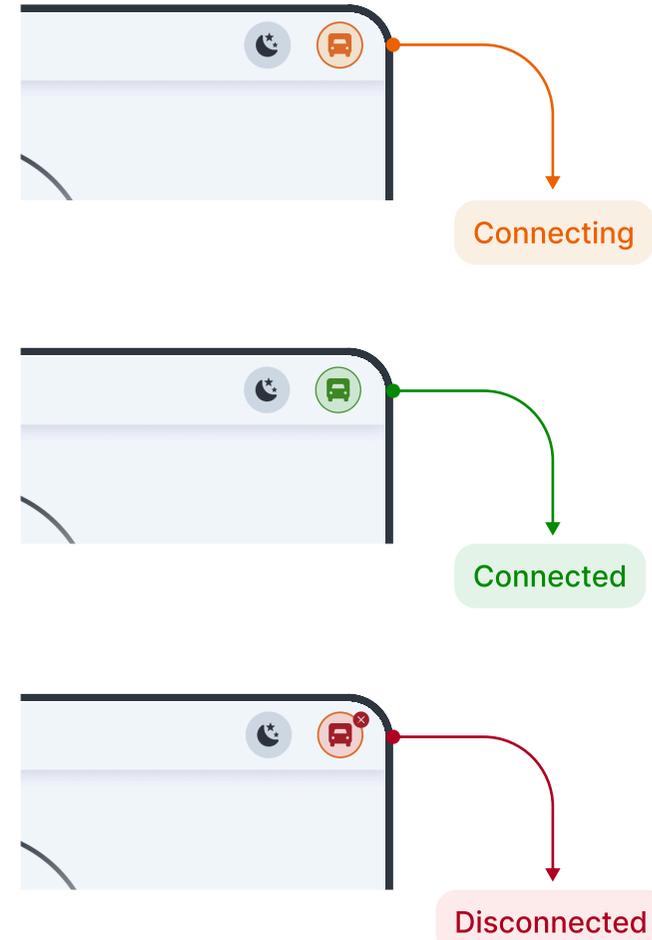

Adding signature

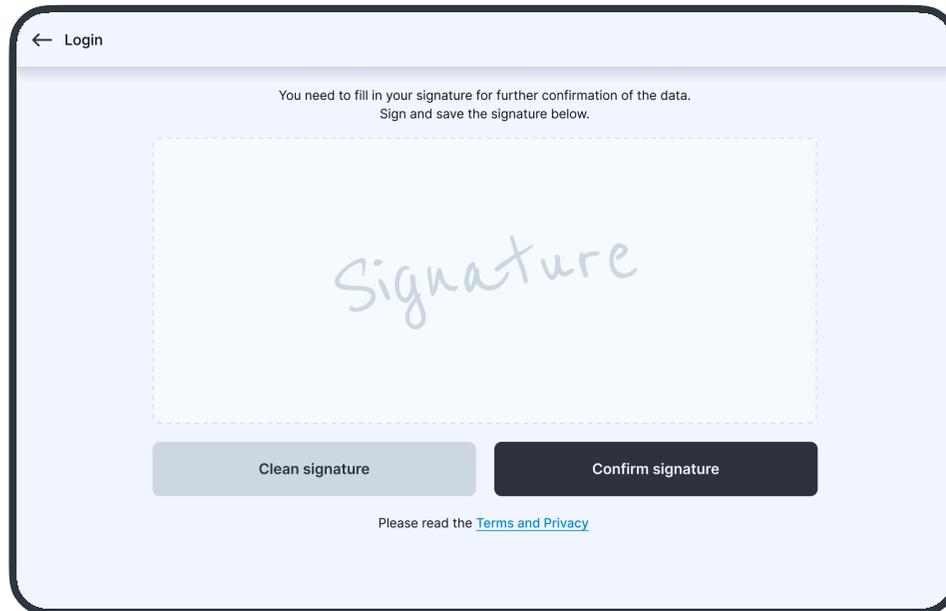

Your digital signature is required when you certify your logs for the first time. Once provided, the signature is stored in the system and automatically applied to future certifications.


1. Initial Signature Prompt

- If you tap Certify without having a saved signature, the app will prompt you to sign on the Signature screen.
- Draw your signature in the space provided and press Save.
- After saving, your signature will be attached to all subsequent certifications.

2. Editing Your Existing Signature

- If you need to update or change your signature later, open your Profile and tap the current signature image.
- On the Signature screen, clear the old signature and draw a new one.
- Press Save to confirm and store your updated signature in the system.

Enable app permissions

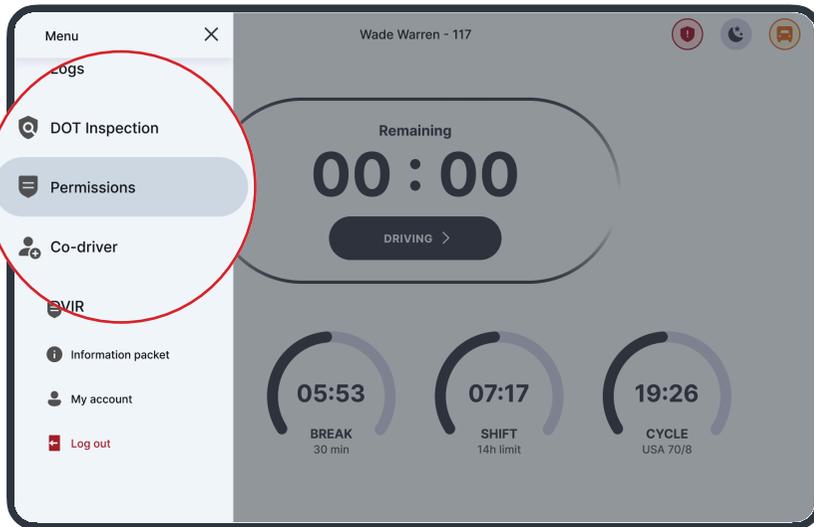


Tap Permissions to open a detailed list of requirements, each showing whether it's currently allowed or denied.



Location services, notifications, and Bluetooth must be enabled to ensure accurate tracking and compliant ELD functionality.

Tapping any permission will redirect you to your device's settings, where you can enable the required access.

Home screen

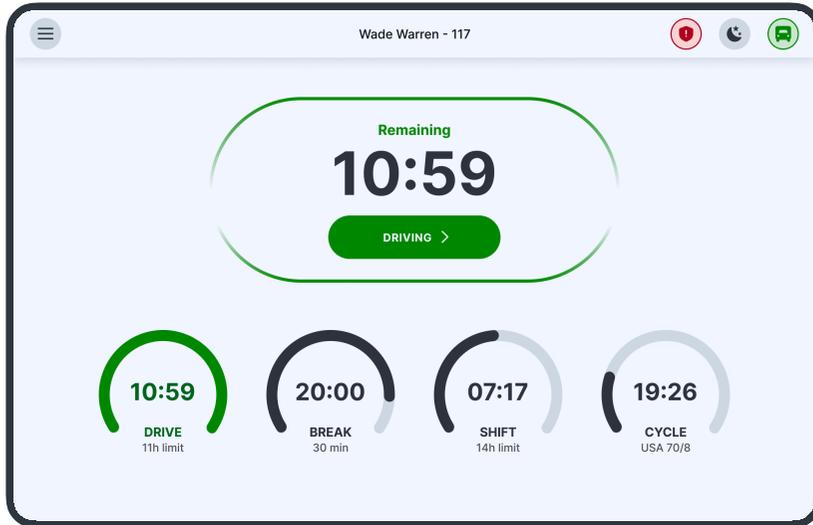


Hours of Service (HOS) Display

The Home Screen of the Timetrack ELD provides real-time visibility into your remaining driving and work hours in compliance with FMCSA regulations. The screen displays:

- **Drive Time:** Remaining time within the 11-hour driving limit.
- **Break Time:** Countdown to the mandatory 30-minute break.
- **Shift Time:** Countdown for the 14-hour on-duty window.
- **Cycle Time:** Remaining hours for the cycle (e.g., 60/70-hour limit for USA rules).



These visual indicators help drivers effectively manage their hours and stay compliant.

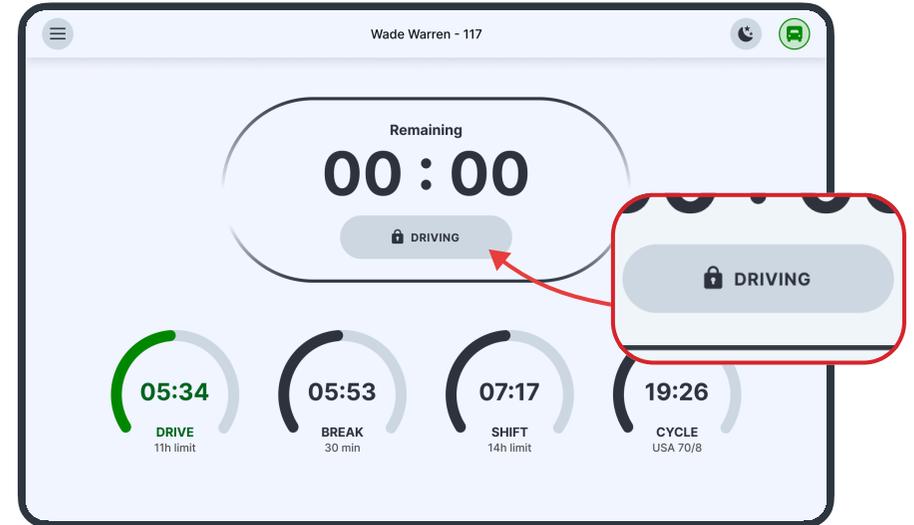

Safety Feature

- The app automatically locks when the vehicle speed exceeds **10 mph** to prevent manual status changes while driving, ensuring compliance with FMCSA regulations.
- When the vehicle speed drops to **0 mph**, the app unlocks, allowing the driver to update their duty status and information.

Status update

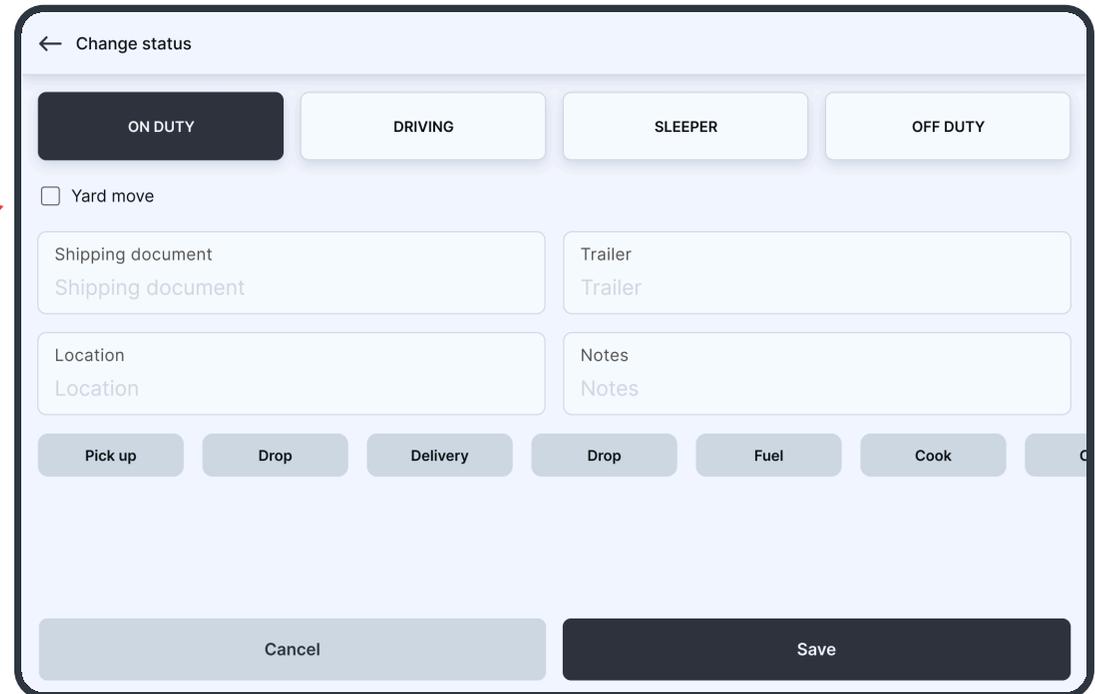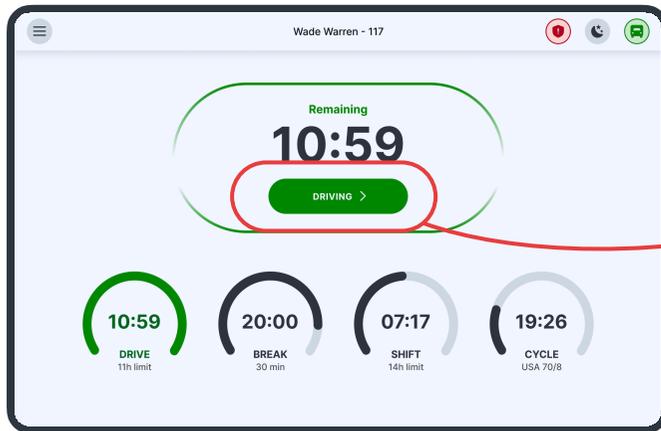


The **Status Update** screen allows drivers to change their duty status for accurate HOS tracking. Available statuses include:

- **On Duty:** Driver is working but not driving.
- **Driving:** Driver is actively operating the vehicle.
- **Sleeper Berth:** Driver is resting in the sleeper compartment.
- **Off Duty:** Driver is not working.

To change your duty status:

1. Tap the **DRIVING** button on the home screen.
2. Select an alternate duty status from the available options.
3. Optional: Enter additional details such as yard moves, shipping documents, trailer information, location, or notes.
4. Tap **Save** to apply the status change.

Let an officer inspect your logs (DOT Inspection)

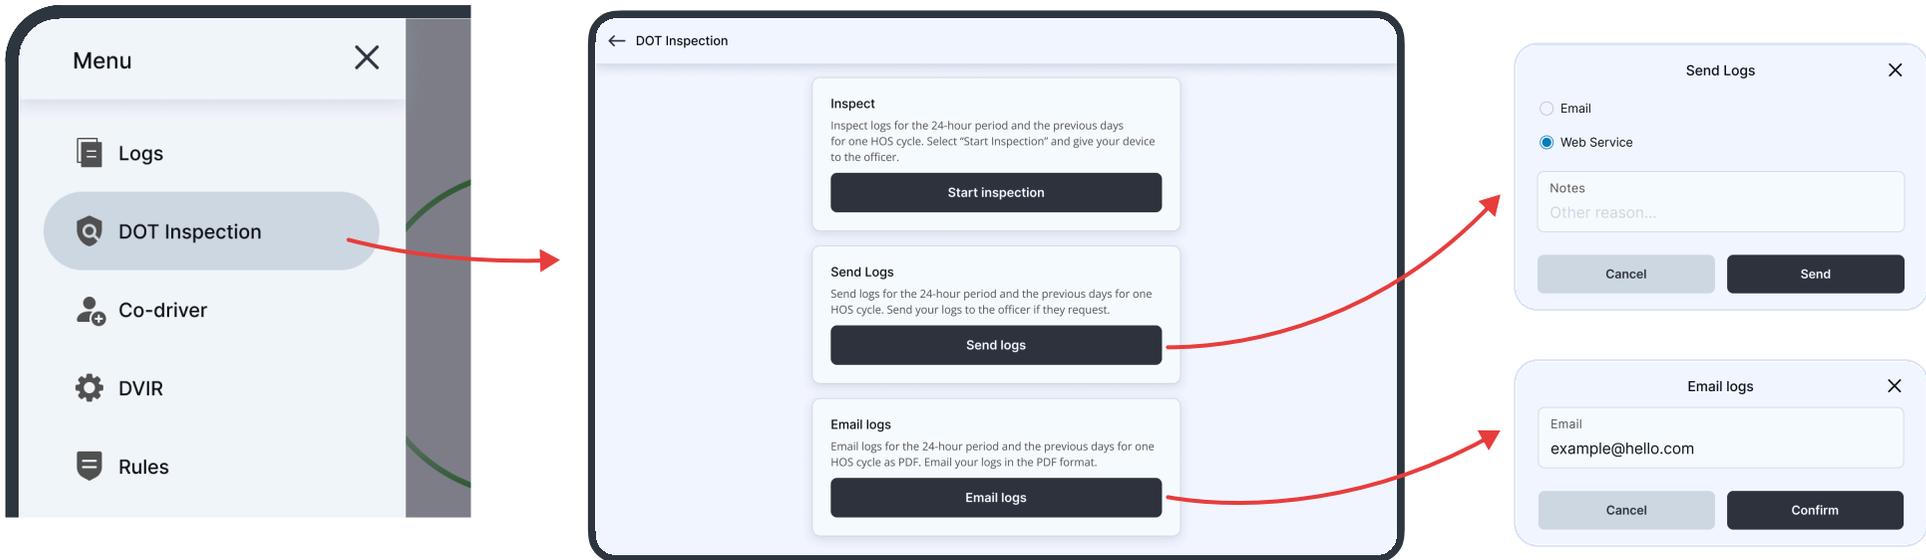

DOT inspection

- Select Start Inspection to open your detailed log report (covering the past 7 days plus the current day).
- Hand your device to the officer if they want to inspect directly on the screen.


Send logs

- If the officer requests the raw ELD data to the DOT via email or web service.
- This delivers the official output file required for FMCSA compliance.

Email logs

- If the officer prefers a copy of your logs by email, tap Send via email.
- Confirm the email address or follow any prompts the app provides.

Accessing previous day logs & certifying

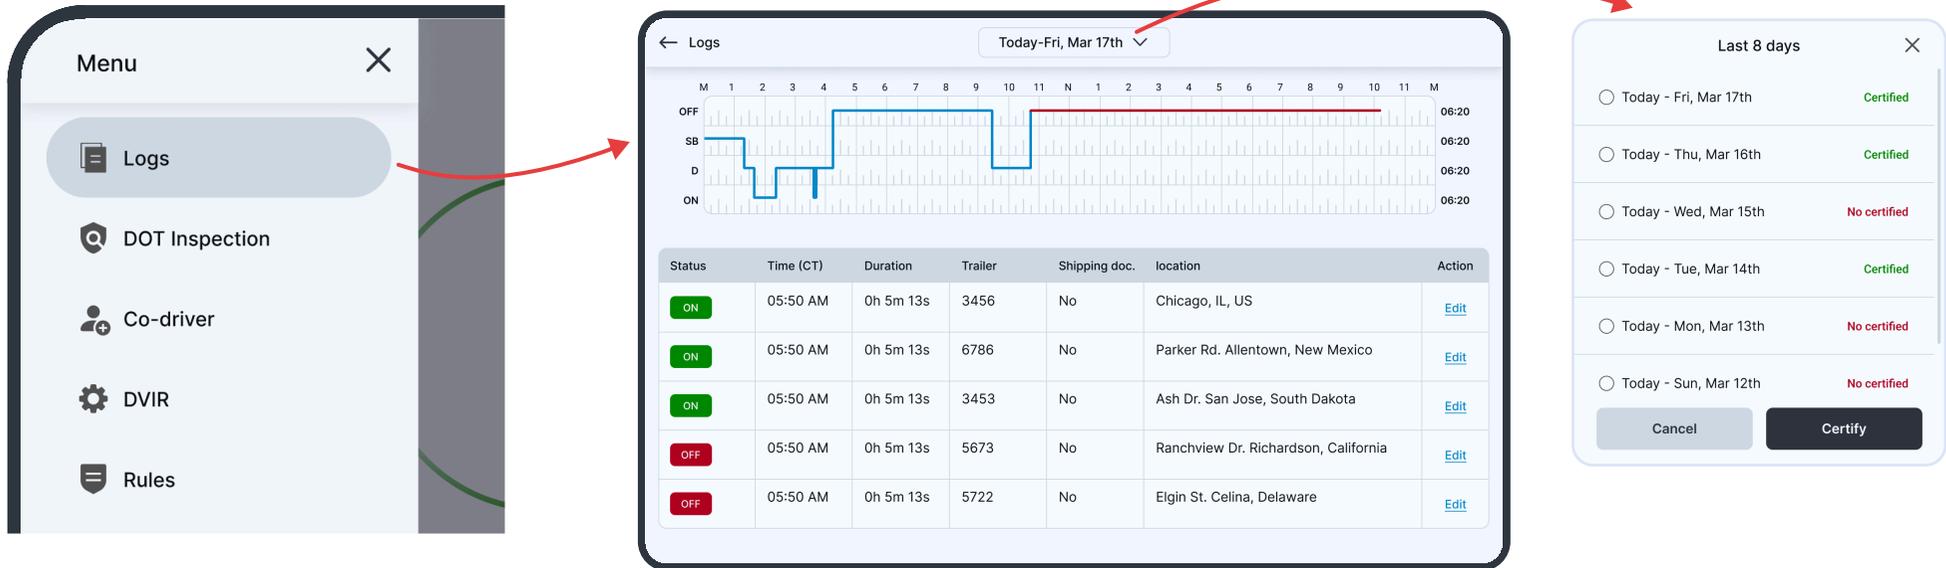


The screenshot illustrates the process of accessing and certifying logs. On the left, a 'Menu' screen shows 'Logs' as the selected option. An arrow points from the 'Logs' menu item to the main 'Logs' screen. The 'Logs' screen displays a timeline for 'Today-Fri, Mar 17th' with a status graph and a table of log entries. A red arrow points from the 'Today-Fri, Mar 17th' date selector to a 'Last 8 days' dialog box. This dialog box lists dates from 'Today - Fri, Mar 17th' to 'Today - Sun, Mar 12th', with 'Certified' or 'No certified' status for each. 'Certify' buttons are visible at the bottom of the dialog.

Status	Time (CT)	Duration	Trailer	Shipping doc.	location	Action
ON	05:50 AM	0h 5m 13s	3456	No	Chicago, IL, US	Edit
ON	05:50 AM	0h 5m 13s	6786	No	Parker Rd. Allentown, New Mexico	Edit
ON	05:50 AM	0h 5m 13s	3453	No	Ash Dr. San Jose, South Dakota	Edit
OFF	05:50 AM	0h 5m 13s	5673	No	Ranchview Dr. Richardson, California	Edit
OFF	05:50 AM	0h 5m 13s	5722	No	Elgin St. Celina, Delaware	Edit

If you have uncertified logs from previous days, you will see a red warning on the dashboard. By clicking on the warning, you can view the uncertified dates. To certify each log date, select the specific date and click "Certify" located at the bottom of the screen. Alternatively, you can bulk-certify uncertified logs by selecting "Select All".

Access the logs from the previous 14 days by navigating to "Menu" and then selecting "Logs". Each log date displays information regarding Trailer & Shipping Documents as well as driving details.

Co-driver


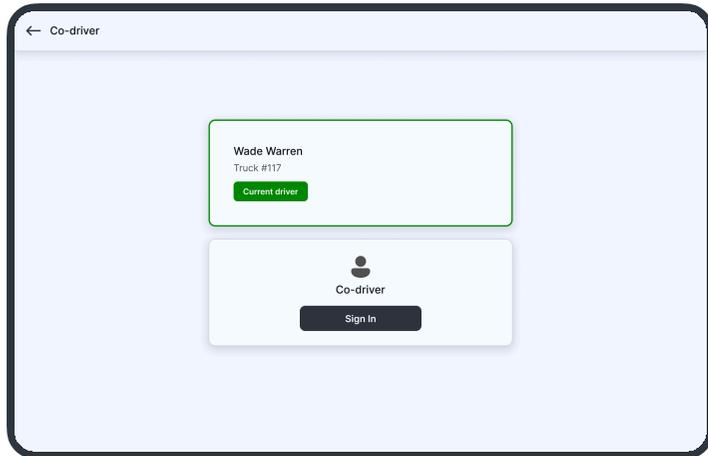


1. Adding a Co-driver


- Go to Co-driver in the left menu to see your current driver profile;
- Tap Add co-driver, then enter the co-driver's username and password;
- Press Confirm to finalize. Only one co-driver can be active at a time.

2. Switching Drivers


- Tap on your co-driver's profile to switch drivers;
- A short confirmation will appear, allowing you to proceed with the swap or stay on your current account.

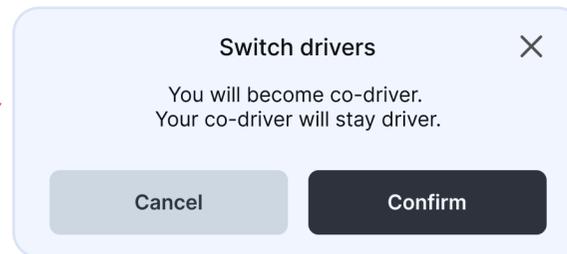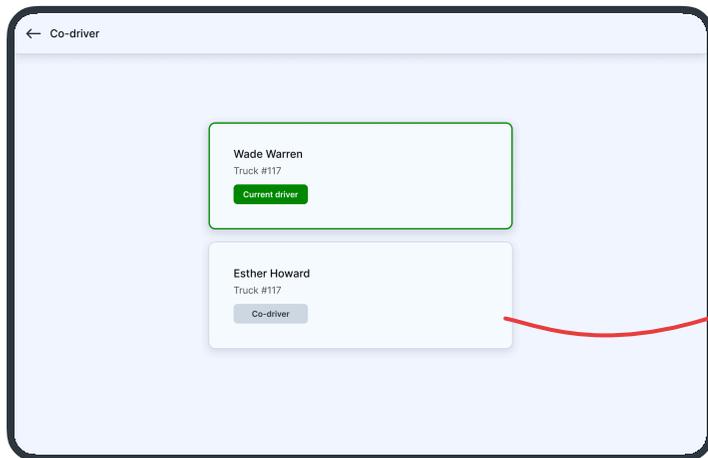

Disconnected & Trouble connecting with the ELD

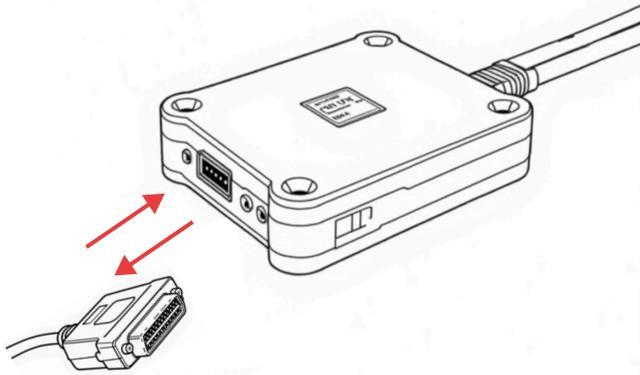

1. Unplug the ELD device from the port;
2. Wait for all lights on the device to go off;
3. Reboot your phone or tablet;
4. Plug the ELD back into the port;
5. Once the ELD lights are back on, try connecting to your vehicle again.

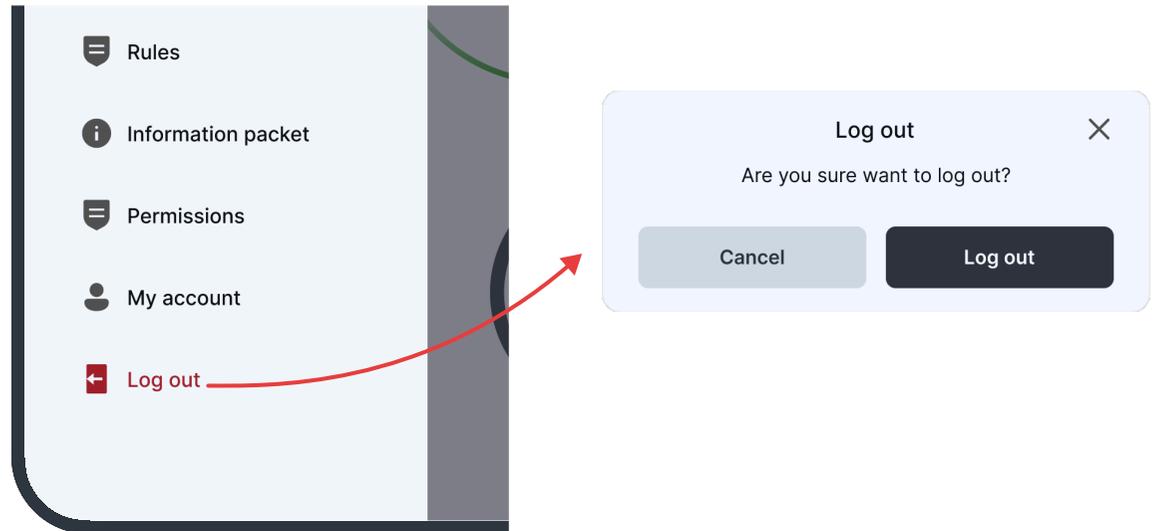

Initiate Logout

- Select Log Out from the left menu. A confirmation window will appear.

Confirm or Cancel

- If you confirm, you'll be logged out of your driver account.
- If a co-driver is active on the device, the app switches to the co-driver's session instead of closing completely.

Re-Login if Needed

- To use the ELD app again, simply log back in with your username and password.



ELD Malfunction

§395.22 Motor carrier Responsibilities

A motor carrier must ensure that its drivers possess onboard a commercial motor vehicle and ELD information packet containing the following items: An instruction sheet for the driver describing ELD malfunction reporting requirements and record keeping procedures during ELD malfunctions.

The following instructions are in accordance with the guidelines set forth in §395-34

Timetrack ELD will monitor and report malfunction data based on section "4.6 ELD's Self-Monitoring of Required Functions," table 4:

- P** - "Power compliance" malfunction,
- E** - "Engine synchronization compliance" malfunction,
- T** - "Timing compliance" malfunction,
- L** - "Positioning compliance" malfunction,
- R** - "Data recording compliance" malfunction,
- S** - "Data transfer compliance" malfunction,
- O** - "Other" ELD detected malfunction.



Support



Phone Support
(608) 692-4960



Email Support
info@timetrackeld.com



Website
www.timetrackeld.com

Support Hours

We're here to help you 24/7 with any questions.