

Phoenix ELD

Driver Handbook



VEHICLE



Once you signed into the logbook app, you will have to select your vehicle from a list. Use the vehicle name or number to search for your vehicle and pair the app to the ELD device. You can repeat the process in a different vehicle by choosing “Change Vehicle” from the Main Menu.



Note: If your manager has preassigned a vehicle to you, the “Select Vehicle” screen will not appear automatically upon app initiation.

RODS



Once the app is paired with the ELD device, the status will automatically be “Driving” when the vehicle moves at 5 mph or faster.

Status Circle

- Displays current status.
- Tap on it to change the status when not driving.
- Shows calculations for remaining on-duty and driving time, required breaks and off-duty time.

MENU PAGE

- Past and current Logs
- Driver Status
- Roadside DOT Inspection Reports



Use the main menu icon on the top left corner of your screen to navigate between app features.

- Past and current Logs
- Driver Status
- Roadside DOT Inspection Reports
- Driver Vehicle Inspection Reports
- Vehicles
- Violations
- HOS Rules
- Driver Information
- Account Details
- Sign out