



TRACK
PRO

Downloading the App




Please ensure you have connected a ELD to your Vehicle Gateway before continuing.



Download the Track Pro ELD app from the Google Play Store (for Android phones/tablets) or the App Store (for iPhones and iPads).


Logging into the App

Before you begin driving, you must sign in to the Truck Pro ELD app!
If you do not have Truck Pro ELD account, please contact your fleet manager.

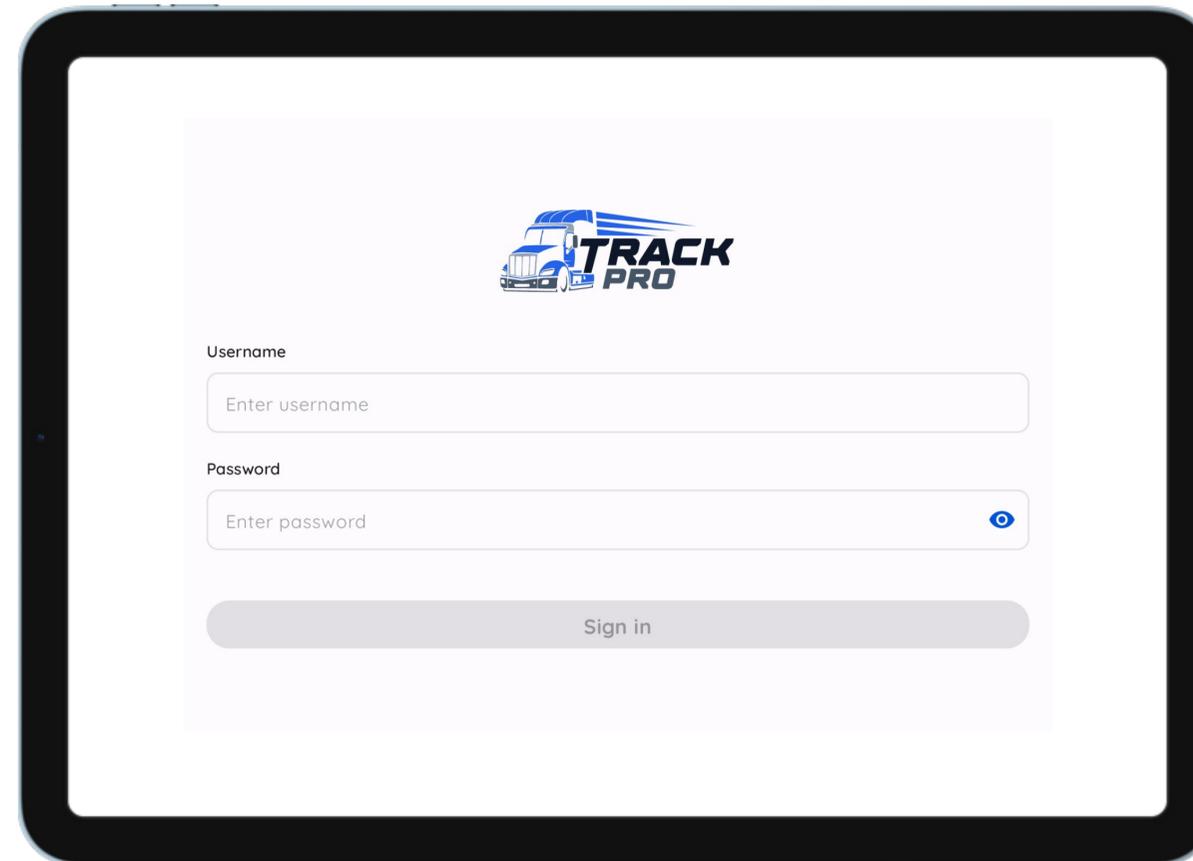


- Open the Truck Pro ELD app
- Enter your username, password and tap “Sign in”



ELD connection

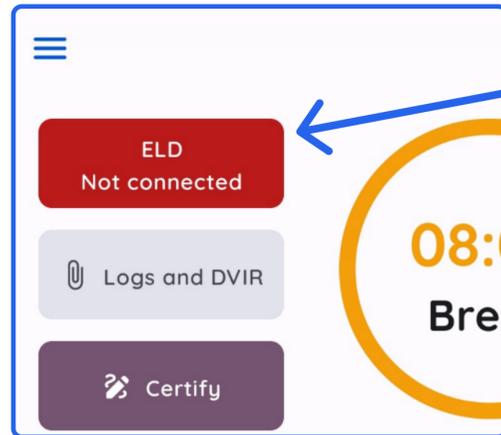

Click on the **Red button** in the top left corner



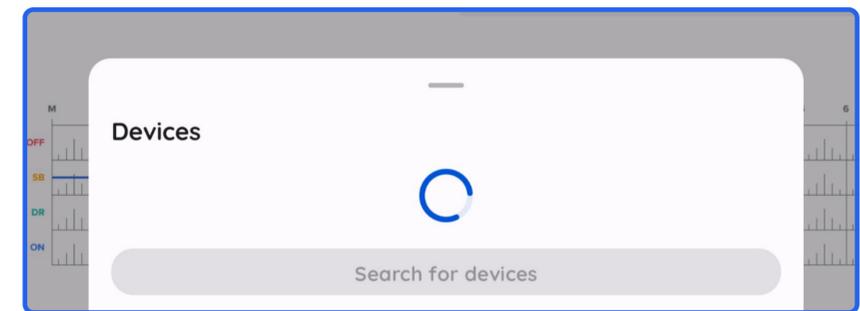


Wait until the device is detected and select it

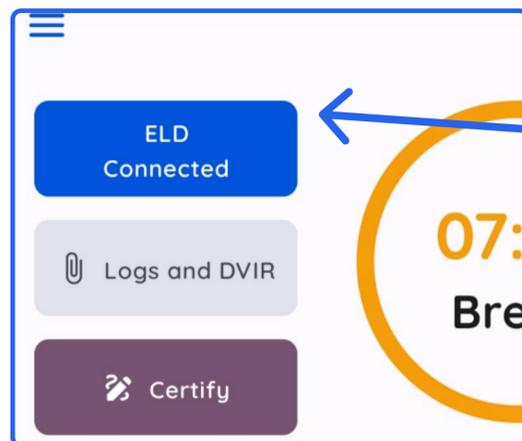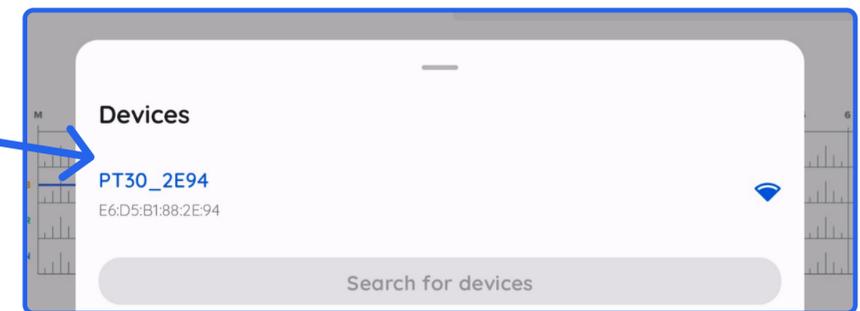

When the device is connected, the button will turn **Blue**


Start your shift

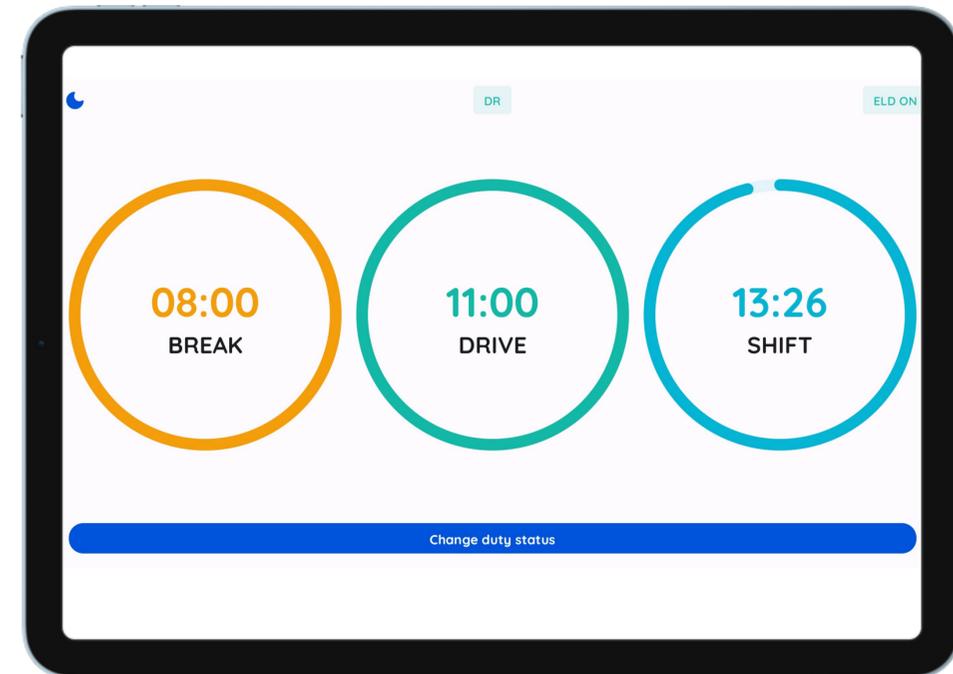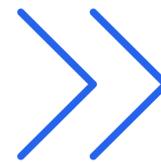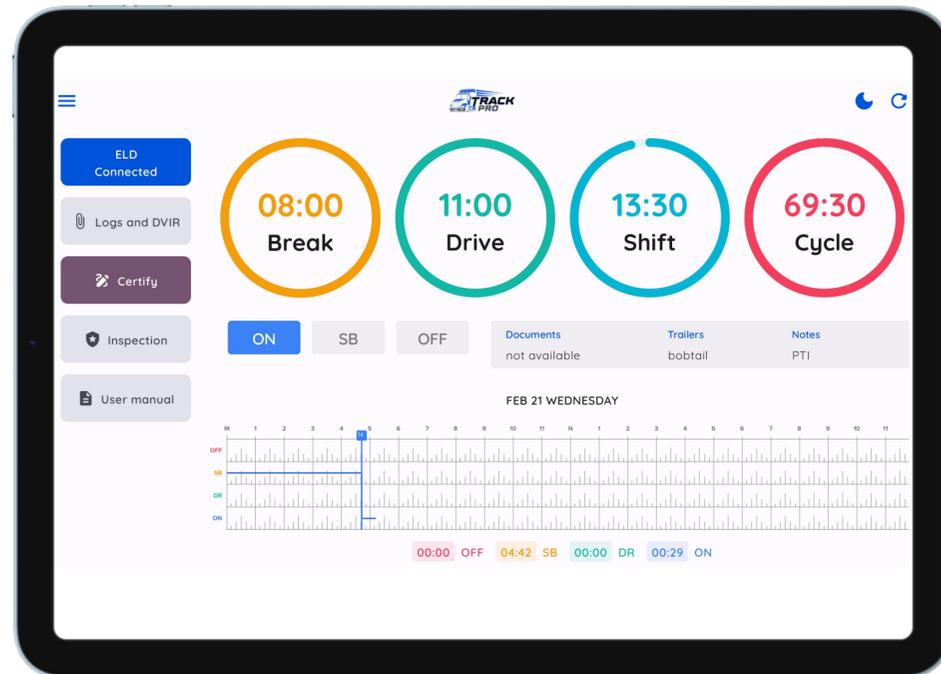

When your vehicle is moving 5 mph or more, Truck Pro ELD will automatically update your current duty status to DRIVING and switch the app window to Driving mode.

Status change

When the vehicle has stopped moving for 5 minutes,
your duty status will automatically be set to On Duty (ON) (not driving).

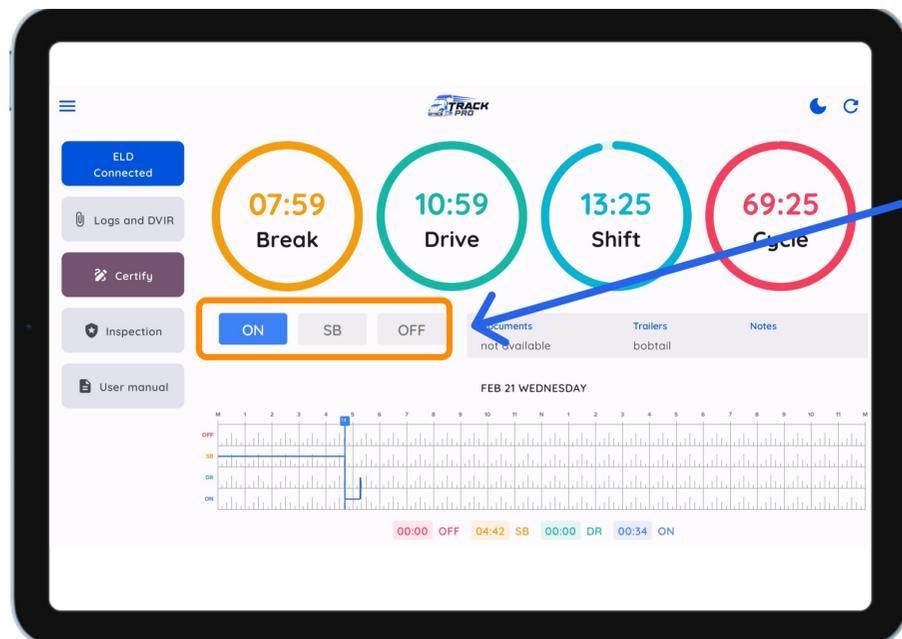


You can choose another status
depending on your situation


Fill out the form and click "Save"

A screenshot of the 'Change duty status' form. At the top, there are three buttons: 'ON', 'SB' (highlighted with an orange box), and 'OFF'. Below these are fields for 'Location', 'Notes' (with a text input area), 'Trailer' (with a dropdown menu), and 'Documents' (with a text input area). At the bottom, there are two buttons: 'Cancel' and 'Save'.


Showing Logs to Officers

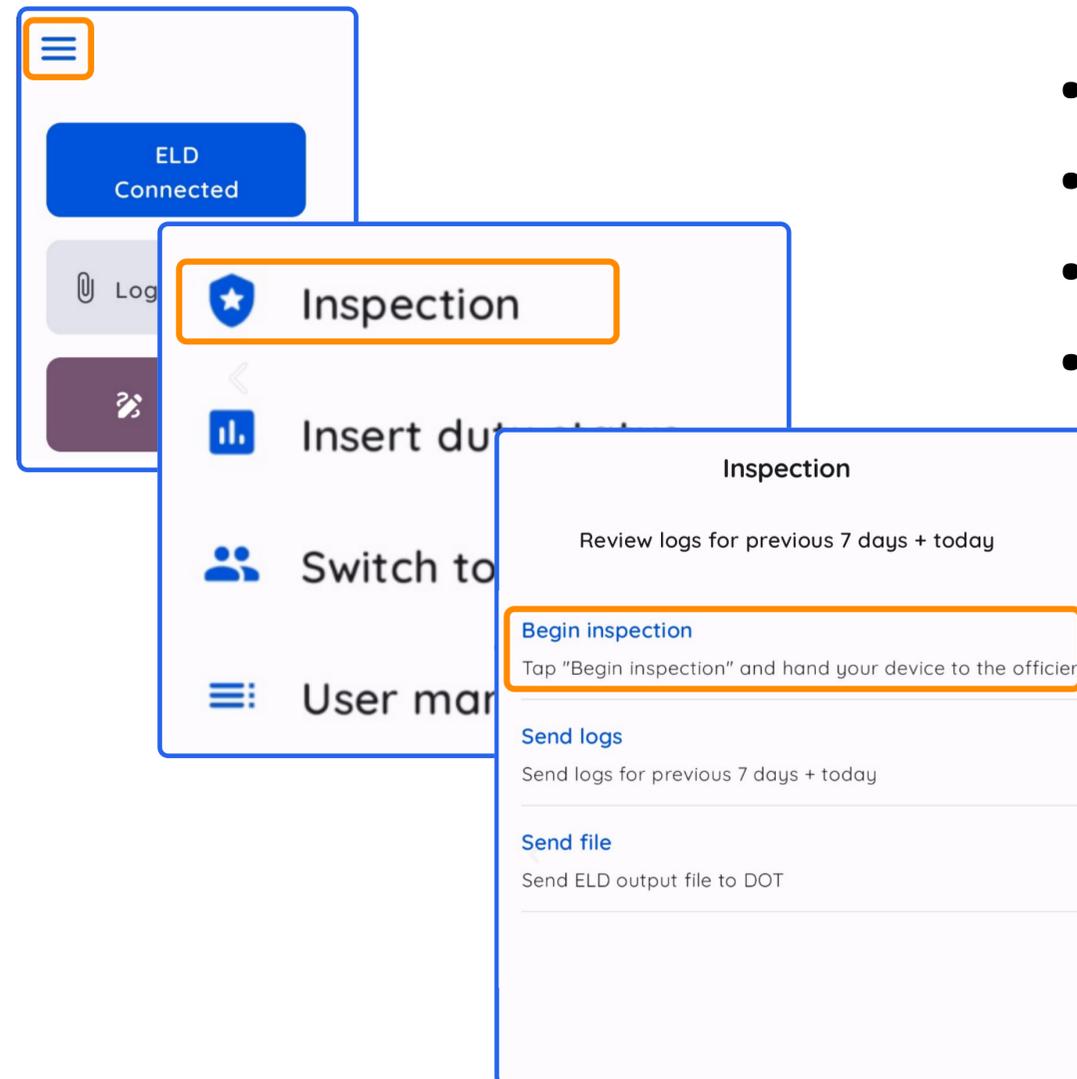


- Tap the burger menu in the top left corner
- Select “Inspection”
- Tap “Begin inspection”
- Show your 8 day summary logs to the officers

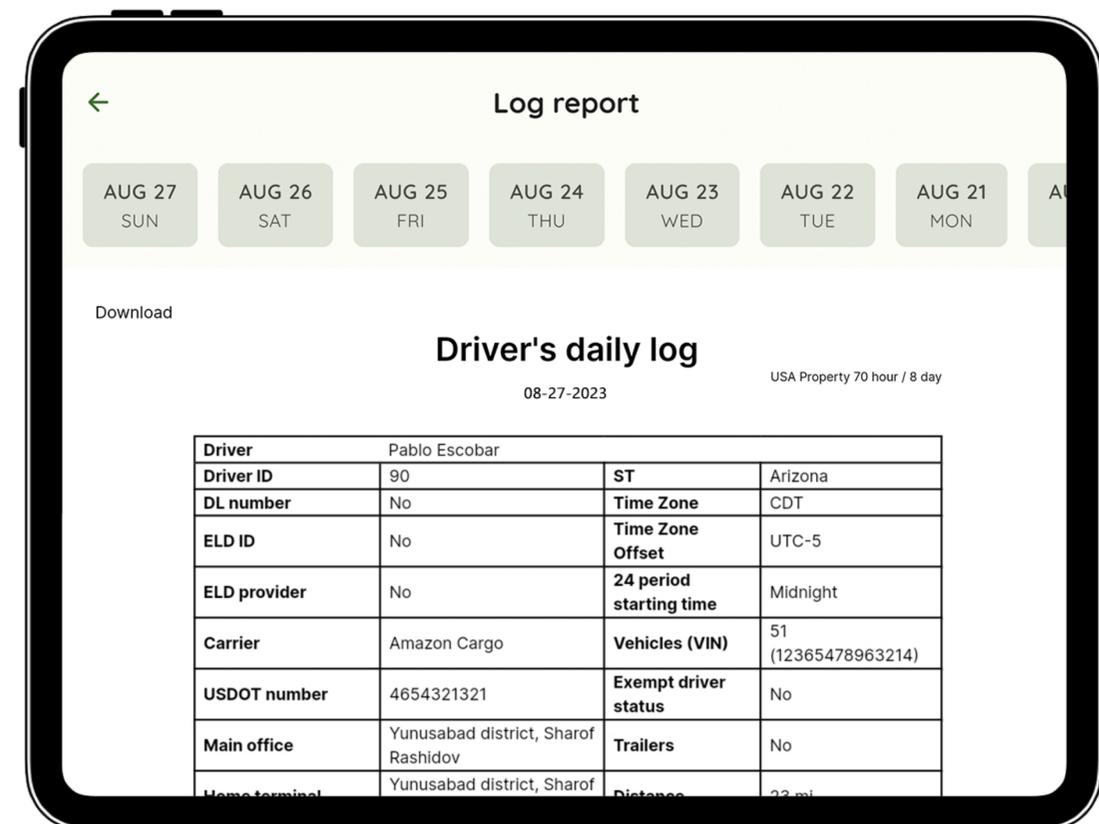


Send Logs by Email

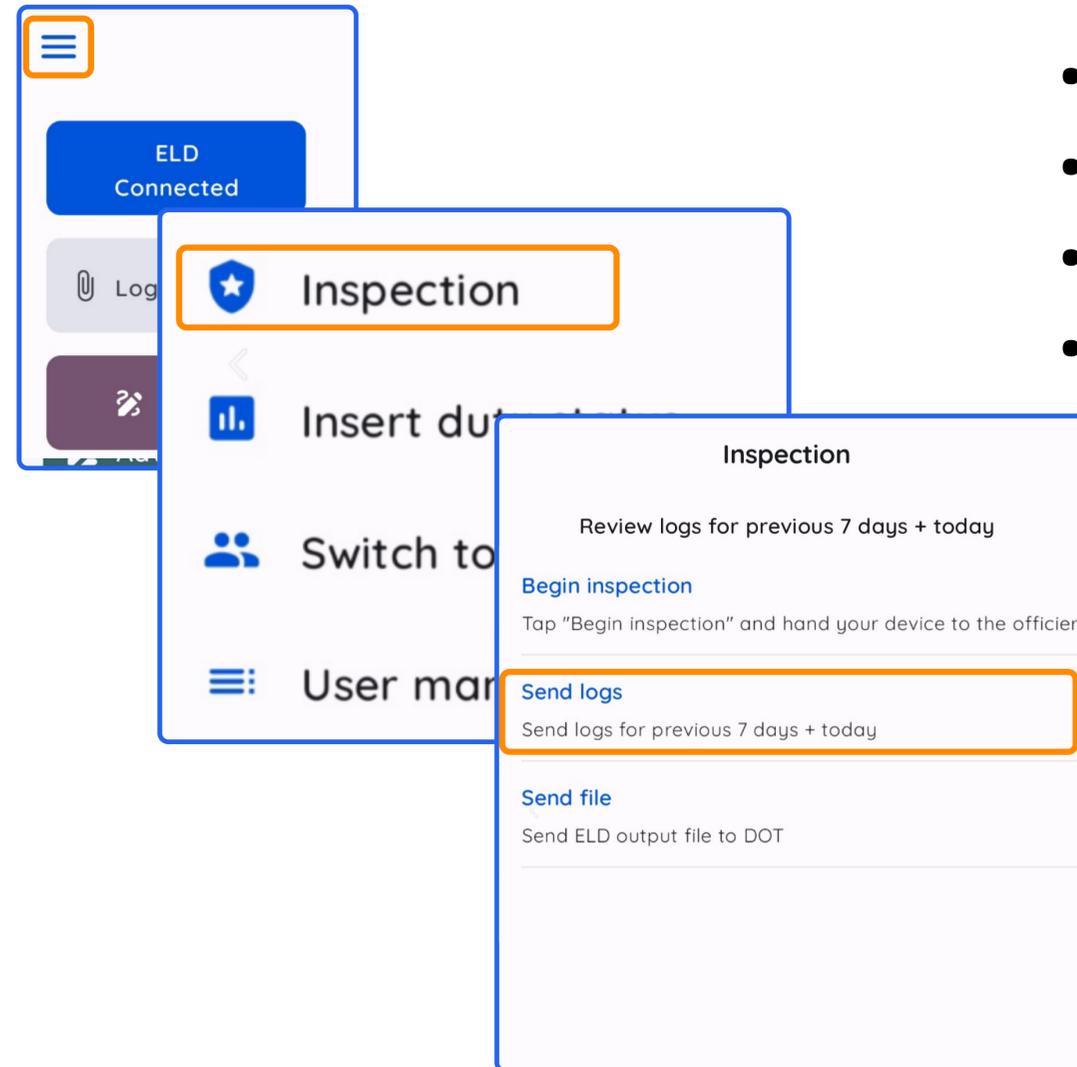


- Tap the burger menu in the top left corner
- Select “Inspection”
- Tap “Send logs”
- Enter the email and tap “Send”

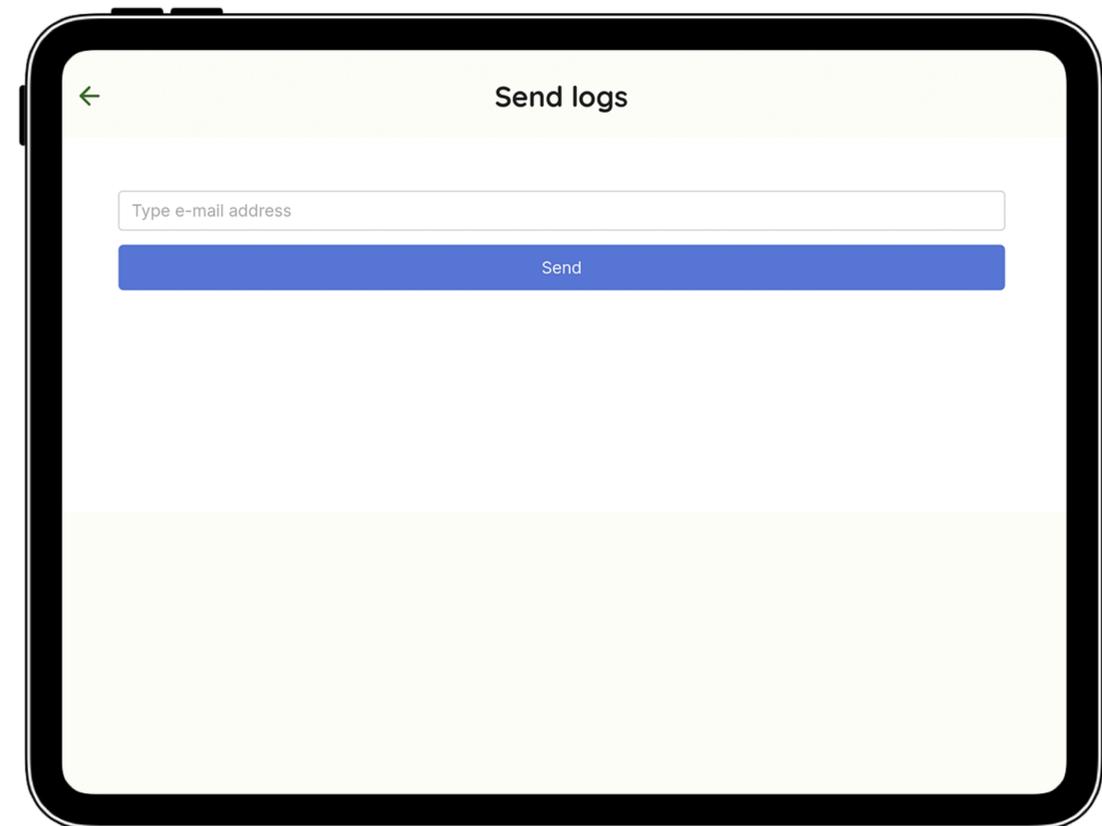


Send ELD output file to DOT

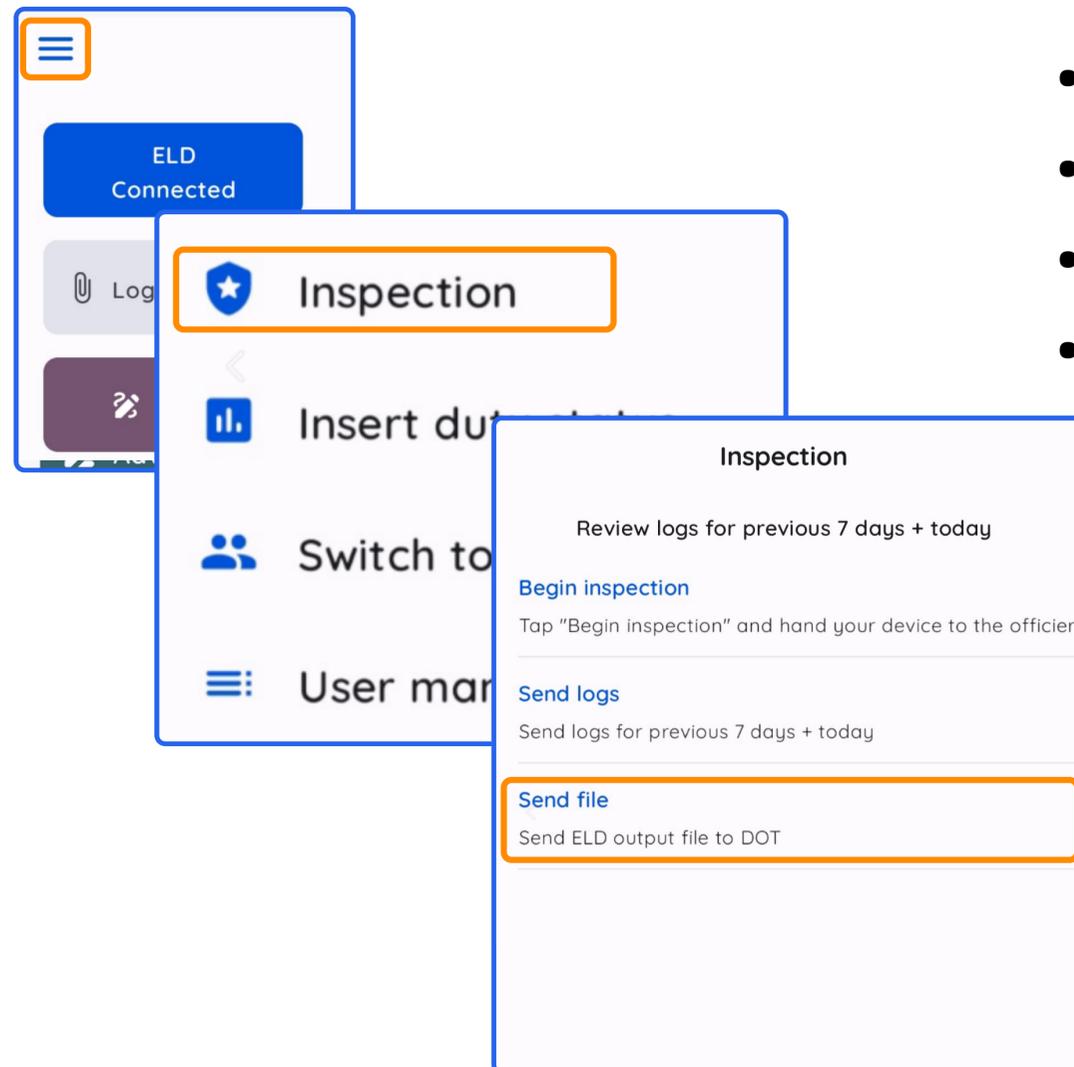


- Tap the burger menu in the top left corner
- Select “Inspection”
- Tap “Send file”
- Write your comment and tap “Send”

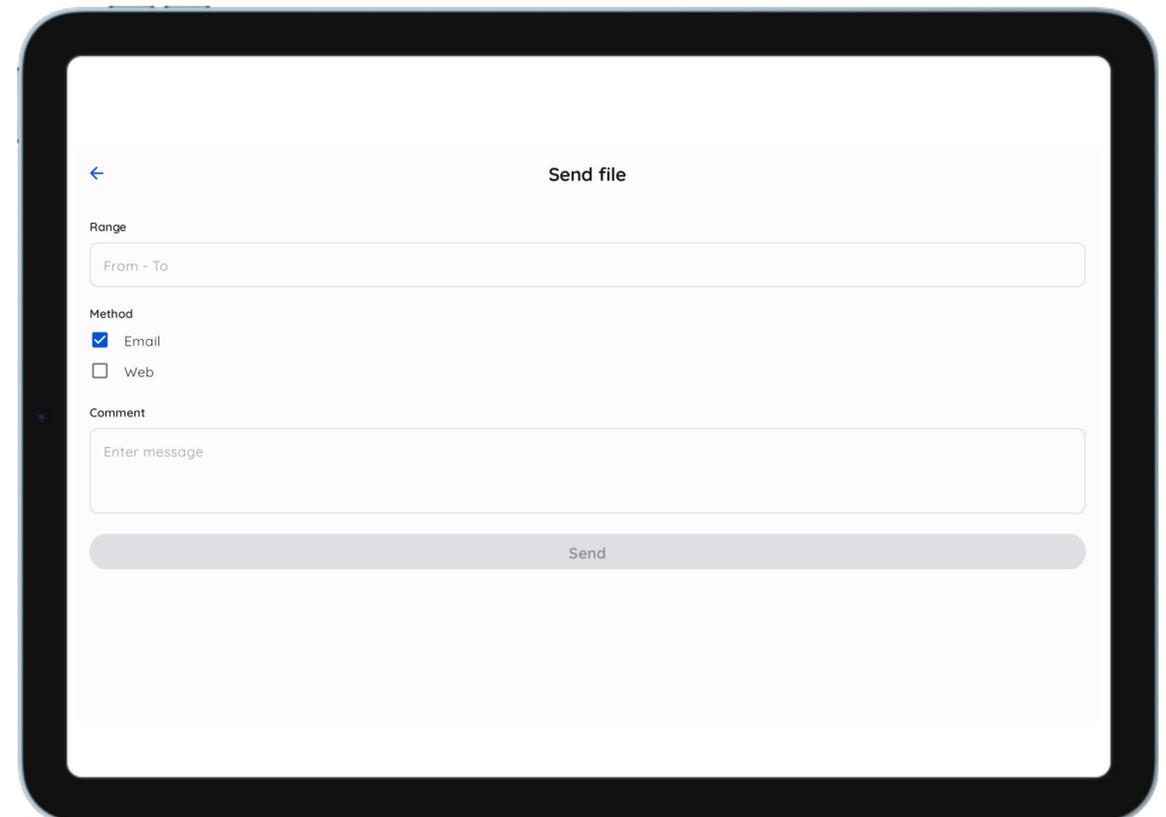

Managing Malfunctions of App

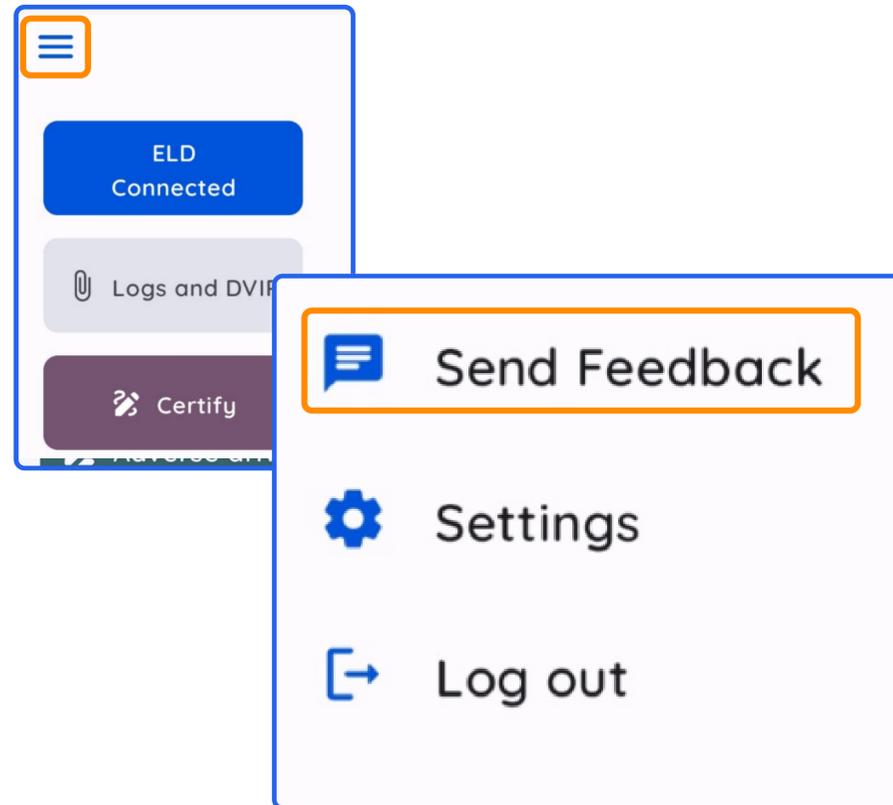

- Tap the burger menu in the top left corner
- Select “Send Feedback”
- Describe your issue and tap “Send”

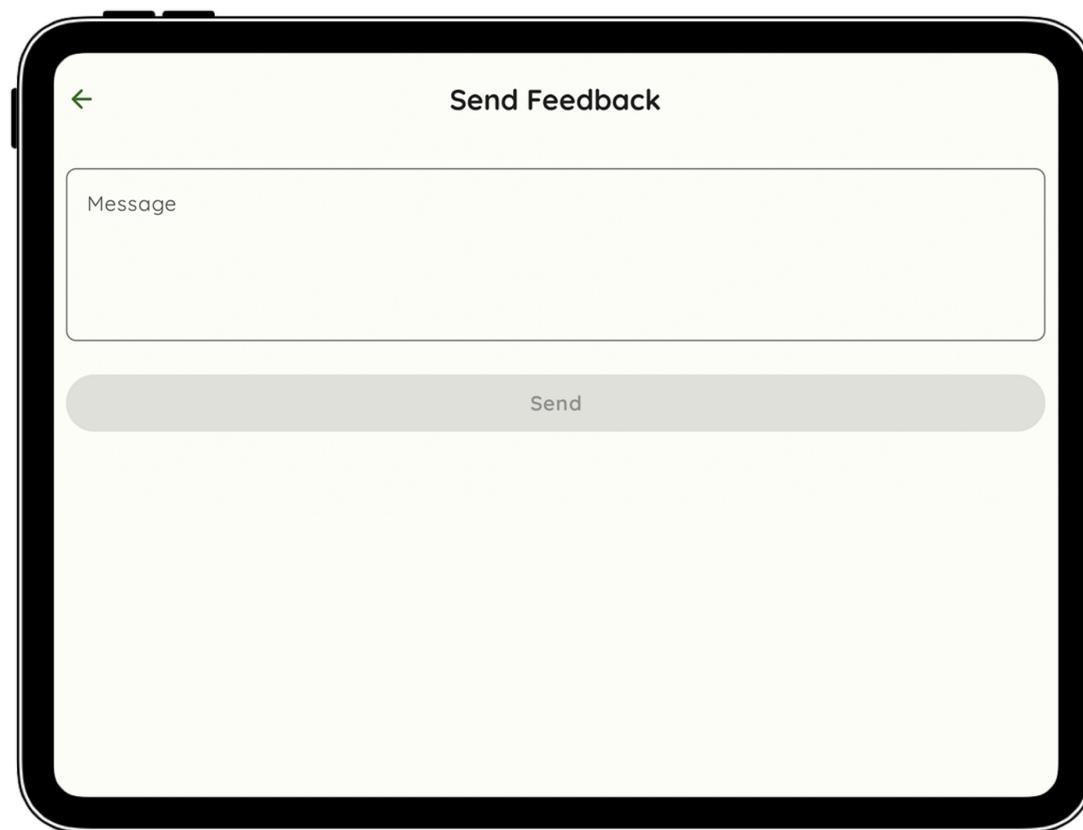

Managing Malfunctions of ELD

DRIVER (in accordance with §395.34(a)) MUST

- **Notify his motor carrier of the malfunction within 24 hours**
- **Reconstruct his records of duty status for the current 24 hours and the last seven days on graph-grid paper logs that comply with §395.8**
- **Continue to keep paper logs until the ELD is serviced and brought back into compliance**

MOTOR CARRIER MUST

- **Correct, repair, replace, or service the malfunctioning ELD within eight days of discovering the condition or a driver's notification to the motor carrier, whichever occurs first**
- **Require the driver to maintain paper RODS (record of duty status) until the ELD is back in service**

ELD malfunction codes and causes

- **P - Power Compliance** (The Vehicle Gateway was unable to read the engine's power status)
- **E - Engine synchronization** (The Vehicle Gateway was unable to read engine data such as the odometer or engine hours)
- **T - Timing Compliance** (The ELD's internal clock in the vehicle has not yet synchronized with the server that resulted in a time deviation of 10+ minutes)
- **L - Positioning Compliance** (The ELD has accumulated more than 60 minutes without a GPS lock within a 24- hour period)
- **R - Data Recording** (The ELD does not have sufficient storage capacity to record ELD events)
- **S - Data Transfer Compliance** (The ELD has failed to transfer the driver's logs to the DOT as requested during a roadside inspection)
- **O - Other detected malfunction**