 


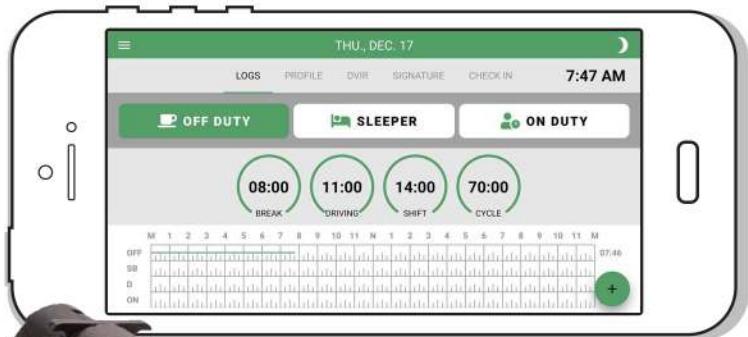

MANUAL (Android)

BLUE LINK

Per FMCSA rules, this guide must be kept in the vehicle at all times.



WEST COAST

1 World Trade Center, Ste. 2360
Long Beach, CA 90831



 
MIDWEST

17W110 22nd Street #730
Oakbrook Terrace, IL 60181


DOWNLOAD GPSTAB ELD APPLICATION



- 1 Search for **"GPSTab ELD"** in the Google Play store (picture 1).
- 2 Tap **INSTALL** to download the app (picture 2).

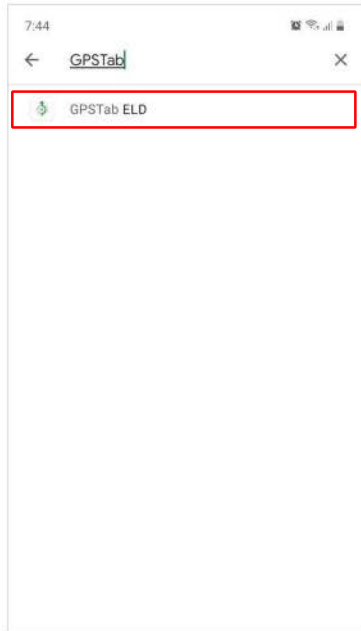


picture 1

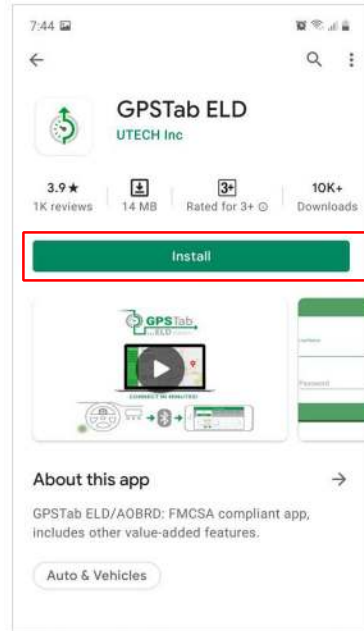 


picture 2

 - 3 Log into application using your User Name and Password (picture 3). If you don't have a GPSTab ELD account, please contact your fleet manager.

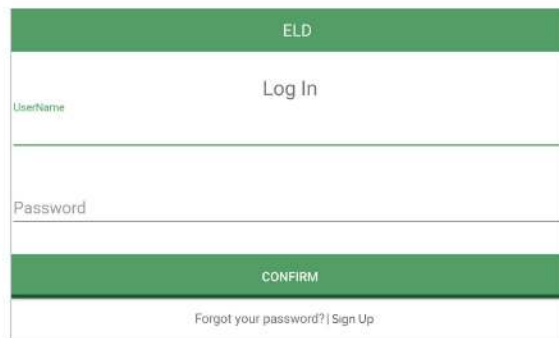


picture 3

 - 4 Select your vehicle from the list (picture 4). If your vehicle number is not listed, please contact your fleet manager.

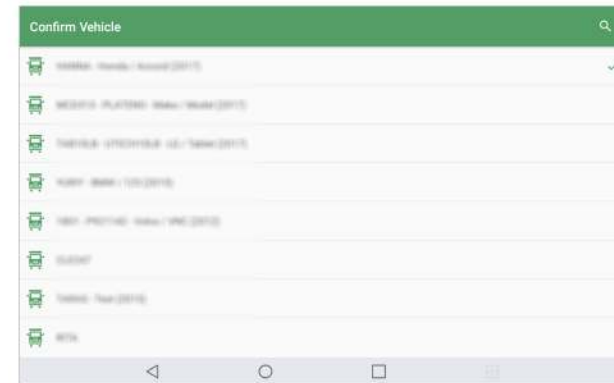


picture 4

 - 5 Your cellular device will connect to the ELD system automatically. The status will be shown at the top of the main screen (picture 5).

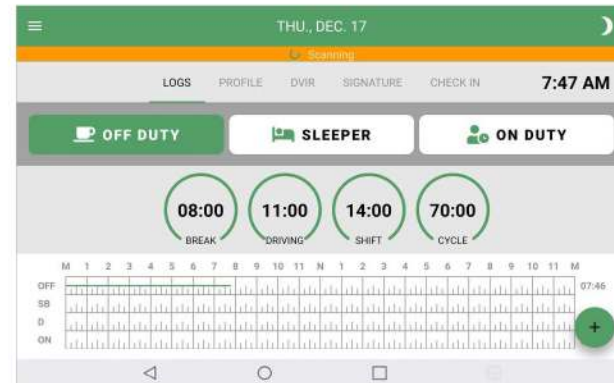

picture 5

 - 6 The status line will appear in 3 ways:



[device is scanning] [device is connecting] [device can't connect]

Note: when the device is properly connected, the status line will not show.

INSTALL GPSTAB ELD IN YOUR VEHICLE



1 Make sure your vehicle engine is turned off. If the engine is on, please turn it off and turn the key to the "Off" position before connecting ELD device.

2 Locate the diagnostic port inside your vehicle's cabin. The diagnostic port is typically located in one of the following places:

- 1 Under the left side of the dashboard;
- 2 Under the steering wheel;
- 3 Near the driver's seat;
- 4 Under the driver's seat.






3 Attach the GPSTab ELD plug into the diagnostic port of the vehicle. Twist the plug base until it locks into place.



4 Once plugged in, the device will start syncing with the ECM and the GPSTab ELD application on cellular device. The GPSTab ELD device has LED lights to simply indicate its status to the driver:

BLUE LINK DEVICE

 
-  **No Light**
The device is **Not Plugged** into the truck's diagnostic port
-  **Blinking Blue**
The adapter is waiting for the App to connect
-  **Solid Blue**
The App is Connected and the Adapter is Receiving ECM data



USING GPSTAB ELD ON THE ROAD


Once you have connected your mobile device to GPSTab ELD, your driving time will be automatically recorded.

When your vehicle begins moving at a speed of 5 mph, your duty status will automatically be set to "Driving". (picture 6).

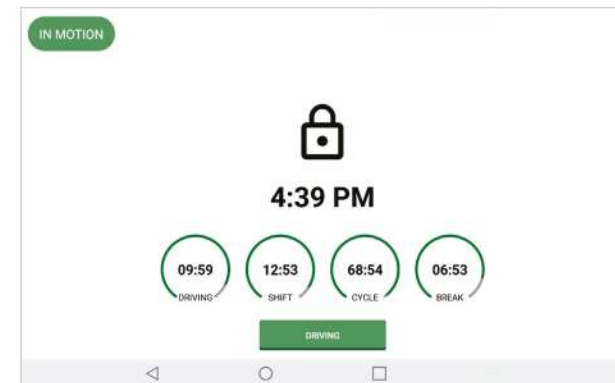

picture 6

 At 0 mph the vehicle is considered to "Idle". When "Idle", you can change your duty status by tapping and selecting one of the alternative duty status (picture 7).

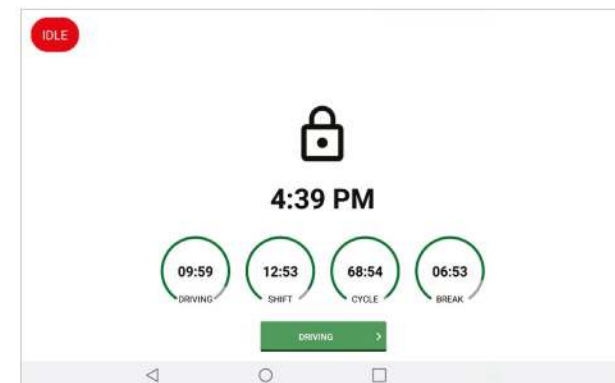


picture 7

USING GPSTAB ELD ON THE ROAD (CONTINUED)




 If the vehicle remains **idle** for 5 min, a pop-up window will appear asking if you would like to change your duty status. If no selection is made within 60 seconds, duty status will change automatically to "OnDuty" (**picture 8**).

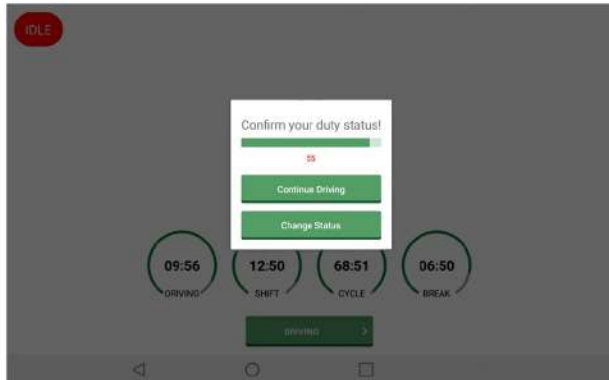

Picture 8

 When not driving, the main window will be in foreground (**Picture 9**).

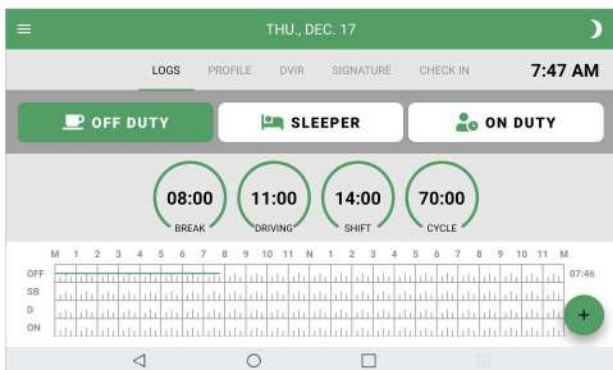


Picture 9

USING GPSTAB ELD OFF THE ROAD


Changes in status are made from the main screen.

 - change the status, OFF DUTY, SLEEPER, ON DUTY. (**picture 10**)

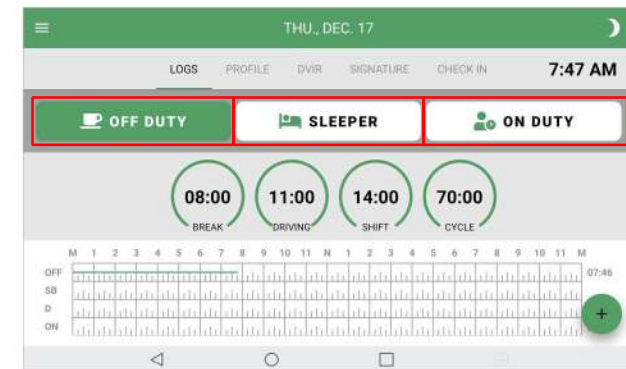

Picture 10

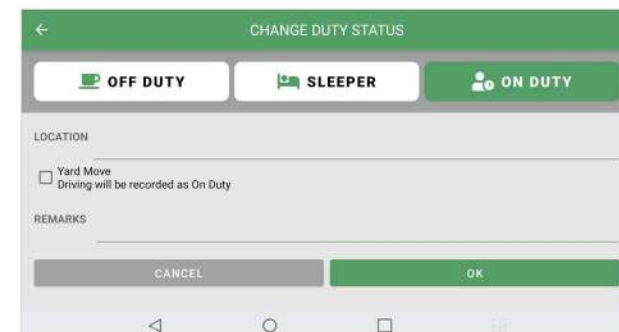 

Fill out the location field and put remarks, such as "Pre-trip inspection" or "Coffee break" (if the location field is left empty, it will be automatically) (**picture 11**).




Picture 11

USING GPSTAB ELD OFF THE ROAD (CONTINUED)




 Insert missing status (“On Duty”, “Sleeper” or “Off Duty”) by tapping  or edit existing status by tapping  if any corrections are needed (picture 12).

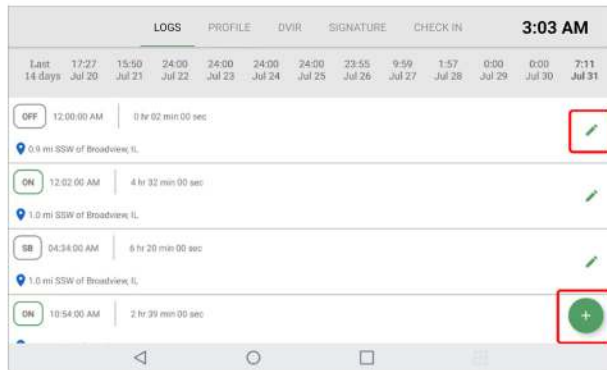

picture 12

 
Choose the status you want to change and set the time frame (picture 13).

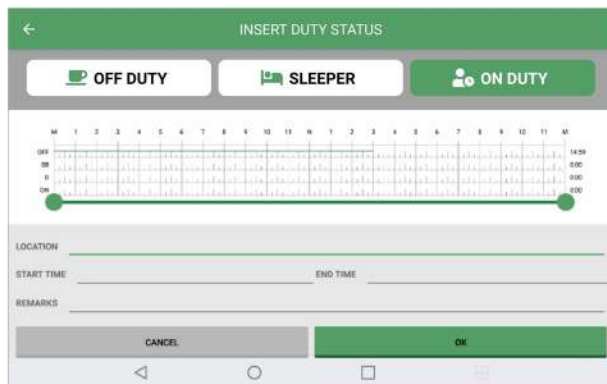

picture 13


There are two ways you can set the time frame:

 1. Drag the border dots (picture 14).

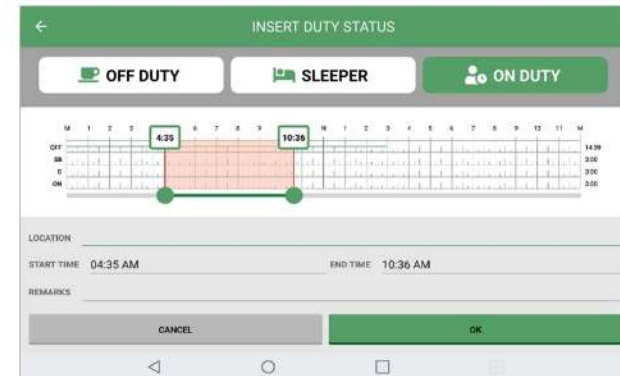

picture 14

 2. Set the time using the pop-up window (picture 15).

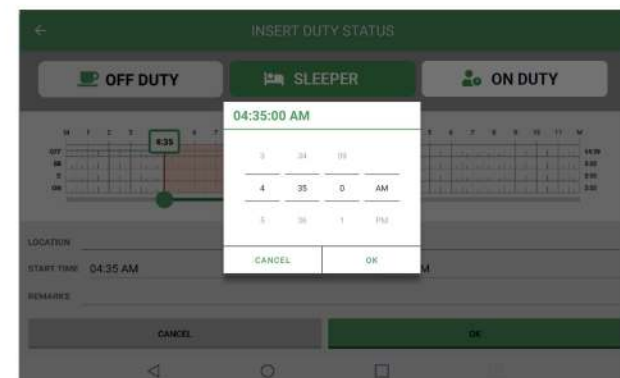

picture 15

Other options available from the main screen:

- a Check your profile, (picture 16-A)
- b Sign your daily electronic log-book, (picture 16-B)



picture 16-A




picture 16-B

- c Make a Driver Vehicle inspection report [DVIR], (picture 17-A, 17-B)



 picture 17-A

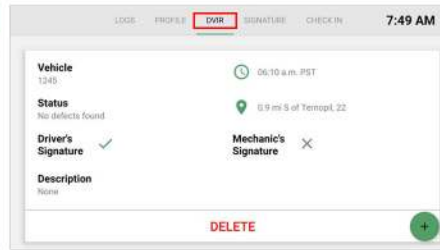

picture 17-B

- d Check in & check out (Track detention time for pick up and delivery). (picture 18-A, 18-B)



picture 18-A




picture 18-B

OFFICER INSPECTION


It's easy to provide an officer with your driving information.

- 1 Tap icon on the top left corner, or swipe from left side of your device to the right side and select "Inspection Module" (picture 19).

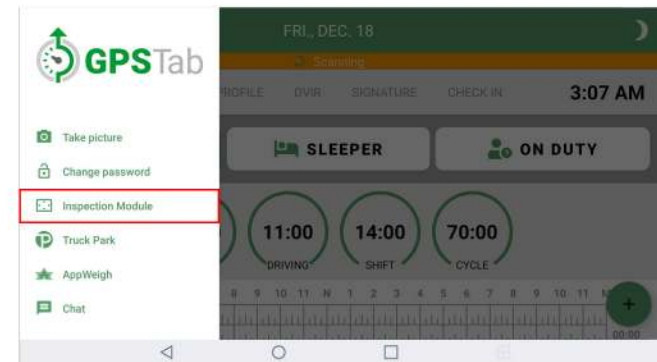 


picture 19

 - 2 Tap "Begin Inspection" and hand your device to the officer (picture 21). and/or tap "Send Logs" to send the report through email. (picture 21).

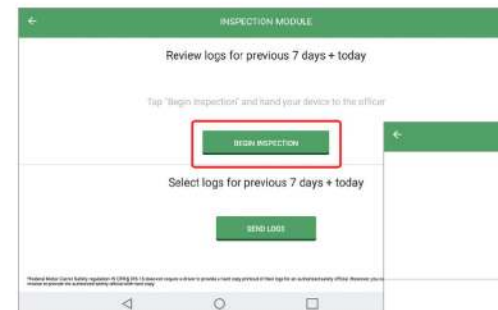

picture 20

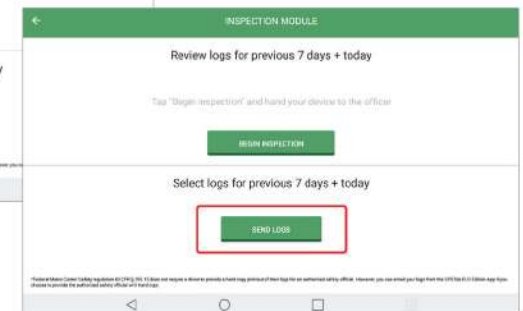 


picture 21

OFFICER INSPECTION (CONTINUED)



 The application will generate the report for the officer (picture 22).

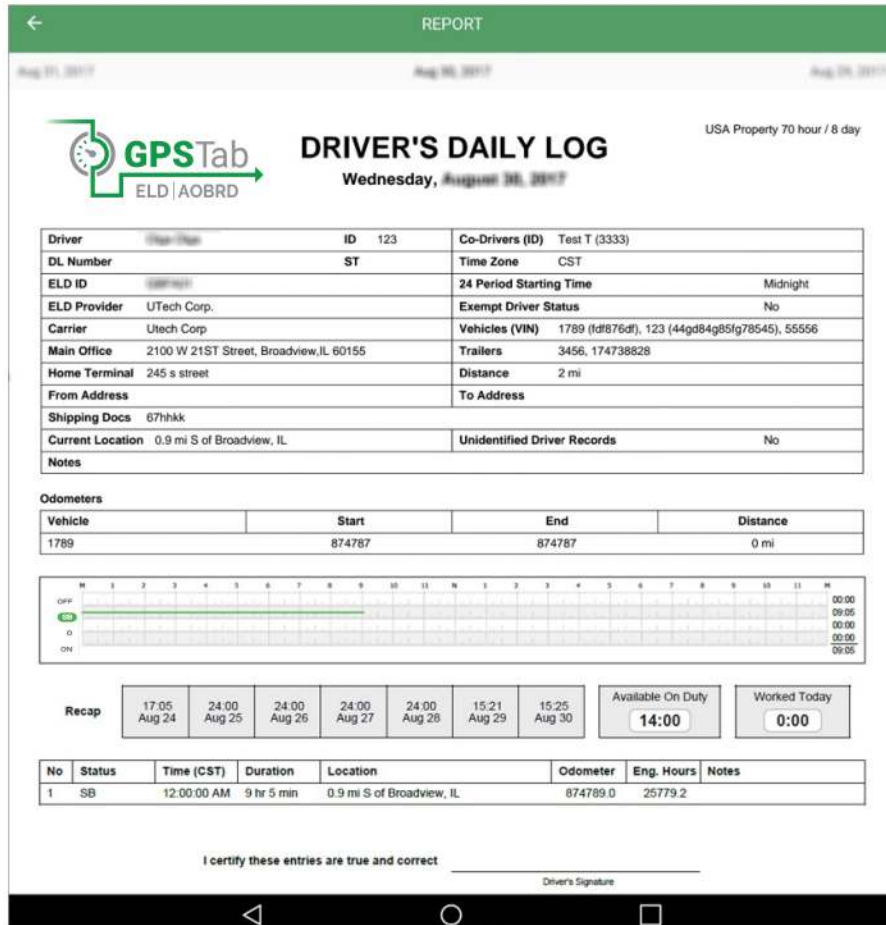


picture 22

Tap on the top left corner to exit DOT inspection.

**Federal Motor Carrier Safety regulation 49 CFR §395.15 does not require a driver to provide a hard copy printout of their logs for an authorized safety official. However, you can email your logs from the GPSTab ELD Edition App should you choose to provide the authorized safety official with a hard copy.*

SETTINGS

 Choose "Settings" from the side menu to change sound settings, violations visibility, or the type of your plug (picture 23).

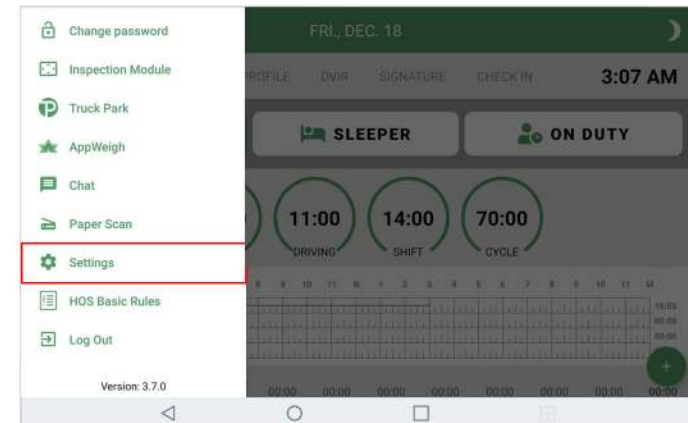

picture 23

Move toggle to the right to turn on an option, or to the left to turn it off (picture 24).



picture 24

ELD MALFUNCTION MANUAL



§ 395.22 Motor Carrier Responsibilities

A motor carrier must ensure that its drivers possess onboard a commercial motor vehicle and ELD information packet containing the following items:

An instruction sheet for the driver describing ELD malfunction reporting requirements and recordkeeping procedures during ELD malfunctions.

The following instructions are in accordance with the guidelines set forth in § 395.34

How does the driver know if GPSTab ELD is malfunctioning?

The GPSTab ELD device has LED lights to **simply indicate its status** to the driver.

DURING INSTALLATION

● Device **Not Plugged** into the truck's diagnostic port.



◐ **Blinking Green**
The Adapter is waiting for the App to connect.



DURING ELD OPERATION

This applies when the Adapter is recording data.

✓ ● **Slowly Blinking Green**
The App is **Connected** and the Adapter is **Receiving** ECM data.



● Device **Not Plugged** into the truck's diagnostic port.

◐ **Blinking Green**
The Adapter is waiting for the App to connect.

ELD MALFUNCTIONS (CONTINUED)



GPSTab ELD will monitor and report malfunction data based on section 4.6 ELD's Self-Monitoring of Required Functions table 4:

P - "Power compliance" malfunction,

E - "Engine synchronization compliance" malfunction,

T - "Timing compliance" malfunction,

L - "Positioning compliance" malfunction,

R - "Data recording compliance" malfunction,

S - "Data transfer compliance" malfunction,

O - "Other" ELD detected malfunction.

What does the driver need to do if the ELD is malfunctioning?

- 1 Contact UTECH support immediately after discovering a malfunction at **888 228 4460** or email **support@help24.us** to troubleshoot the issue.
- 2 Provide written notice to your fleet management within 24 hours of malfunction discovery.
- 3 Keep a paper log for that day and until ELD is repaired or replaced.

What does the fleet need to do if the ELD is malfunctioning?

- 1 A motor carrier must take action to correct the malfunction of the ELD within 8 days of discovery of the malfunction or a driver's notification to the motor carrier, whichever occurs first.
- 2 Upon notification by fleet manager, UTECH will send a new device
- 3 If a motor carrier needs a time extension, they must notify the FMCSA Division Administrator for the State of the motor carrier's principal place of business within 5 days after a driver notifies the motor carrier according to the guidelines set forth in § 395.34 (2).



MANUAL

WEST COAST

1 World Trade Center, Ste. 2360
Long Beach, CA 90831



MIDWEST

17W110 22nd Street #730
Oakbrook Terrace, IL 60181