



Instruction Manual for Drivers



Important: Per FMCSA rules, this guide must be kept in the vehicle at all times.

Table of Contents

Installation & Recording Driving Time

Install the KeepTruckin ELD in your vehicle	3
Download the KeepTruckin App	5
Login to the KeepTruckin App	5
Connect your mobile device to the KeepTruckin ELD	6
Record Hours of Service with the KeepTruckin ELD	7
Let an officer inspect your logs	8

Troubleshooting

Trouble connecting with the ELD	9
ELD malfunction	10


Please read this Safety Manual before installing the KeepTruckin ELD in your vehicle.

Install the KeepTruckin ELD in your vehicle


01 With the engine off, locate the diagnostic port inside the vehicle. The diagnostic port is generally located in one of four places:

1. Underneath the left side of the dash
2. Underneath the steering wheel
3. Near the driver's left kick panel
4. Below the driver's seat


For installation video and other details please visit support.keeptruckin.com

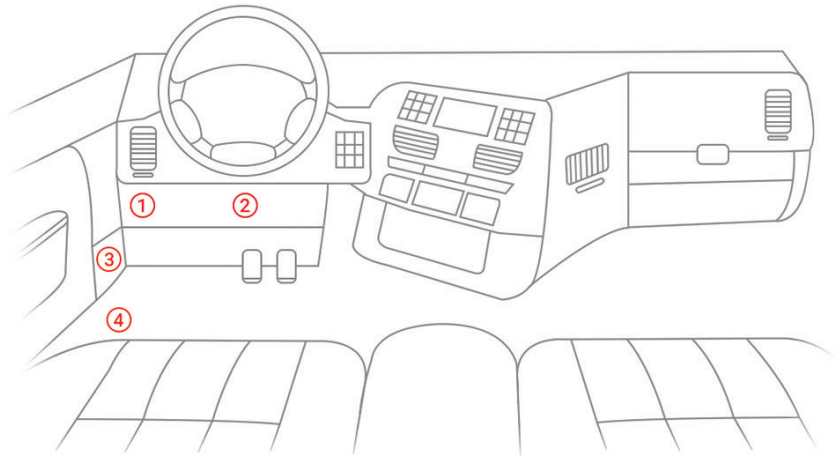

02 Attach the 9-pin, 6-pin or OBDII cable to the diagnostic port of the vehicle.

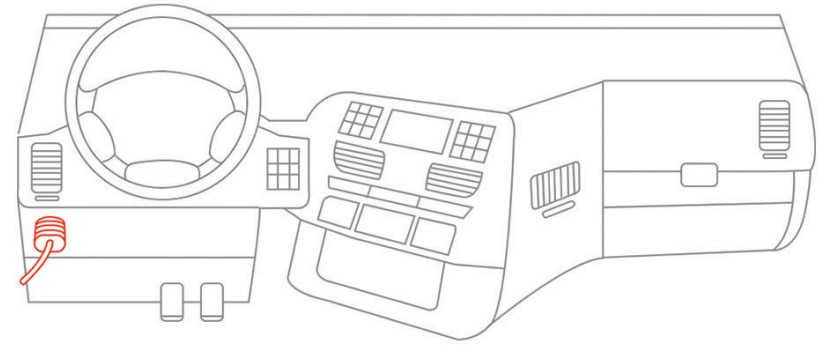


03 Attach the other side of the cable to the KeepTruckin ELD. Screw down the thumbscrews on the 15-pin connector to secure the cable to the ELD.

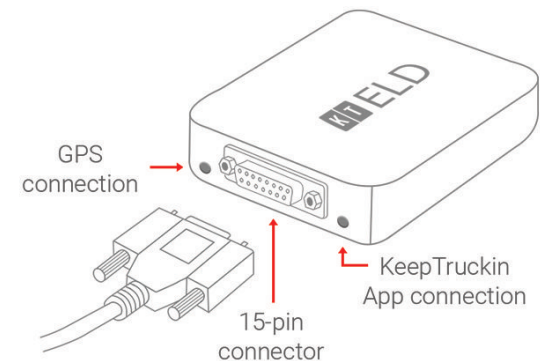


Please read this Safety Manual before installing the KeepTruckin ELD in your vehicle.

Install the KeepTruckin ELD in your vehicle

- 04** Once plugged in, the indicator lights will flash momentarily before turning solid red. After approximately one minute, the left-side indicator light will turn green, indicating a successful GPS connection. If this does not occur, try moving the ELD to increase exposure to the sky.

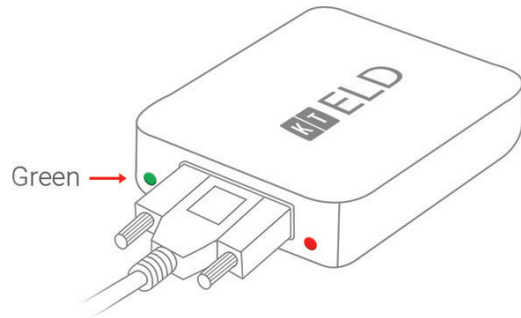


- 05** Choose a spot on the top of the dashboard to mount your ELD. The mounting spot should be near the windshield, but away from any vents or electrical components that may cause interference.

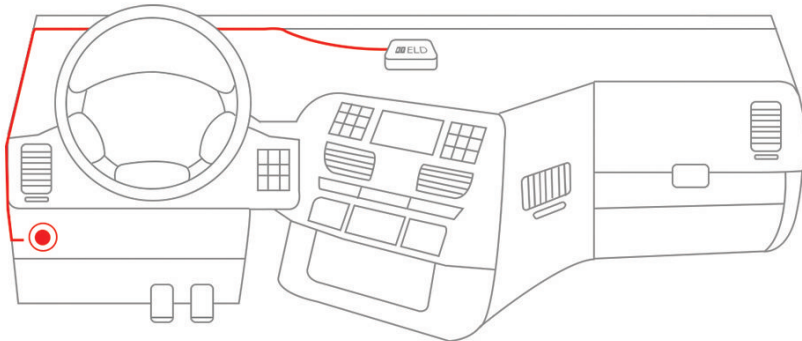


- 06** Before you mount the ELD, use the provided alcohol swab to clean the mounting area.

- 07** Remove the backing from the adhesive strip and mount the ELD to the cleaned area.

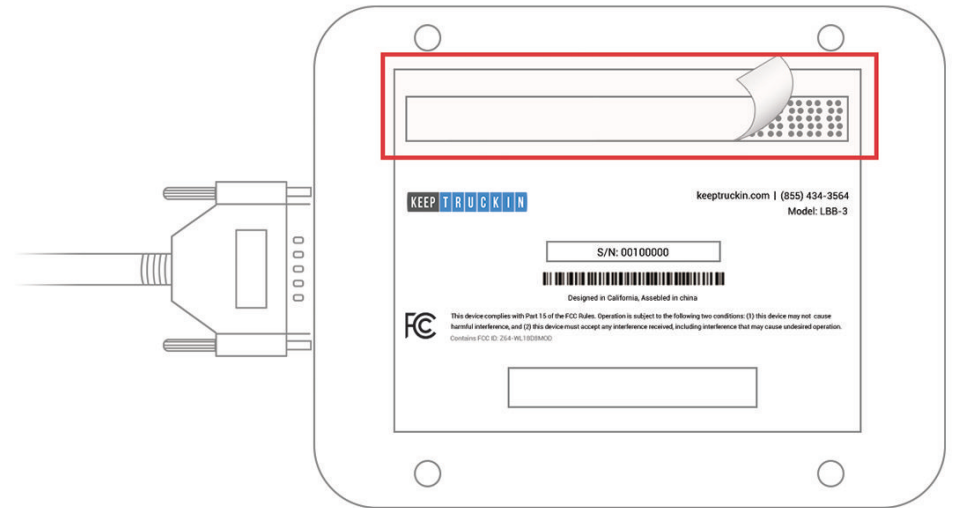


Download the KeepTruckin App

- 01** For **Android phones and tablets**, download the KeepTruckin App from the Google Play Store.

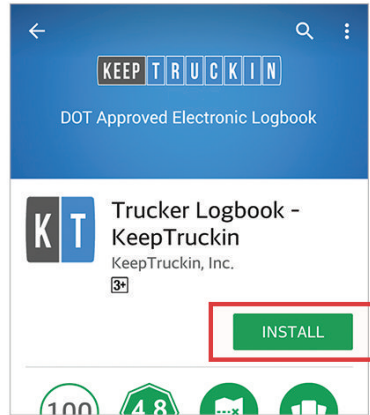


For **iPhones and iPads**, download the KeepTruckin App from the App Store.

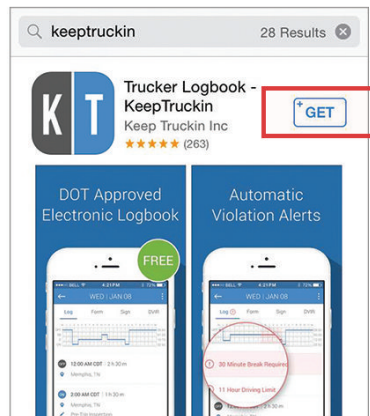


Login to the KeepTruckin App

- 01** Open the KeepTruckin App and select .

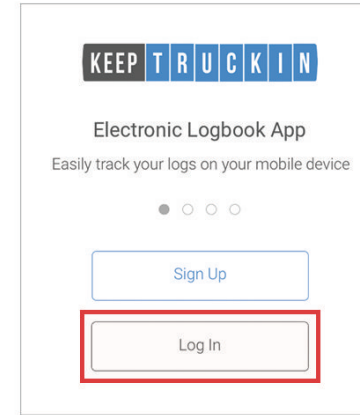


- 02** Enter your email / username and password. If you do not have a KeepTruckin account, contact your fleet manager.

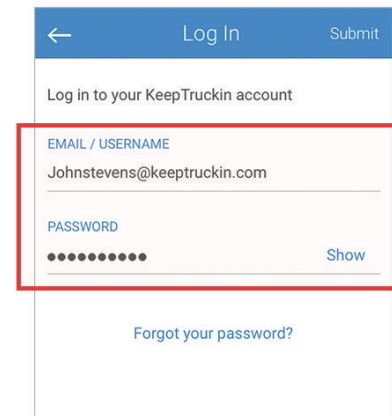


Connect your mobile device to the KeepTruckin ELD

01 On the main **Logs** screen, tap  to connect with your vehicle's ELD.

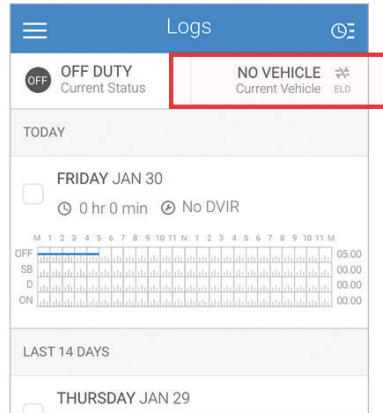



03 Your device will automatically attempt to connect to the vehicle's ELD using Bluetooth.

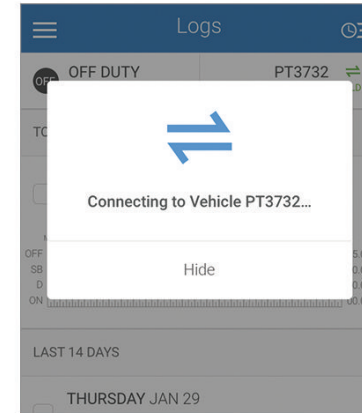


02 A list of your company's vehicles will appear. Select the vehicle that you want to connect to.

Please ensure that Bluetooth is enabled on your device before you connect to the KeepTruckin ELD.

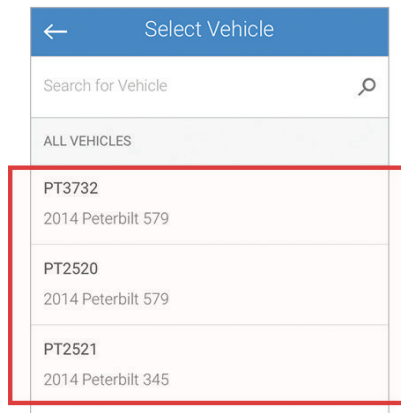


04 A green icon  will appear at the top right of the main **Logs** screen to indicate a successful connection.

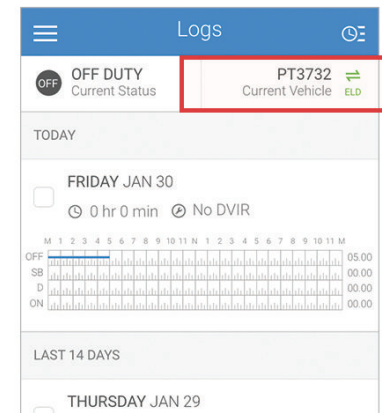


Record Hours of Service with the KeepTruckin ELD


- 01** When your vehicle is moving at 5 MPH or greater, KeepTruckin considers the vehicle to be **IN MOTION** and your duty status will automatically be set to **Driving**.

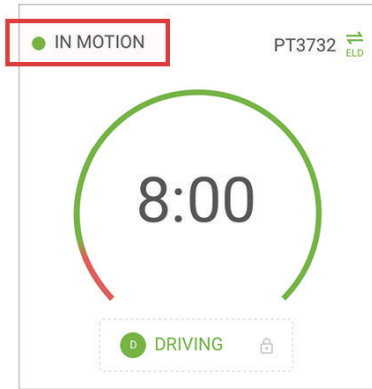


- 03** When **STATIONARY**, you can change your duty status by tapping **DRIVING** and selecting one of the alternate duty statuses listed.

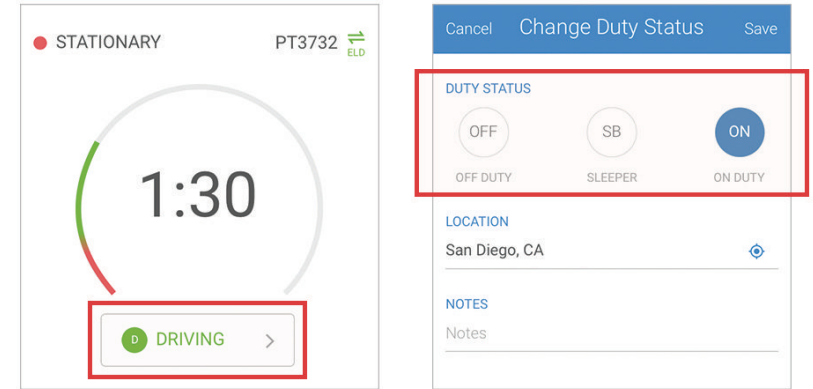


- 02** At 0 MPH, the vehicle is considered **STATIONARY**.

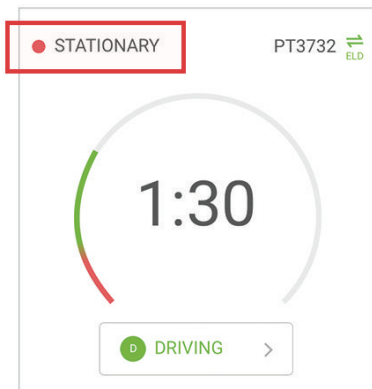


- 04** If the vehicle remains **STATIONARY** for five minutes, a pop-up window will appear that asks if you would like to change your duty status. If nothing is selected, your duty status will automatically be changed to **On Duty**.

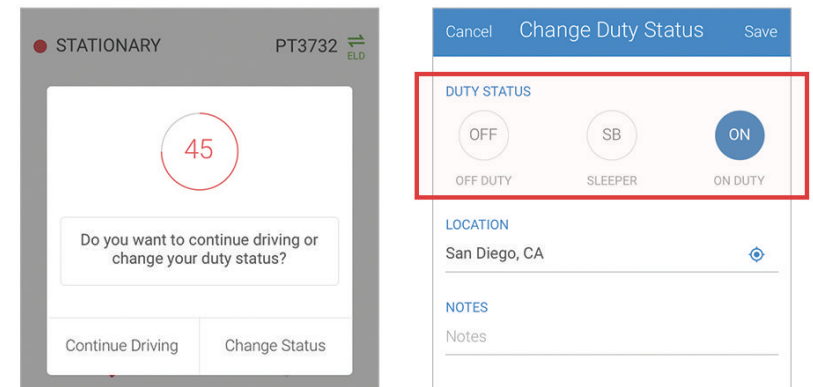


Let an officer inspect your logs


- 01** Tap on the menu  icon select the DOT Inspection Mode from the menu.

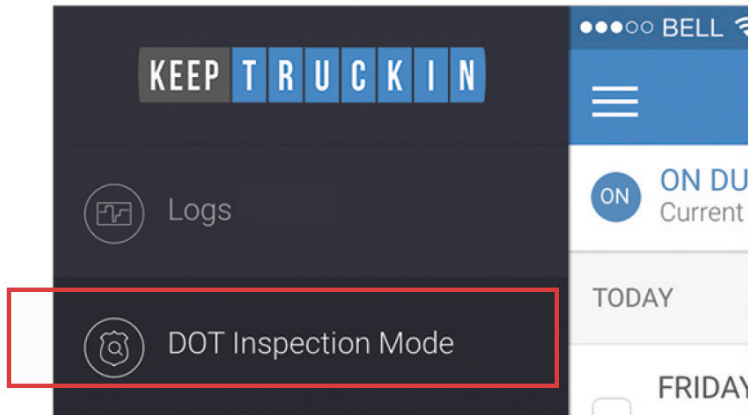


- 02** To let an officer inspect your logs directly from your device, tap **Begin Inspection**.

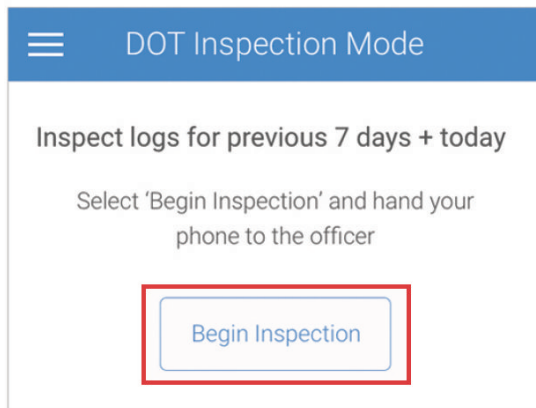


- 03** To send your ELD output file to the DOT via email or web service, tap **Send Output File**.

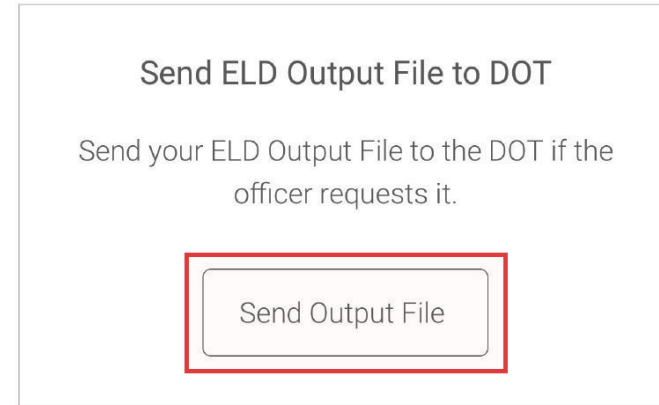



- 04** To email or fax a copy of your logs to an officer, tap **Send Logs**.

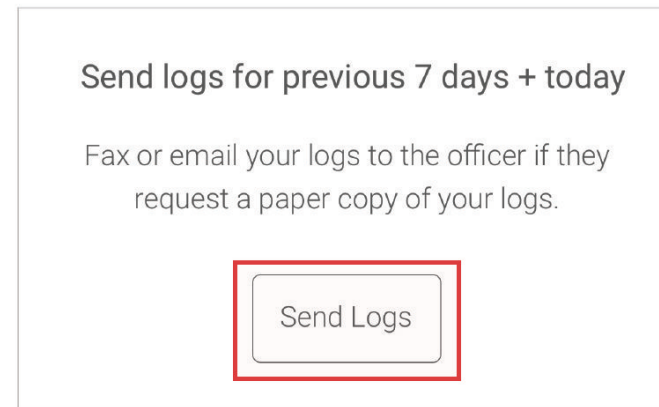


Trouble connecting with the ELD


01 Tap on the  in the upper right of the KeepTruckin App. If there is a currently selected vehicle tap on **Leave Vehicle**. Then reselect the vehicle you're attempting to connect with. If a pairing request dialog appears on screen or in the system tray, select the option to pair with the ELD. Wait 30 seconds when the connecting to vehicle dialog appears on screen. If it doesn't connect after 30 seconds, tap **Hide** and move on to the next step.

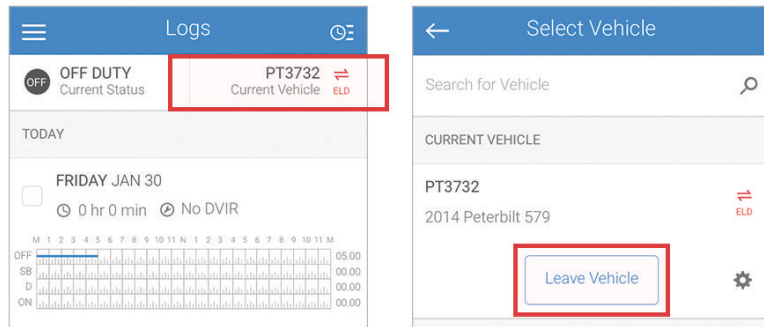


02 Tap on the  in the upper right of the KeepTruckin App. If there is a currently selected vehicle tap on **Leave Vehicle**. Toggle your phone or tablet **Bluetooth** connection off and back on. Once Bluetooth has been turned back on go ahead and reselect the vehicle you're attempting to connect with. Be sure to wait 30 seconds once the **Connecting to Vehicle** dialog appears on screen like before.

If you are still unable to connect after 30 seconds, tap **Hide** and move on to the next step.

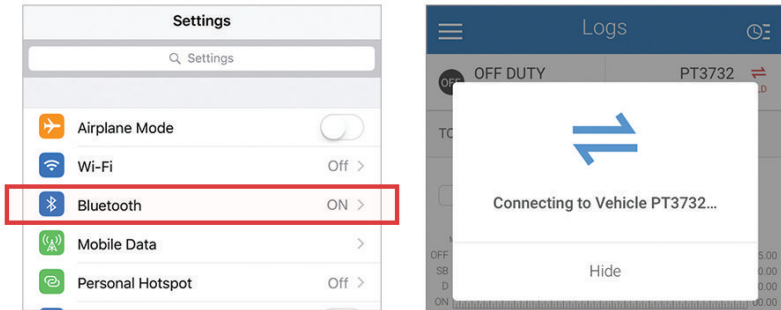

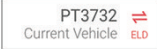03 Tap on the  in the upper right of the KeepTruckin App. If there is a currently selected vehicle tap on **Leave Vehicle**. Unplug the ELD from your vehicle and wait for the lights to go off. Reboot your phone or tablet then plug the ELD back in. Once the ELD lights are back on, try connecting to your vehicle again like before.

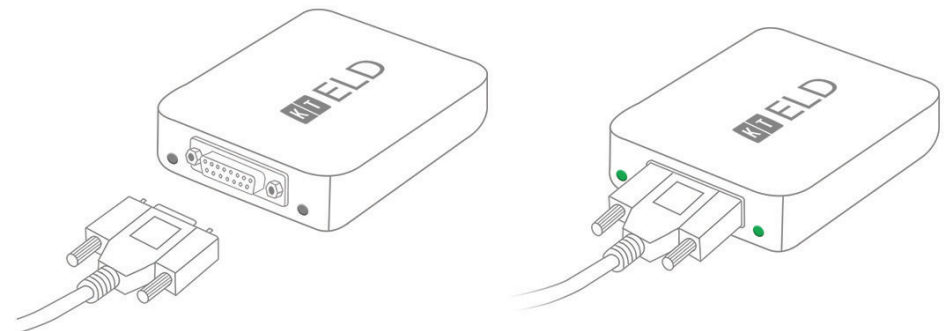

ELD malfunction

§ 395.22 Motor carrier responsibilities—In general.


(h) In-vehicle information. A motor carrier must ensure that its drivers possess onboard a commercial motor vehicle an ELD information packet containing the following items:

3. An instruction sheet for the driver describing ELD malfunction reporting requirements and recordkeeping procedures during ELD malfunctions.


The following instructions are in accordance with the guidelines set forth in § 395.34:

How does the driver know if the ELD is malfunctioning?

Neither of the LED lights on the device are turned on (neither green nor red) when the device is plugged into the truck's diagnostic port and power is flowing to it.

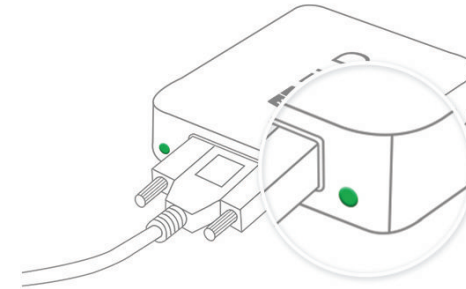

Functioning (Lights On)

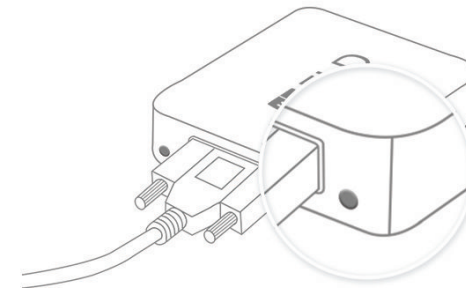

Malfunctioning (Lights Off)

ELD malfunction

What does the driver need to do if the ELD is malfunctioning?

- 01** Immediately contact KeepTruckin support at **855-434-3564** or **support@keeptruckin.com** to troubleshoot the issue.
- 02** Note the malfunction and provide written notice to your fleet within 24 hours.
- 03** Keep a paper log for that day and until ELD is repaired or replaced. In the event of an inspection, display the previous 7 days logs from the KeepTruckin App.

What does the fleet need to do if the ELD is malfunctioning?

- 01** If a motor carrier receives or discovers information concerning the malfunction of an ELD, the motor carrier must take actions to correct the malfunction of the ELD within 8 days of discovery of the condition or a driver's notification to the motor carrier, whichever occurs first.
- 02** In the event of an ELD malfunction, KeepTruckin will send a new device upon notification from a Fleet Administrator.
- 03** If a motor carrier needs a time extension, they must notify the FMCSA Division Administrator for the State of the motor carrier's principal place of business within 5 days after a driver notifies the motor carrier according to the guidelines set forth in § 395.34(2).



Visit our Support Center
support.keeptruckin.com



Call KeepTruckin Support
(855) 434-3564



Email KeepTruckin Support
support@keeptruckin.com

Designed in California, Assembled in China



BK-R03