



Simpletruckeld App – User Manual



Simpletruckeld APP User Manual



Simpletruckeld App – User Manual

Contents




1. Login Credentials	5
1.1 Enter Login Credentials	5
1.2 Forgot Password?	7
2. Menu Navigation.....	9
3. Driver Mode	11
3.1 Select Driver Mode - Default.....	11
3.2 Select Driver Mode – Personal Use	14
3.3 Select Driver Mode – Yard Moves	16
4. Self Inspect	18
The Simpletruckeld app, allows the driver to self-inspect his cloaked in hours.	18
4.1 Status Log.....	19
4.2 Change Driver	21
4.3 Unidentified	21



Login Credentials

 
1.1 Enter Login Credentials

► How to enter Login Credentials

1. Enter your user id against  .
2. Enter the password against  . The entered password will not be displayed.
3. To display the entered password, click on  .
4. Check the **Remember Me** check box, to automatically display the password the next time you login.
5. Click on **Login** button to login into the ELD app.



Simpletruckeld App – User Manual

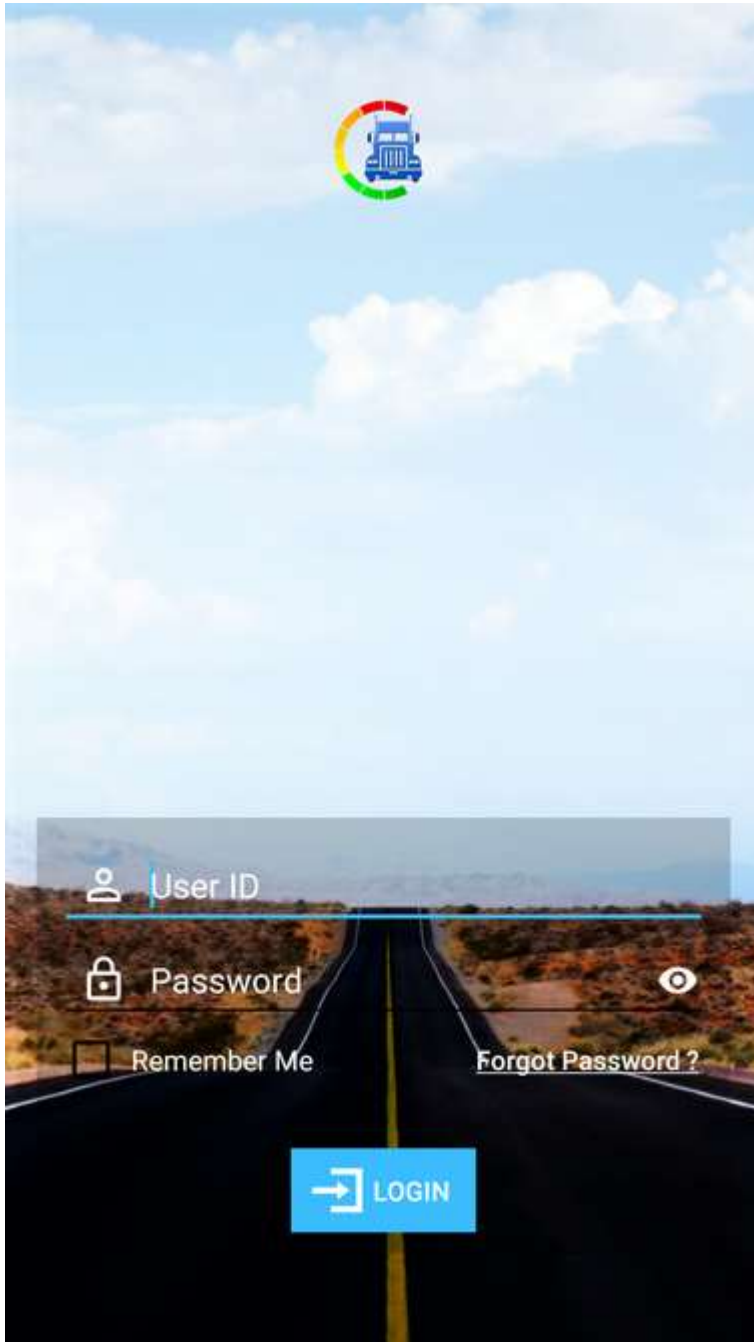


6. If the ELD app does not connect automatically, check if the mobile data is enabled.



Simpletruckeld App – User Manual

 - Prompt will be displayed to manually disable the mobile data.
- Once you have successfully logged in, the VIN number and ELD device name is displayed in green color text.

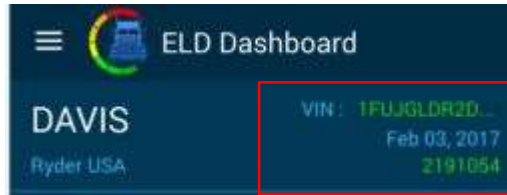

Only after successfully logging in, the **Duty of Status** is displayed

 
1.2 Forgot Password?

▶ [How to Generate New Password](#)

- Click on **Forgot Password?** link to generate a new password.



Simpletruckeld App – User Manual

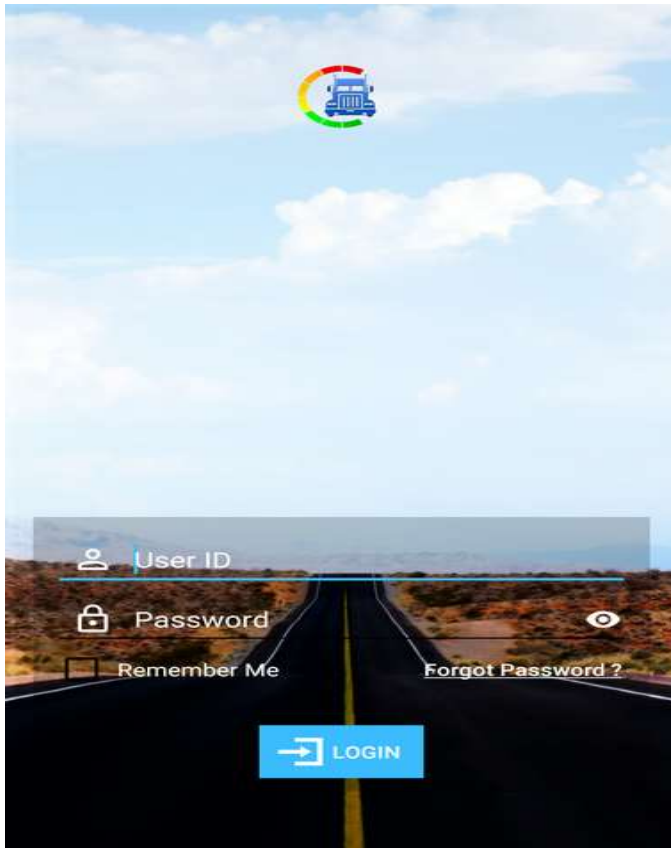

10. Procedure to generate new password.

 
Fill the user id, license number or expiry date and click next.





Simpletruckeld App – User Manual

License number or expiry date is correct, then it will ask for new password and confirm password.

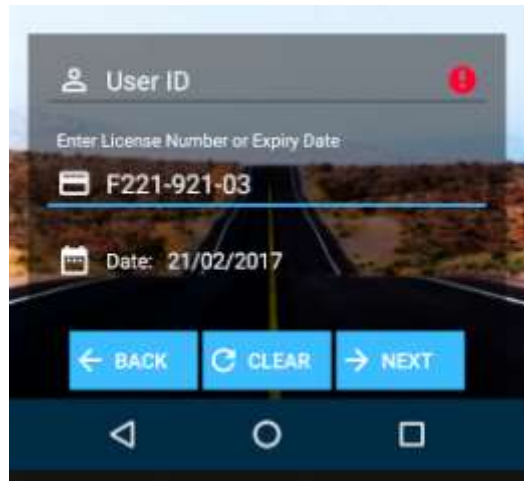

Enter the new password and confirm password and then submit. Once you have submitted new password successfully, password will be updated and you can use the new password for login afterwards.

 
Menu Navigation

Choose anyone option in the dashboard to navigate to the respective screen

- **Home** – To select the Duty of Status and the Driving Mode. You can also view the number of hours driven per day and per week. The Hours of Service per day is displayed in graphical form.



Simpletruckeld App – User Manual

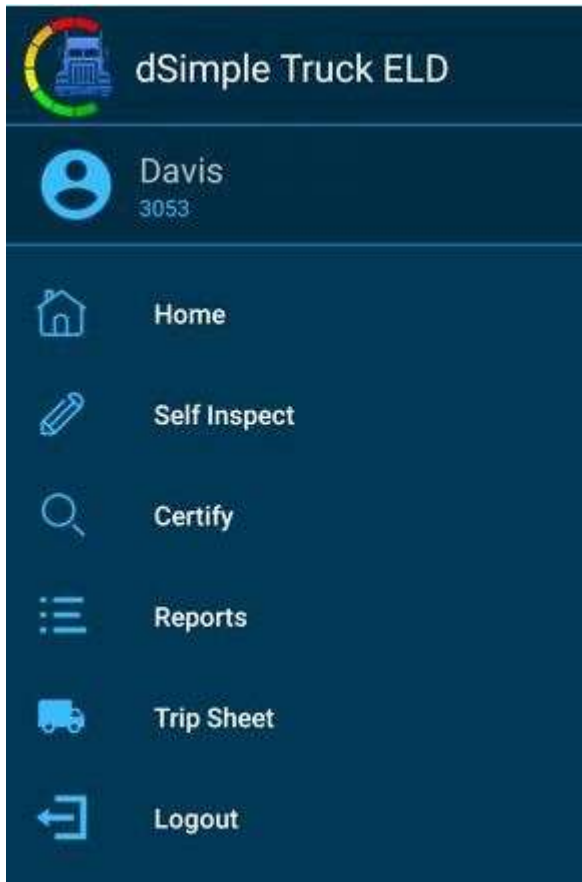


- **Self - Inspection**

Click on the Self Inspect option to view pending and certified records. While clicking 'PENDING' option, it will display date wise Pending self inspection records.



 
Simpletruckeld App – User Manual

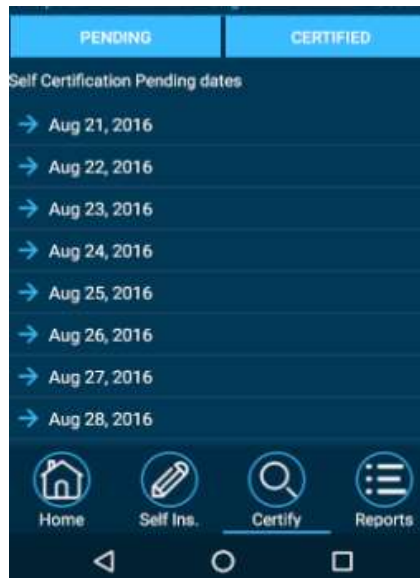

Select the self inspection pending date and fill the comment's and submit by clicking **Agree** button. Once you have submitted successfully for the Selected date the record will move under certified records.



 Simpletruckeld App – User Manual

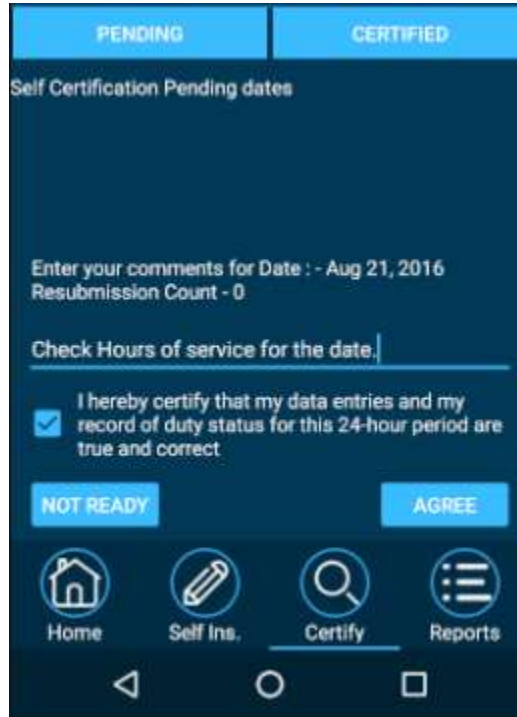

- **Certify**

Click on the 'Certify' option and select the from date, to date it will list the records for the selected date after that send the records to FMCSA through email along with comment's.

- **Reports**

By clicking Second tab it will display all hours of service records based on the date.



Simpletruckeld App – User Manual

 


- **Trip Sheet**

Click on the 'Trip Sheet' option on the home page to view the list of trip/load sheets assigned for the user.



Simpletruckeld App – User Manual

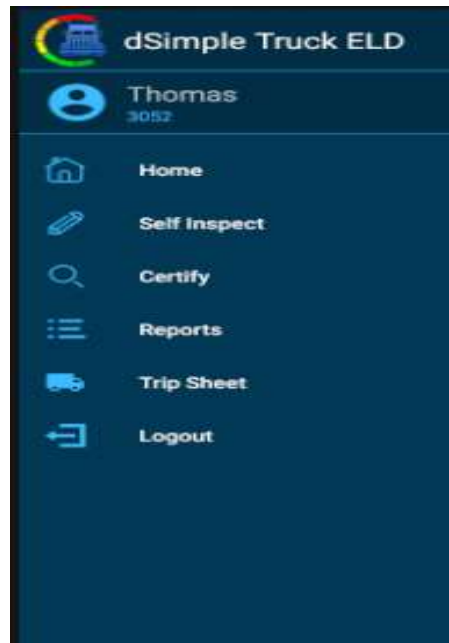

Trip sheet list will display along with details of Load number, load date, source and destination.


A screenshot of the Trip Sheet list in the app. At the top, there is a date filter "MM/DD/YYYY" and an "Add Filter" button. The list has four columns: Date, Load Number, Source, and Destination. The data rows are as follows:

Date	Load Number	Source	Dest
Feb 15, 2017	3055	IN	NE
Feb 15, 2017	3051	IN	KY
Jan 26, 2017	3052	KS	FL



Simpletruckeld App – User Manual


 
Click on any of the trip sheet record, if exist trip is open should close the trip(Prompt will appear for confirmation).

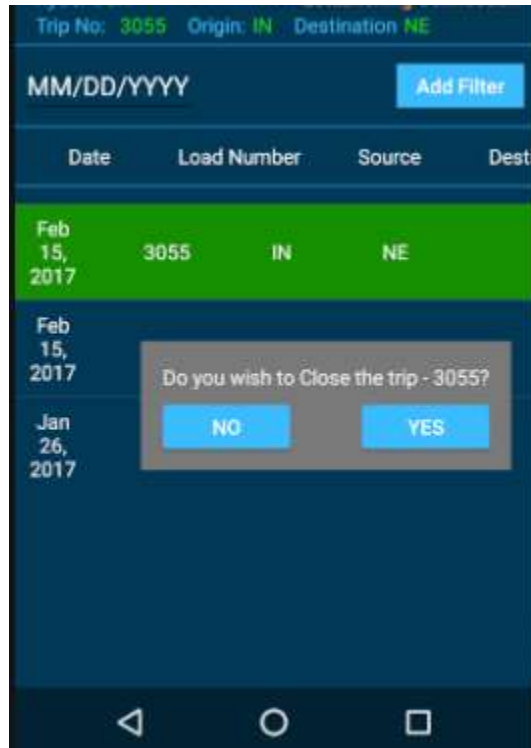

Select the trip and continue to drive for the trip by clicking yes button. Once you have selected the trip that trip information will appear on above the Add Filter option



  Simpletruckeld App – User Manual

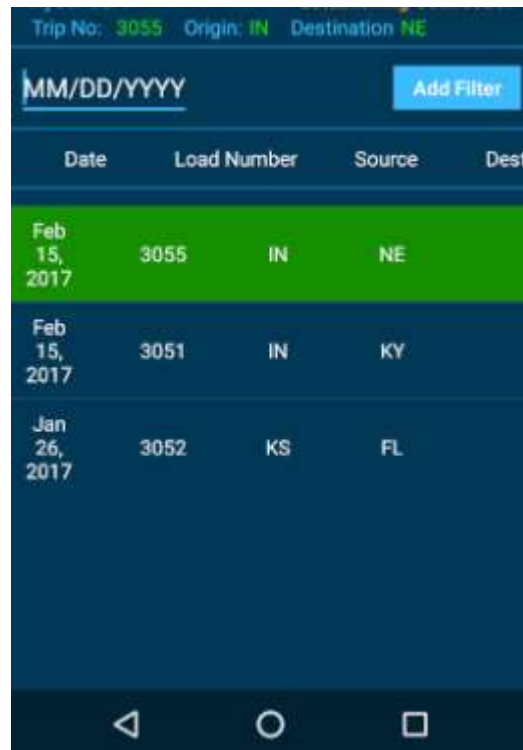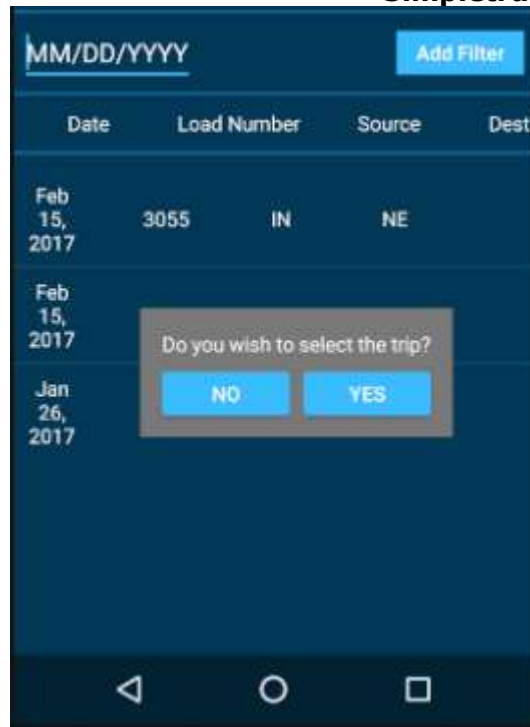


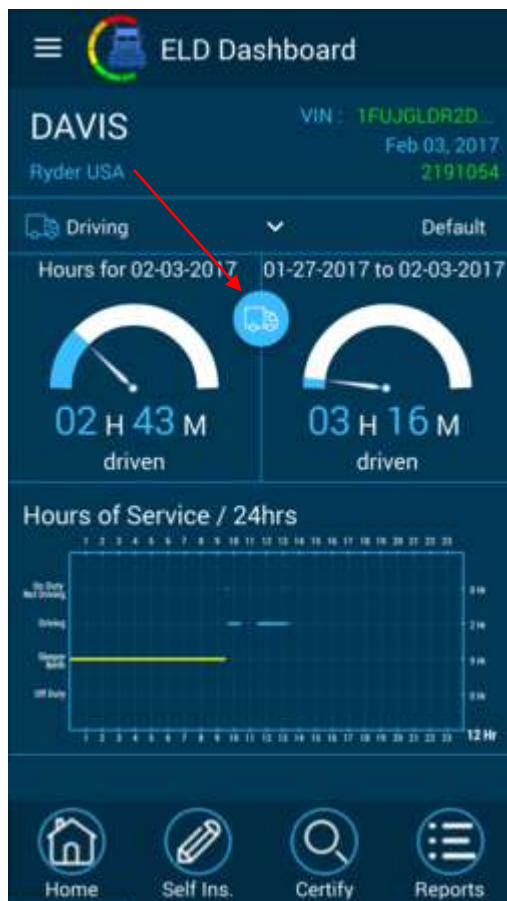 


Driver Mode

1.3 Select Driver Mode - Default

► How to select Driver Mode - Default

11. In the ELD Dashboard screen, click on  to select the Driver mode.



12. In the **Driving Mode** dialog box, select **Default** for On Duty Driving.

 


Simpletruckeld App – User Manual




NOTE The following categories are available:
Default – Select for on duty driving
Personal Use – Select for personal use
Yard Moves – Select for yard shuttle service

13. Once the Driving Mode has been selected, the **Comments** dialog box appears.
14. Enter your comments below **Enter your comments** and click on **Submit** button to record your comments.
15. If you do not want to record your comments, click on **Cancel** button.

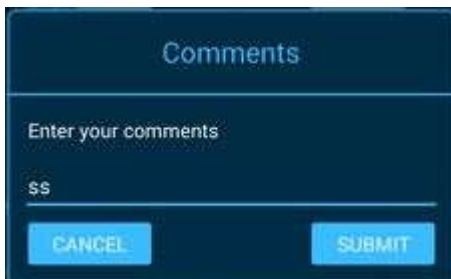

 16. The selected Driver mode is displayed on the ELD Dashboard.

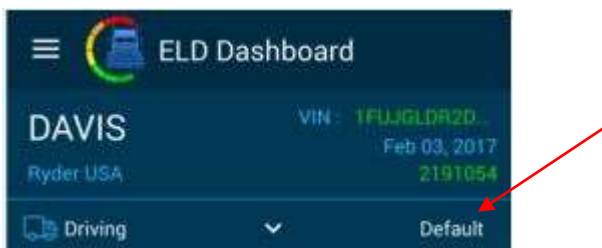



Simpletruckeld App – User Manual



If you select **Default**, the **Duty of Status** dialog box is enabled. You can choose an appropriate option based on the driving situation.

► How to select Duty of Status

17. If the Driving Mode is **Default**, the **Duty of Status** dialog box appears.




18. Click on the appropriate Duty of Status.

19. The selected Duty of Status is displayed on the ELD Dashboard.



1.4 Select Driver Mode – Personal Use

► How to select Driver Mode – Personal Use

20. In the ELD Dashboard screen, click on  to select the Driver mode.



21. In the **Driving Mode** dialog box, select **Personal Use** for personal use driving.



22. Once the Driving Mode has been selected, the **Comments** dialog box appears.

23. Enter your comments below **Enter your comments** and click on **Submit** button to record your comments.

24. If you do not want to record your comments, click on **Cancel** button.




Simpletruckeld App – User Manual

A dark blue dialog box titled "Comments". It contains a text input field with the placeholder text "Enter your comments" and the characters "SS" entered. Below the input field are two buttons: "CANCEL" and "SUBMIT".

25. The selected Driver mode is displayed on the ELD Dashboard.





If you select **Personal Use**, the Duty of Status displays **Off Duty Driving** by default. This status remains until the Mode of Driving changes.

26. If you click to change the Duty of Status, a dialog box appears prompting you to first change the mode of Driving.





1.5 Select Driver Mode – Yard Moves

How to select Driver Mode – Yard Moves

27. In the ELD Dashboard screen, click on  to select the Driver mode.



28. In the **Driving Mode** dialog box, select **Yard Moves** for Yard shuttle services.



29. Once the Driving Mode has been selected, the **Comments** dialog box appears.

30. Enter your comments below **Enter your comments** and click on **Submit** button to record your comments.



Simpletruckeld App – User Manual

31. If you do not want to record your comments, click on **Cancel** button.

A dark blue dialog box titled "Comments". It contains a text input field with the placeholder "Enter your comments" and the text "SS" entered. At the bottom, there are two buttons: "CANCEL" and "SUBMIT".

32. The selected Driver mode is displayed on the ELD Dashboard.



If you select **Yard Moves**, the Duty of Status displays **On Duty Not Driving** by default. This status remains until the Mode of Driving changes.

33. If you click to change the Duty of Status, a dialog box appears prompting you to first change the mode of Driving.






Self Inspect

The Simpletruckeld app, allows the driver to self-inspect his cloaked in hours.



 
1. Click on the  icon at the bottom of the ELD dashboard to go to the Self Inspect screen.





Simpletruckeld App – User Manual

- Alternatively, you can directly select the Self Inspect option from the Menu Navigation screen.

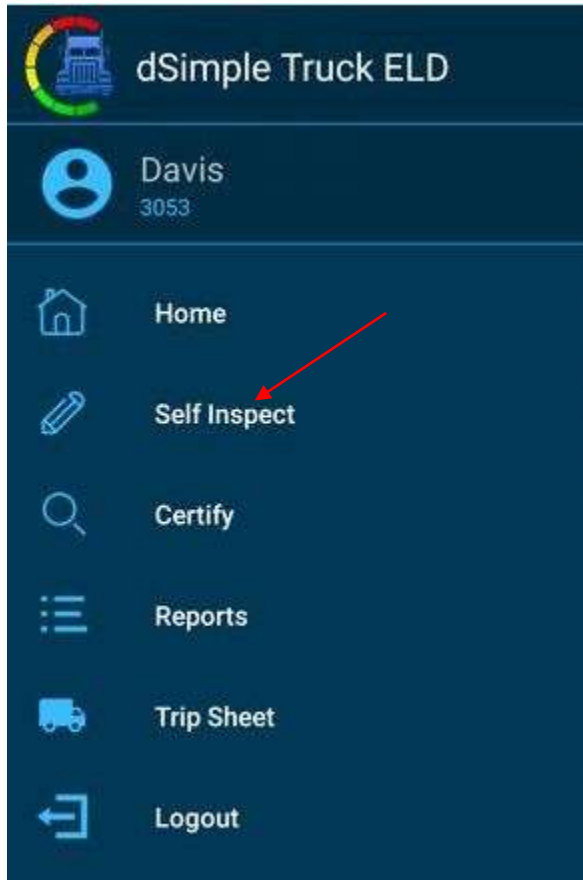

1.6 Status Log

- In the **Self Inspect** page, click on the **Status Log** tab to view the status log.
- Enter the date for which you want to view the status in **MM/DD/YYYY** and click on **Add Filter** button.
- The Status log for the mentioned date is displayed in detail.



Simpletruckeld App – User Manual

The screenshot displays the ELD Dashboard for driver DAVIS. The dashboard includes a header with the driver's name, company (Ryder USA), and VIN (1FUJGLDR2D...). Below the header are three tabs: STATUS LOG (selected), CHANGE DRIVER, and UNIDENTIFIED. A date filter is set to Feb 03, 2017, with a value of 2191054. The main content area shows a table of status logs and a summary of hours.

Status	Hours	Date	Time
Driving	00:00	02/03/2017	16:02
Sleeper Berth	00:00	02/03/2017	16:02
Driving	00:00	02/03/2017	16:02
Driving	00:29	02/03/2017	15:33
Off Duty Hrs	00:00		
Sleeper Berth Hrs	00:00		
Driving Hrs	00:29		
On-duty not driving Hrs	00:00		
Total Hours	00:29		

Navigation icons at the bottom include Home, Self Ins., Certify, and Reports.

1.7 Change Driver

1. In the **Self Inspect** page, click on the **Change Driver** tab to change the duty of service.
2. Select the record and choose any one of the co-driver for the trip, duty status and send request to assign duty status record for the driver.



Simpletruckeld App – User Manual

3. Once request has been accepted by the co-driver, It will reflect in our duty of hours record's.

1.8 Unidentified

1. In the **Self Inspect** page, click on the **Unidentified** tab it will display all unidentified records with recorded date.
 2. Select the record and assign the record to another co-driver for the trip.
-