

TruckX ELD 004

User Manual





All-In-One Fleet Management Platform

ELD Compliance | Dashcam | Asset Tracking | Sensors


 iPhone

 Android

www.TruckX.com

New Driver Sign Up (1)

- Once Your Fleet has registered you as a driver, you will receive an SMS notification with a link to download the TruckX Driver's Logbook App
- Open the **TruckX Driver's Logbook** Application on your mobile phone
- Enter your registered mobile number and US DOT number and Tap "Continue"

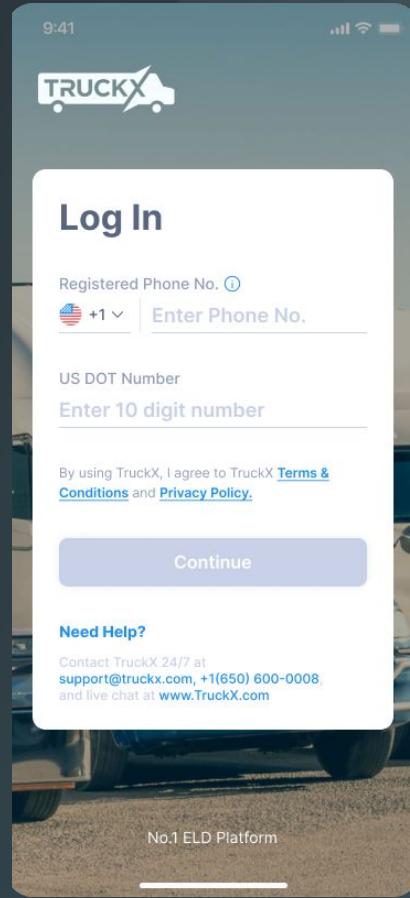

New Driver Sign Up (2)

- You will receive an SMS message with the your TruckX verification code
- Enter the 4-Digit Verification PIN on the new screen, create and confirm your 5-Digit Login PIN
- Tap “Set PIN”
- Once the PIN Reset confirmation message occurs, tap “Continue”
- TruckX will synchronize and setups your data on your phone

9:41

<

Enter Verification PIN

Please enter 4 digit verification PIN received via text message (SMS)

PIN

[Resend OTP](#)

Submit

9:41

<

Create Login PIN

Create your own login PIN for future logins

New Login PIN

Confirm New PIN

Set PIN

9:41

<

Create Login PIN

Create your own login PIN for future logins

New Login PIN

Confirm New PIN


PIN Reset Successful

You have successfully reset your PIN
Your new PIN for future login is **12345**

Okay



Existing Driver Login (1)

- As an existing Driver, open the TruckX Driver's Logbook App on your phone
- Enter your registered mobile number, US DOT and tap "Continue"

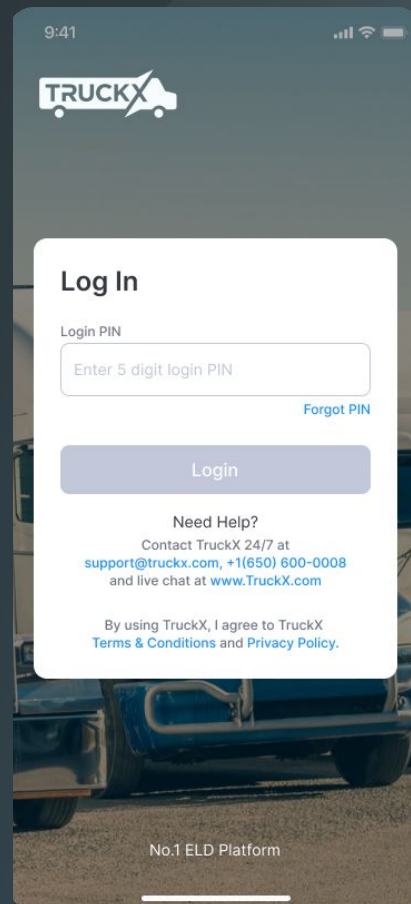


Existing Driver Login (2)

- Enter your 5-Digit PIN and Tap “Login”
- TruckX will synchronize and setup your logbook data on your phone

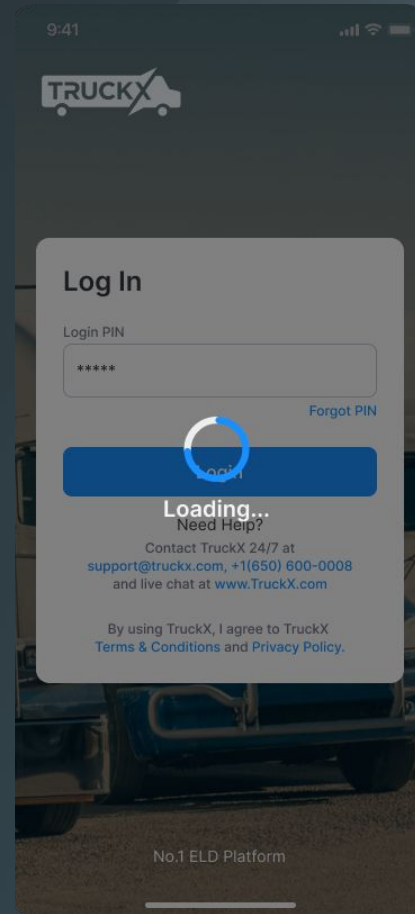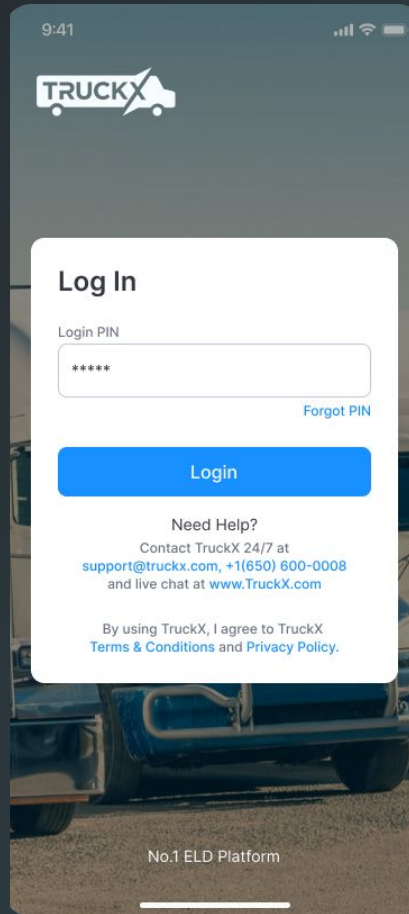

Logbook Home Screen

- Once signup is complete and data has been synched, you will see the TruckX Driver's Logbook Home Screen
- At the top, it shows your name and ELD Connection Status
- Below this, you can find your current Duty Status, a tile with your current HOS information
- The section underneath shows today's Logbook graph
- At the bottom, you can find the navigation menu

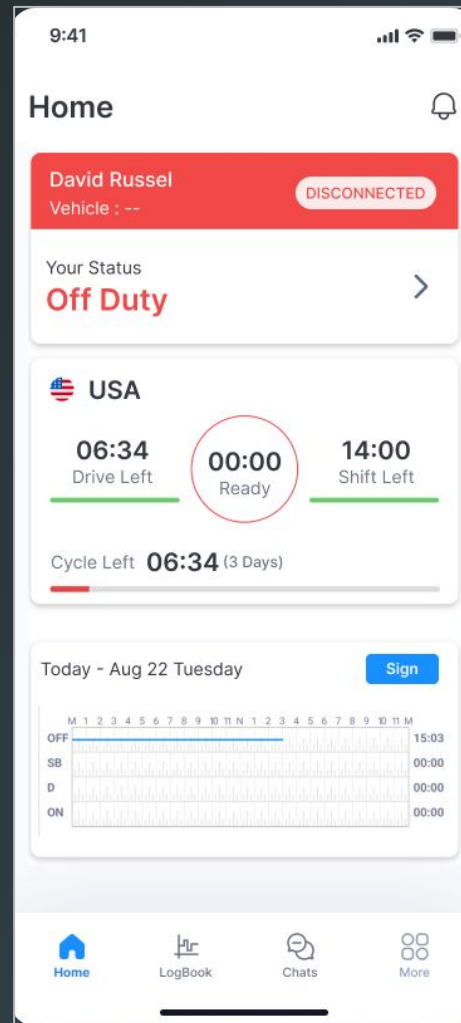




Install ELD Device in Your Vehicle

- If needed, order additional TruckX ELD devices on www.TruckX.com or call **+1 (650)-600-0008**
- Plug it into the diagnostic port of your Vehicle (use complementary TruckX PIN adaptor for different connector types)
- Power and Network Connection lights will be ON if device is properly installed






Connect to Vehicle ELD (1)

- On the Logbook Home Screen, tap the Connection Status icon
- Select the vehicle you are connecting to and any Co-Driver if applicable
- The TruckX App will search for nearby ELD devices
- If unable to locate the desired device, please try again

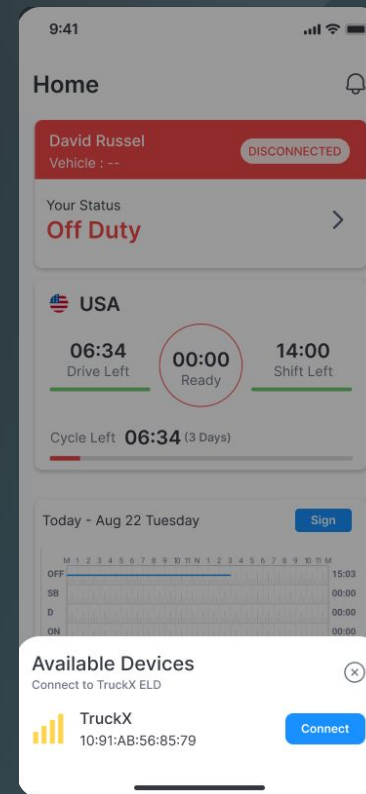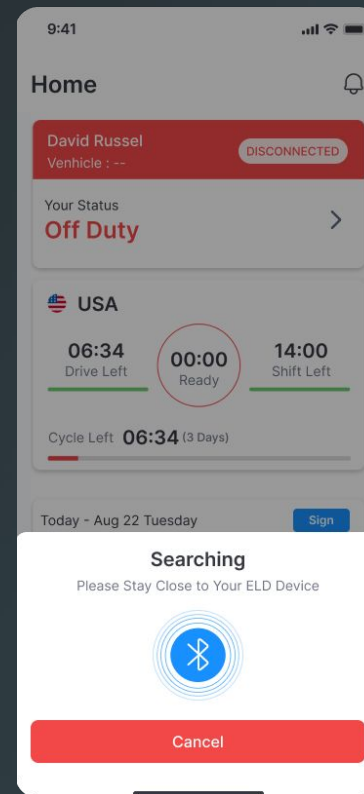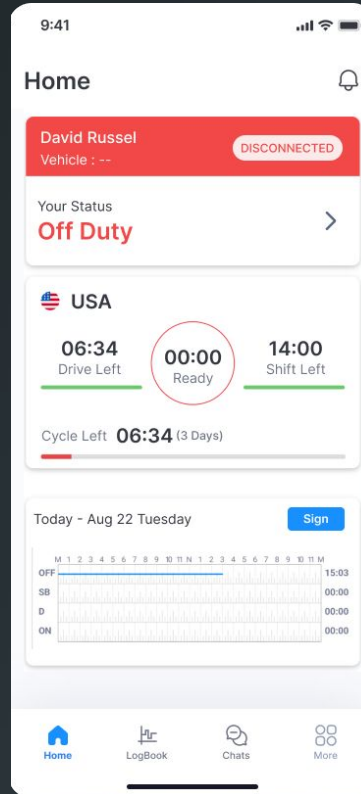


Connect to Vehicle ELD (2)

- Select the correct Vehicle from the list of available Devices by tapping "Connect"
- The TruckX App will Connect to the device
- Once successfully connected, the connection section on your Logbook Home Screen will turn green and list the connected vehicle
- If Connection fails, please try again

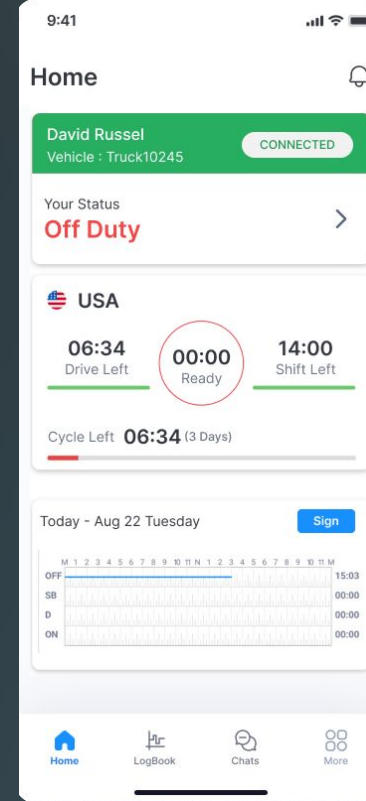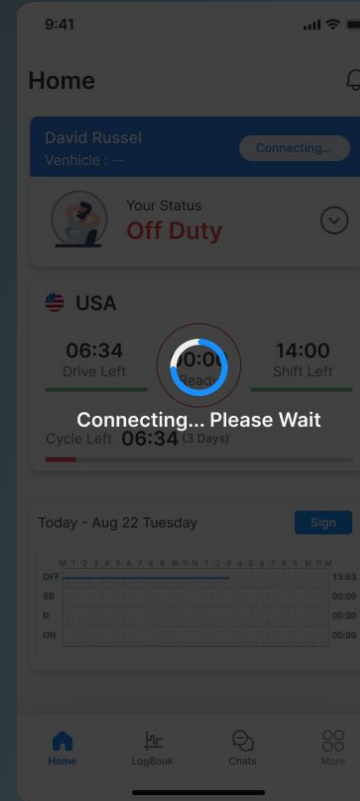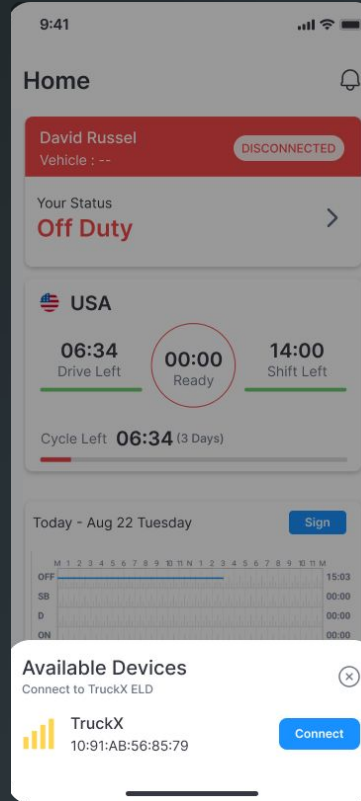



Connect to Vehicle ELD (3)

- If the newly connected Vehicle VIN number differs from the Vehicle previously assigned to you, we will update the App and let you know
- Please check to ensure you are connected to and driving the correct vehicle

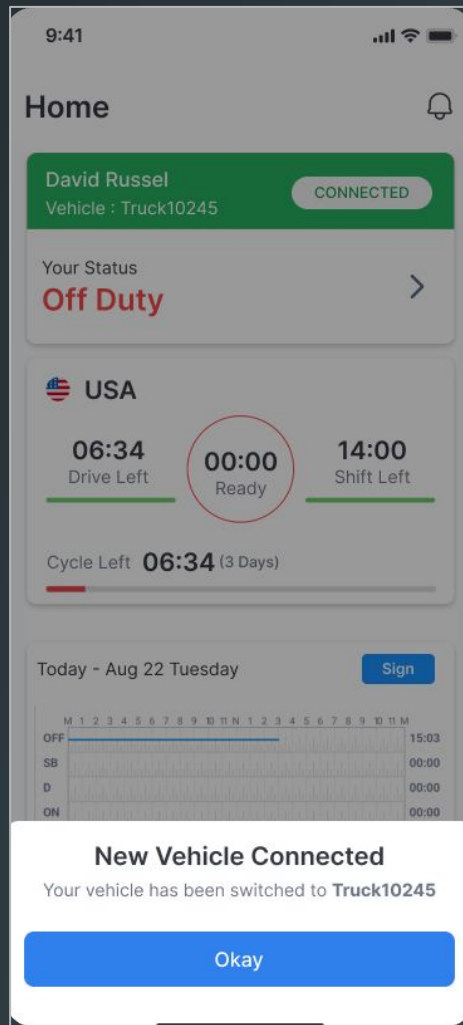




Driving with ELD

- Start driving your Vehicle with ELD connected
- Your Duty Status will automatically change to **“Driving”** when speed is more than 5 MPH
- When the Vehicle is stopped for more than 3 minutes, the driving status will automatically switch back to **“On Duty”**

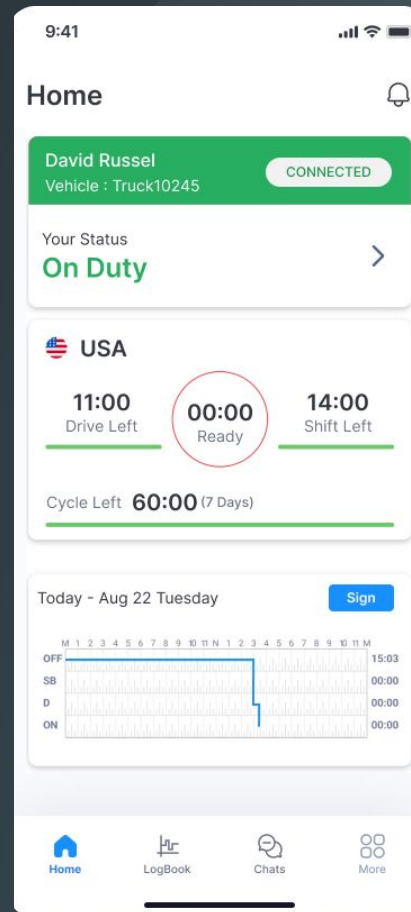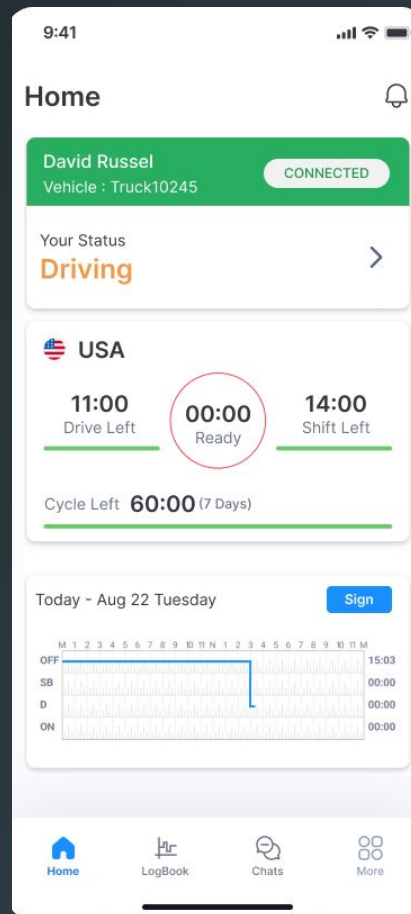




Switch Duty Status

- Tap on tile with your Duty Status
- A menu will open with your current Duty Status highlighted
- Tap on the available Duty Status you would like to switch to
- Add an optional comment or select a standard note and tap "Update"
- Your Status tile will now be updated to the new status

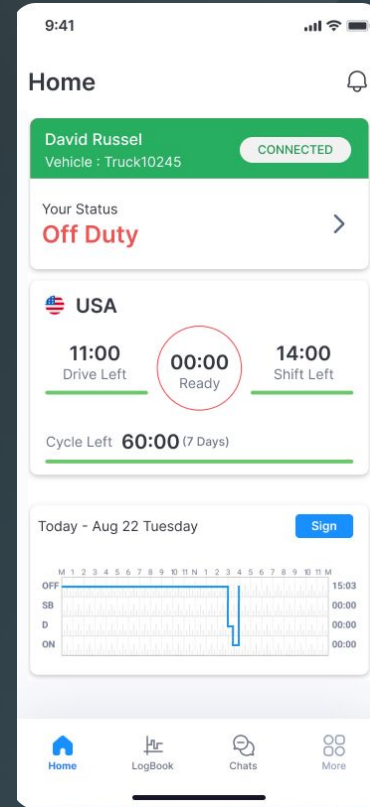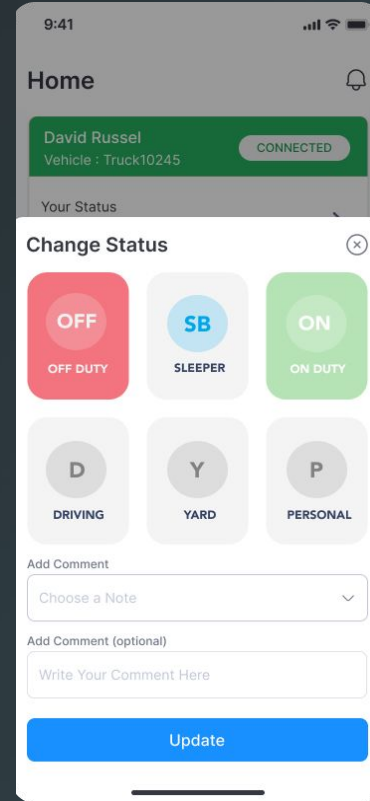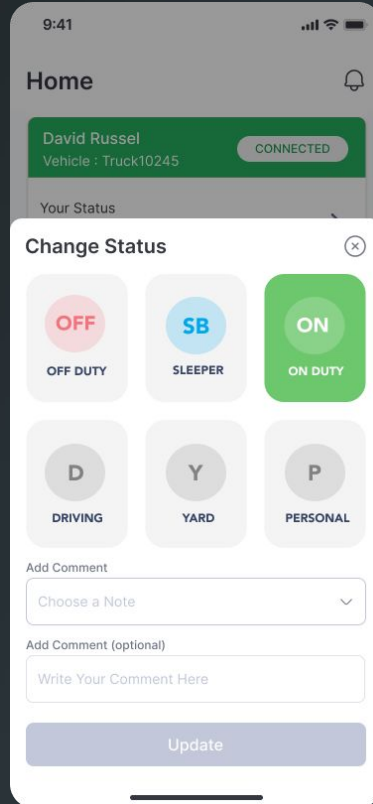




Disconnect When Done

- On the Logbook Home Screen, tap on the tile with your ELD connection Status
- Tap “Disconnect”
- When successfully disconnected, your Status tile will switch to red and state “Disconnected”

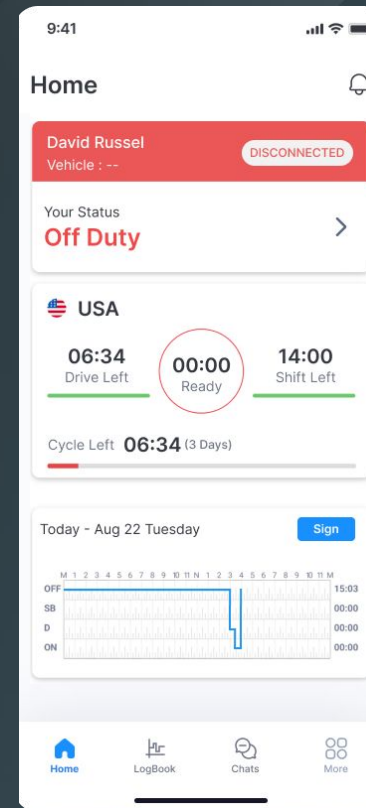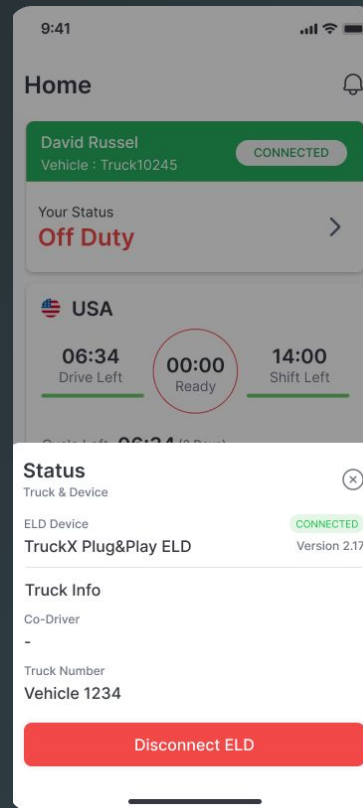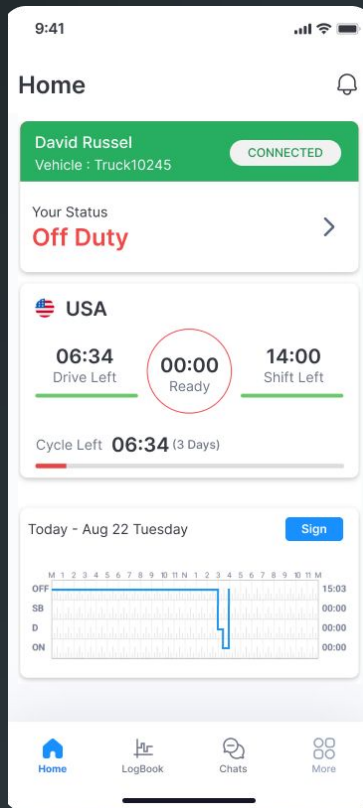




ELD Connection Failure

- If the Truck has been disconnected, the Vehicle Connection tile will be red and state "Disconnected"
- To check, click on the tile: if not connected, the App will search for available Devices
- Reconnect to the correct ELD device

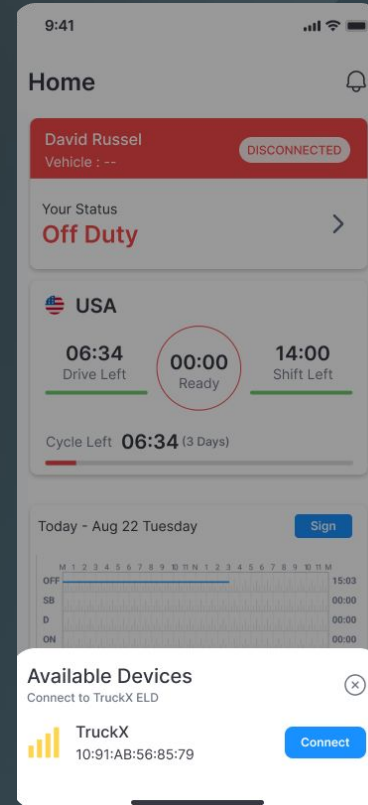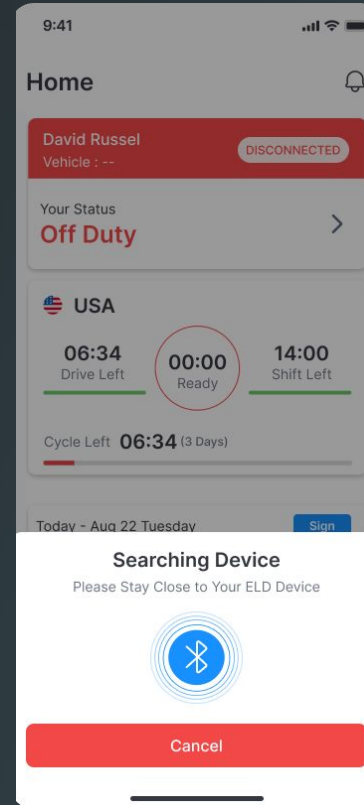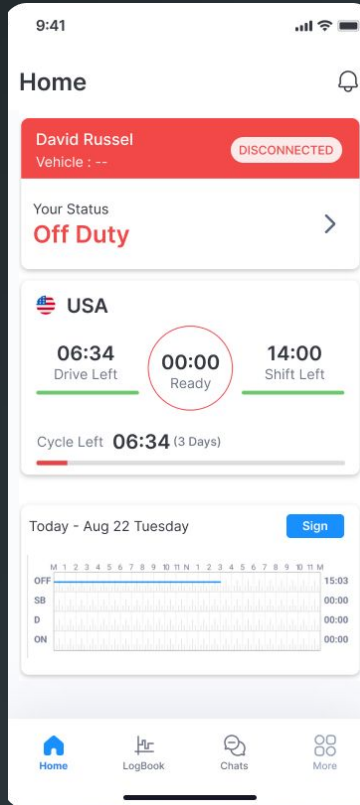


ELD Malfunction & Diagnostics

- Once an ELD Malfunction or Diagnostic Event is detected you will receive an event Push-Notification and the Red Event icon will be visible at the top of each screen
- Clicking on the icon/notification will open a screen with a list of all active events
- Click on the Notification to Complete Required resolution steps: Generally, notify your Fleet, review your logs and manually enter missing data

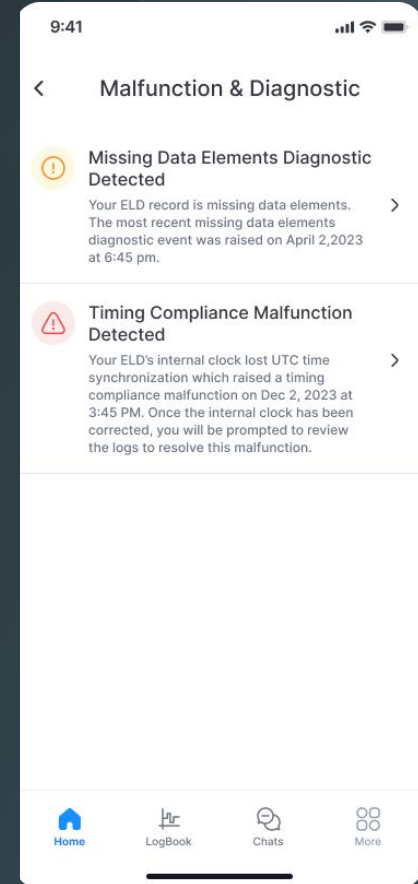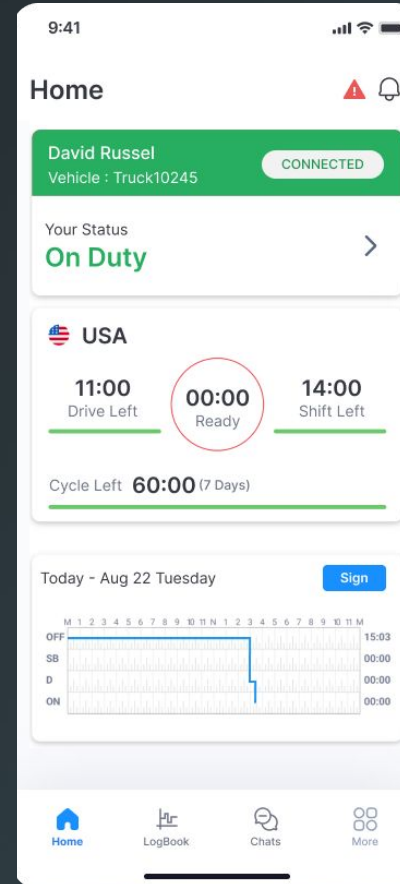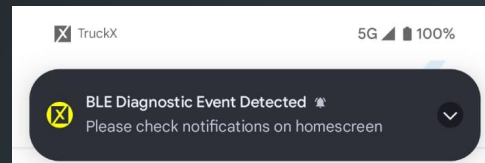



Unassigned Drive Time

- If we detect an Unassign Drive Time event that is likely associated with your account, you will receive a notification
- You can either Reject it with an explanation, or Accept it and your Logs will be updated

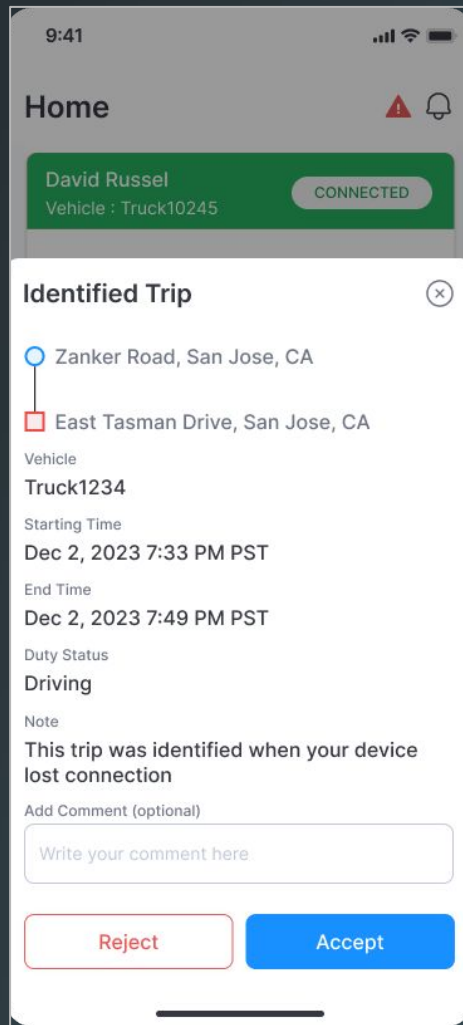


HOS Violations and Notifications

- In case of an HOS violation, you will receive a push notification
- On the Logbook Home Screen, you will see the "Violation" icon on the associated Log Graph where time under violation will be marked in red
- Click on the Log graph and you will see further details about the violation

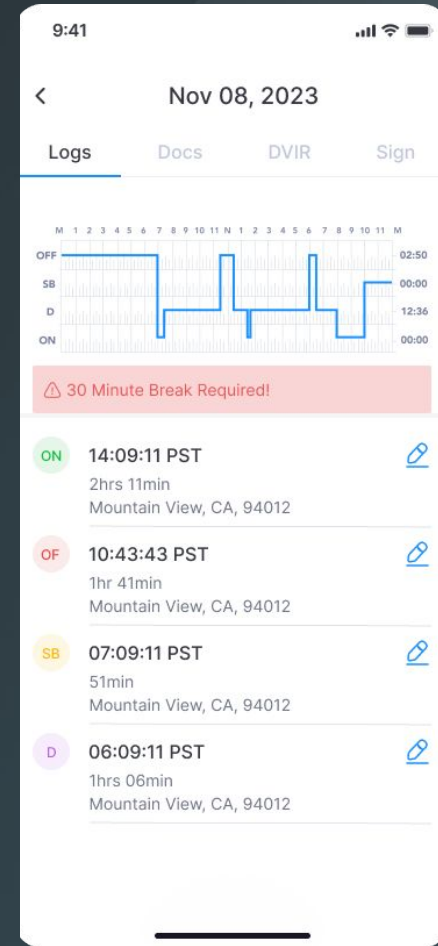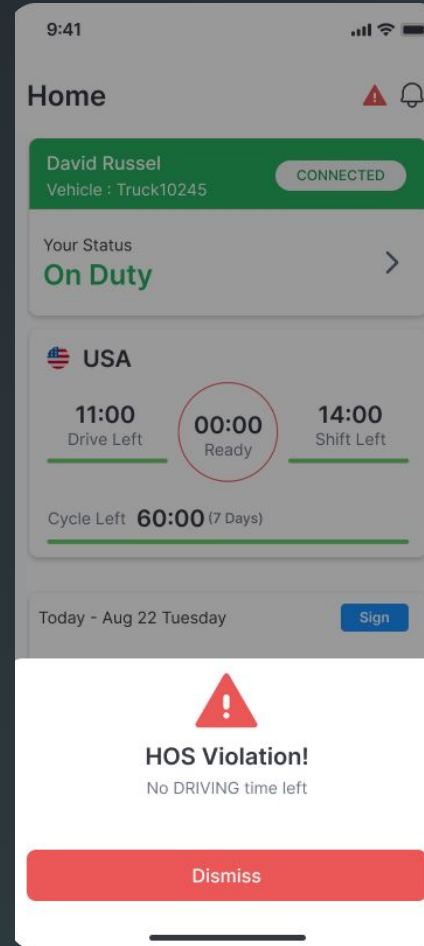

Complete Daily Logbook Information

- Tap on “Logbook” on the bottom menu in order to open your Daily Log Page
- Review your logbook entries
- You can click on the “edit” icon to edit your logs in accordance with FMCSA rules
- Navigate the tabs at the top of the page to access and edit your your Truck and Trip Docs, access the DVIR Workflow and Sign the Day’s Logs

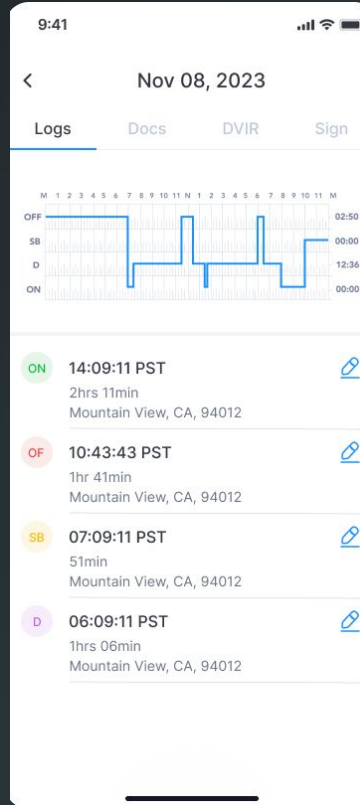

9:41 Nov 08, 2023

Logs Docs DVIR Sign

Vehicle Details

Truck No. 0030
Trailer No. 1LNHM81V87Y600143

Trip Details

Start Location -
Destination Location -
Shipping Documents -
Miles Driven (Updates every 15mins) -
Start Odometer (Updates every 15mins) -

Comments
Driver & Carrier Details

Co Driver Name -

9:41 Nov 08, 2023




Logs Docs DVIR Sign

No DVIR Listed
Start your Pre Trip Inspection

Start Pre-Trip Inspection



Sign Driver Logbook Daily

- In order to sign your daily logs, tap the “Sign” Button on the logbook graph of daily logs that are missing your signature
- Alternatively, you can tap the “Sign” tab on the “Logbook” page
- Using your finger, draw your signature in the entry field and tap “Save”
- Once signed, the “Sign” button on the respective logbook graph will turn to “Signed”

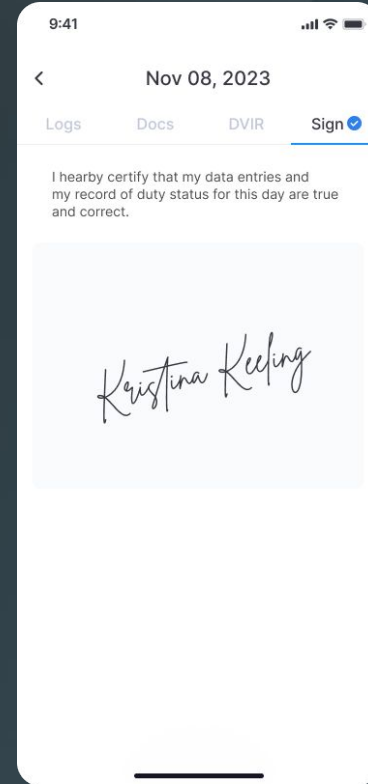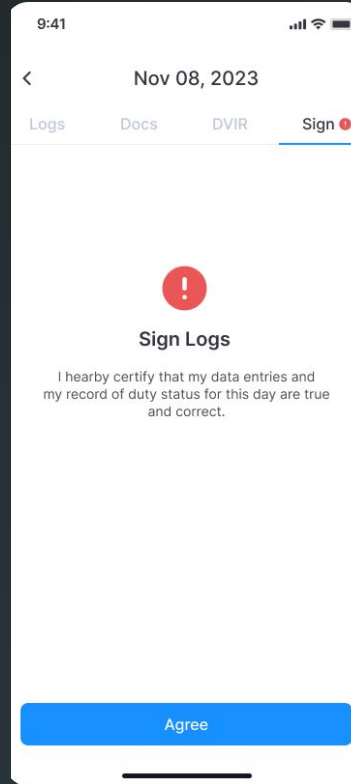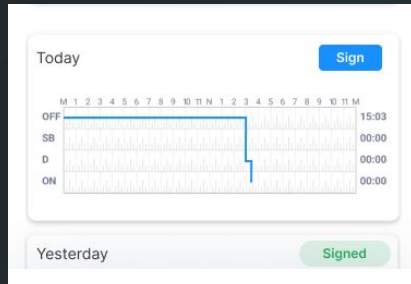



Accept/Reject Log Edits

- When your Fleet Manager makes any changes to your Logs in accordance with FMCSA Rules, you will receive a notification once exiting Driving Mode
- Review the suggested change in detail
- Accept: Tab “**Accept**” and your logs will be updated accordingly with an edit annotation
- Reject: Tab “**Reject**” and provide an explanation of why the suggested change is incorrect. There will be no change to your Logs

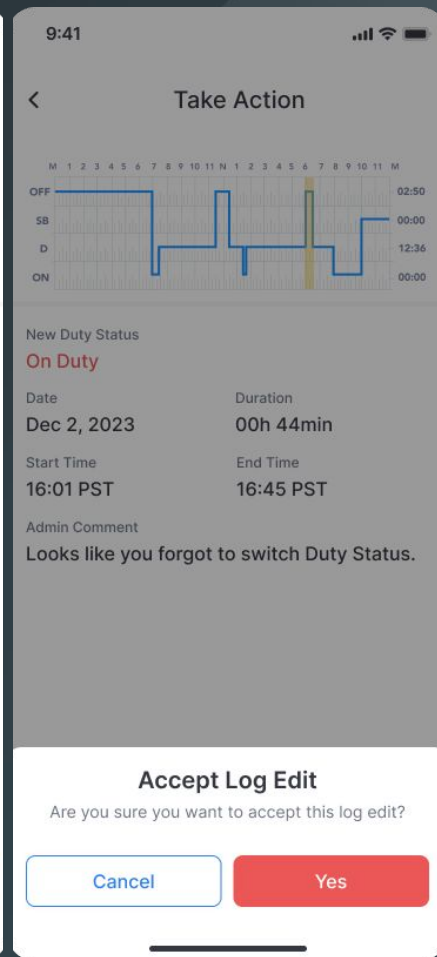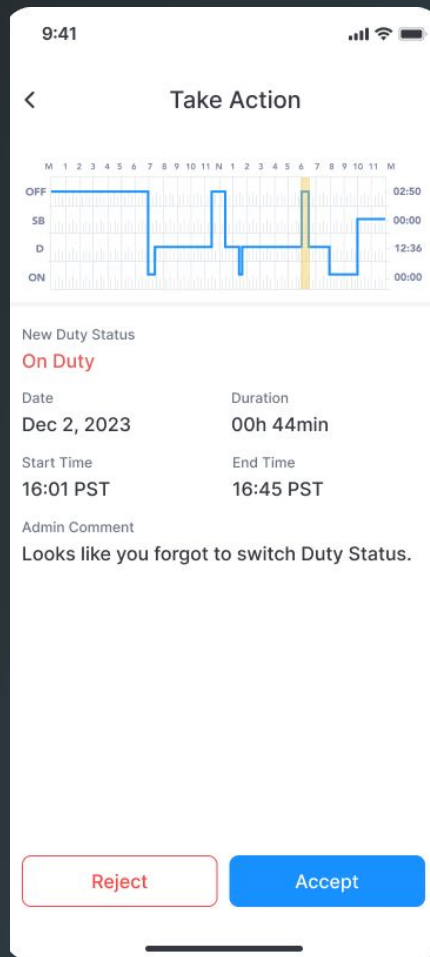





Roadside Inspection

- Tap on **“More”** in the bottom navigation bar
- Then, tap on the first tile called **“DOT Inspection”** and follow the instructions
- Tap **“Start”** to begin Inspection and hand your device over to the Inspection Officer

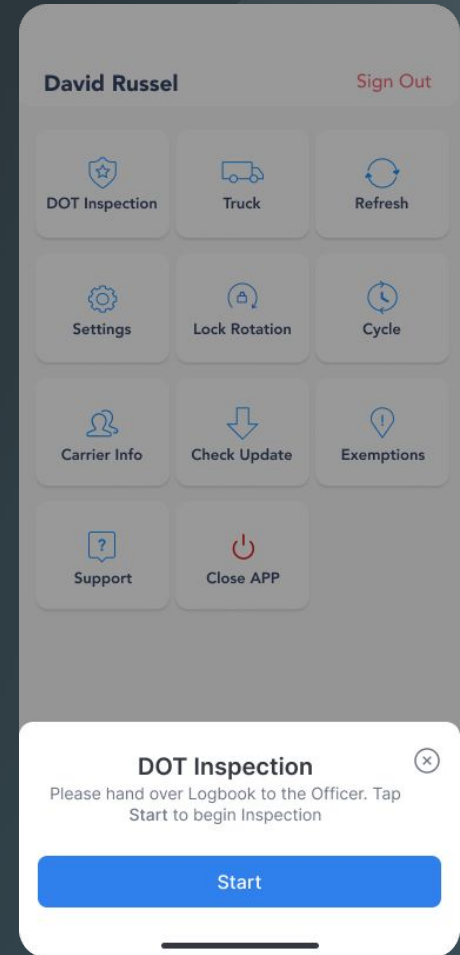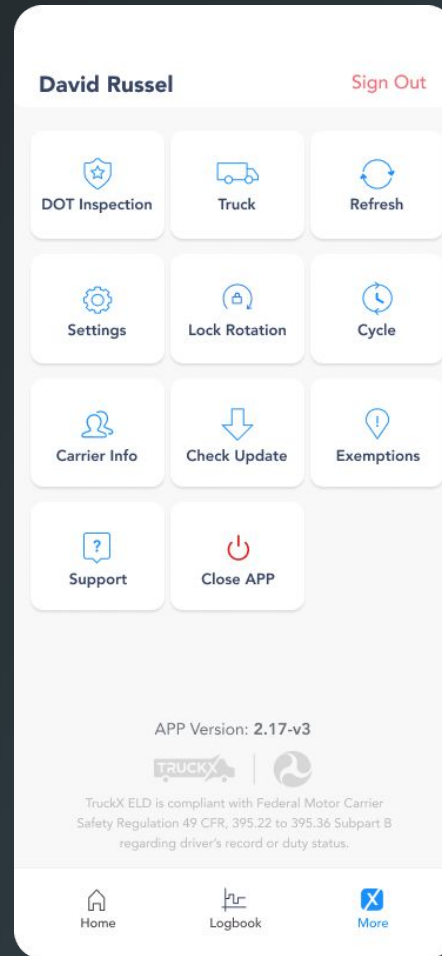



Show Inspection Report

- The DOT Inspection officer can tap **“Inspect”** to begin
- Select **“Next”** to review the Driver’s Daily Log Report

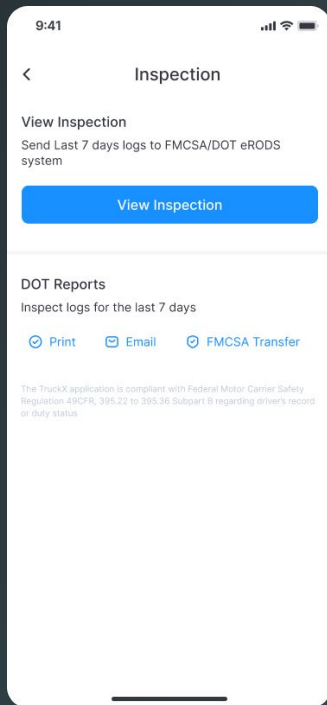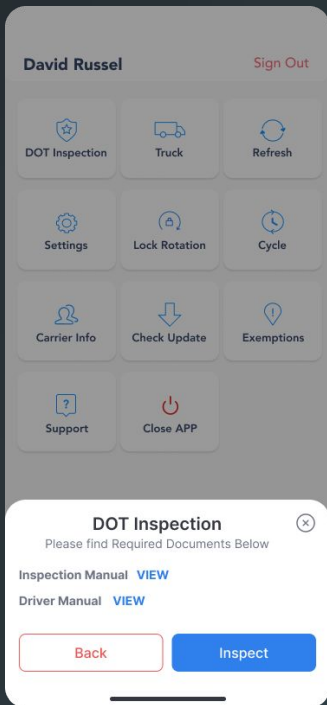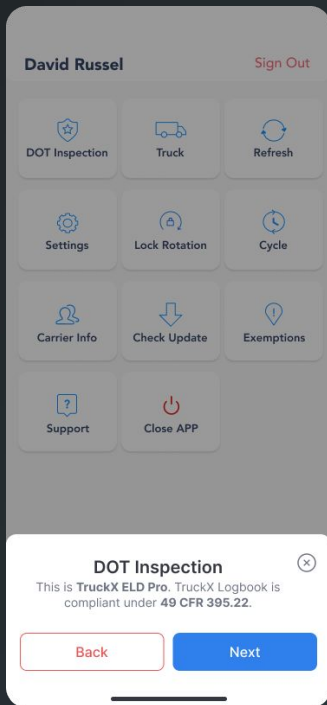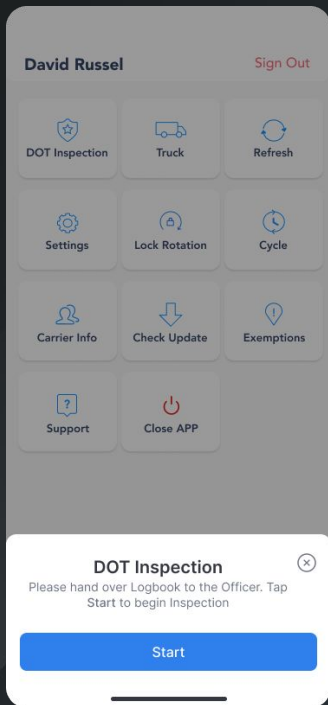




FMCSA Transfer

- Tap on **“DOT Inspection”** in the “More” Menu
- Select **“FMCSA Transfer”**

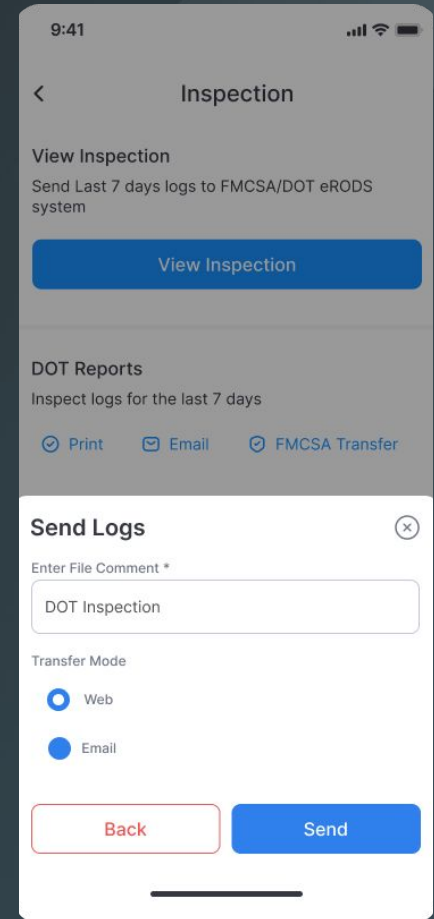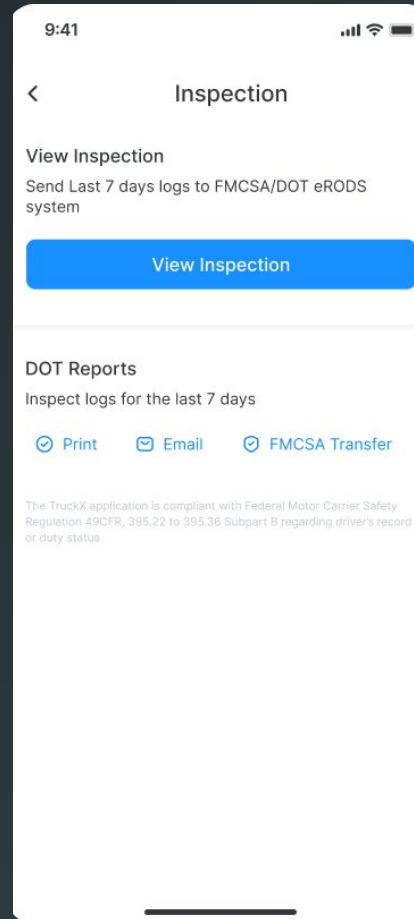



Print Inspection Report

- Tap on **“DOT Inspection”** in the “More” Menu
- Select **“Print”** and select a Wi-Fi-connected printer in your cab

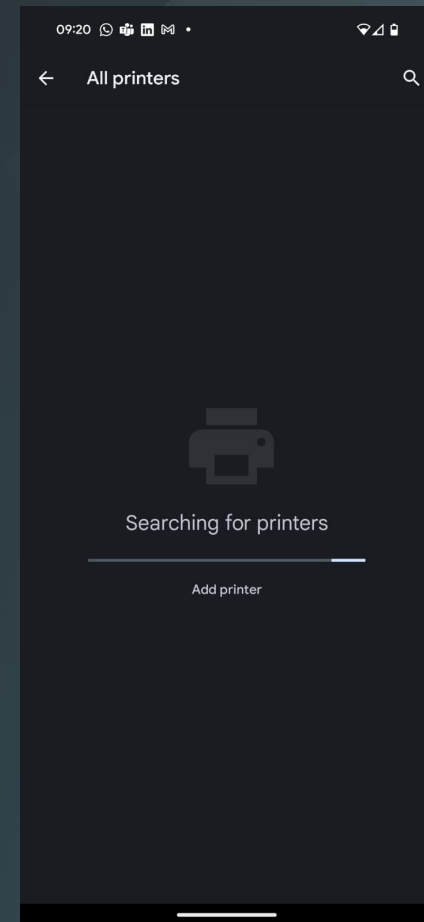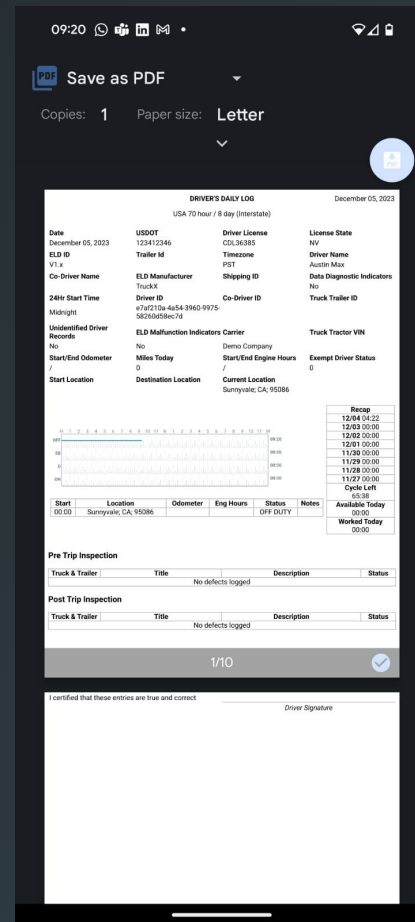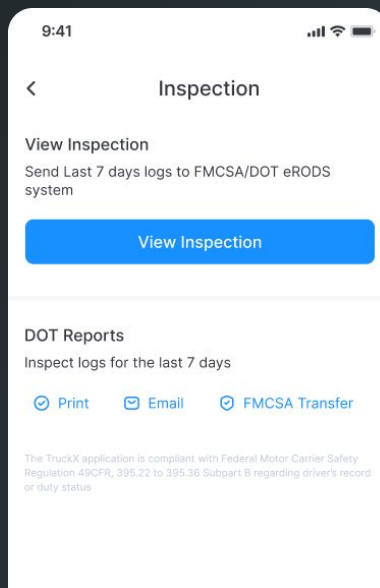

Email Inspection Report

- Tap on **“DOT Inspection”** in the “More” Menu
- Select **“Email”**, enter recipients and click **“Send”**

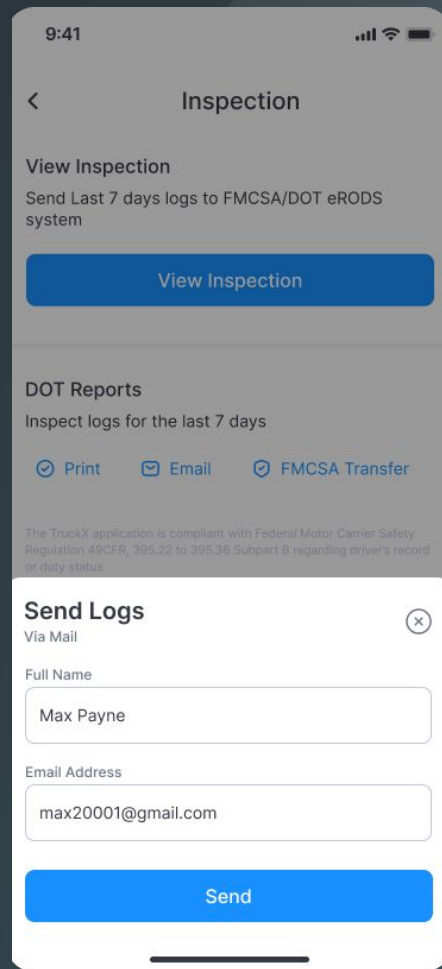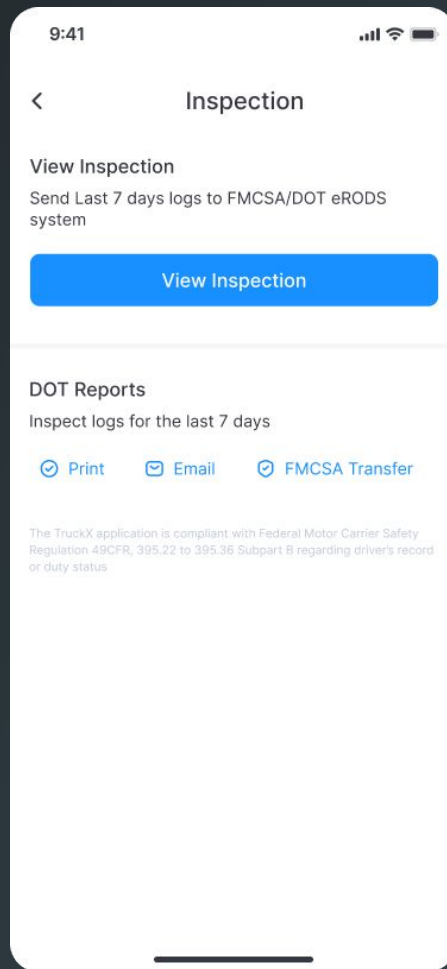

Join the TruckX Family!

