



***ELD Installation  
and Connection***

# ***Table of Contents***

## ***Before the Road***

- Install the Stellar ELD device in your vehicle **3**
- Install the Stellar ELD App **4**
- Log in to the Stellar ELD App and select a vehicle **4-5**
- Connect your mobile device to the Stellar ELD device **6**

## ***On the Road***

- Complete Pre-Trip DVIR **7**
- Populate Log Form Data **8**
- Record Hours of Service **9**
- Inspect Logs **10**

# Install the Stellar ELD device in your vehicle

1

Turn off the engine and find the diagnostic port within the vehicle. Search for circular ports with 9 or 6 pins in heavy duty vehicles, and locate the OBDII port in light to medium duty vehicles.

2

Attach the other side of the cable to the Stellar ELD.

3

After installing the device, verify its functionality by checking for a blinking green LED light. The green light will begin to blink once a GPS and Cellular connection has been established.

4

Ensure that you install the device at a distance from other electrical components to avoid interference.

**IMPORTANT:** Please follow the above-mentioned instructions. Otherwise, you risk ELD device interference and GPS disruption, creating problems with the signal. Do not put an ELD device under the dashboard under any circumstances.



# Install the Stellar ELD App

1

 
For android phones and tablets download the Stellar ELD App from Google Play Store. For iPhones and iPads download the Stellar ELD App from the App Store.

 
2

Open the Stellar ELD App.

## Login to the Stellar ELD App and select a vehicle

- ✓ Enter your login details and tap **LOG IN**, you will be prompt with *Terms and Conditions*.
- ✓ Read the Terms and Conditions and tap **AGREE**.
- ✓ Select *your vehicle* from the list, or *search for one*.
- ✓ Tap **ACCEPT**, you will be prompt with a *Settings page* where you can review and edit settings details.
- ✓ Tap **SAVE**.

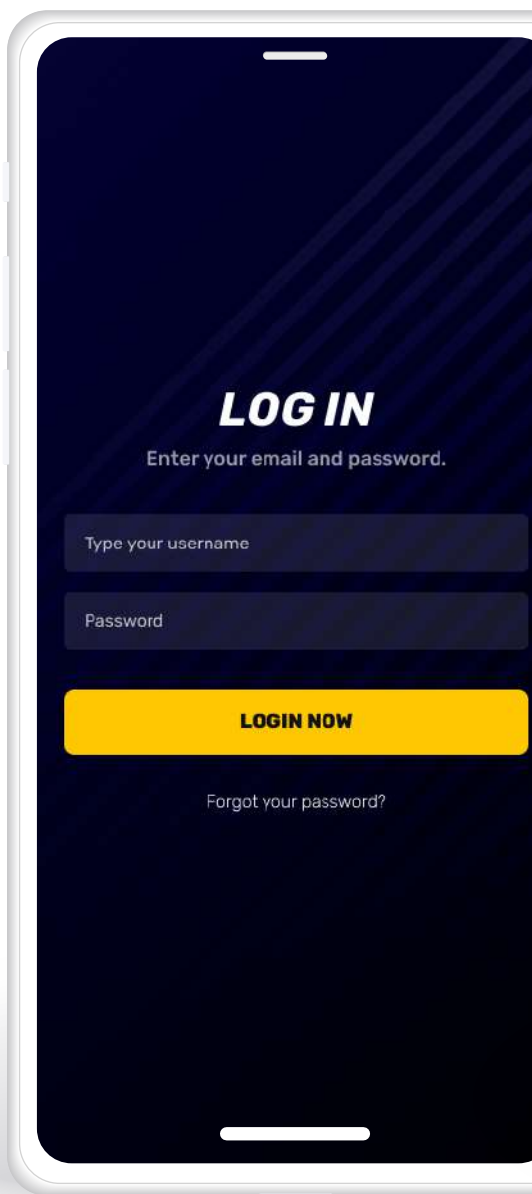

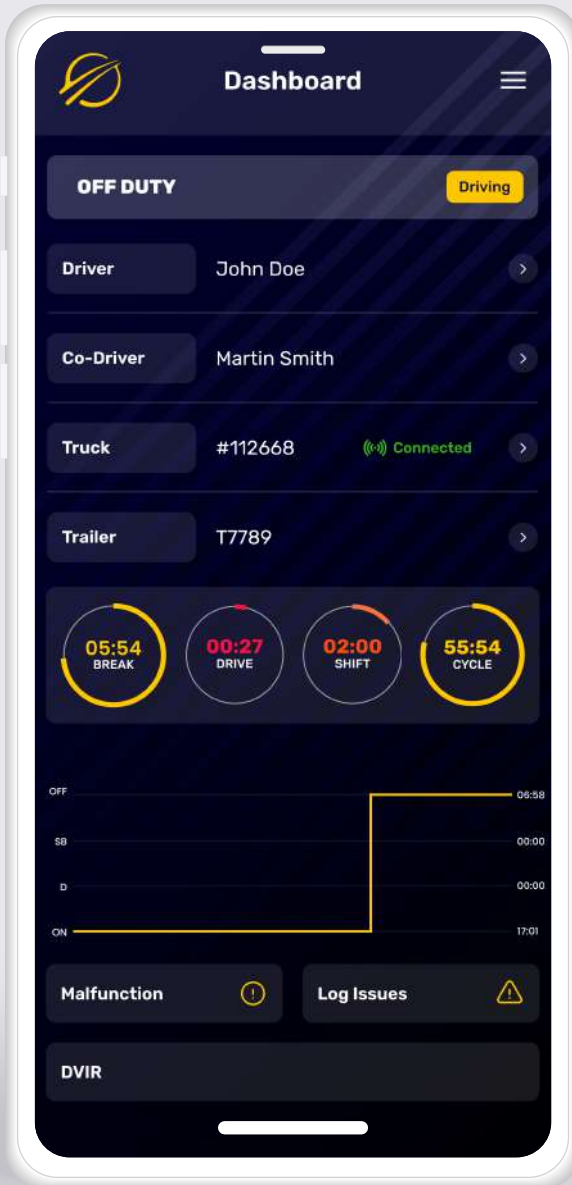

## ***Dashboard View***

Once you have logged in and selected your vehicle, you will be directed to the Dashboard page. To establish a connection with your vehicle, utilize the **Tap to Connect** button.

# Connect your mobile device to the Stellar ELD device



## Enable Bluetooth

Before connecting to the Stellar ELD device, make sure that Bluetooth is enabled on your device.

In the main Dashboard view there is **Tap to Connect** button - just below the vehicle number

1

 
To establish a connection with your vehicle, utilize the **Tap to Connect** bar. The device will then attempt to connect to the selected vehicle's ELD via Bluetooth. You'll notice that the ELD bar *changes from red to orange*, indicating that it's in pairing mode.

2

An icon (📶) will appear in connection bar upon *successful connection*.

## ✓ Ready to Drive

After finishing all the preparatory tasks listed in this section, you are prepared to begin driving. As soon as your vehicle *reaches a speed of 5 MPH* or more, your duty status will change to **Driving** automatically, as required by the ELD mandate.

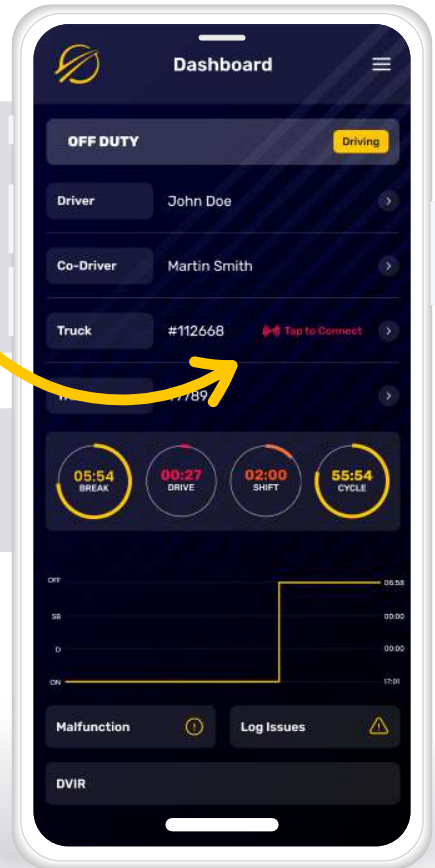

# Complete Pre-Trip DVIR

1

Start a new pre-trip inspection report by tapping the **DVIR button** from the Dashboard.



2

Tap **Add/Remove** under *Vehicle Defects* and review each item from the list against your vehicle.

 
 


Tap **Sign and Save the Report.**

# Populate Log Form Data




Select **Trailer/Docs** button from your Dashboard to add the Trailer/Shipping Docs number.

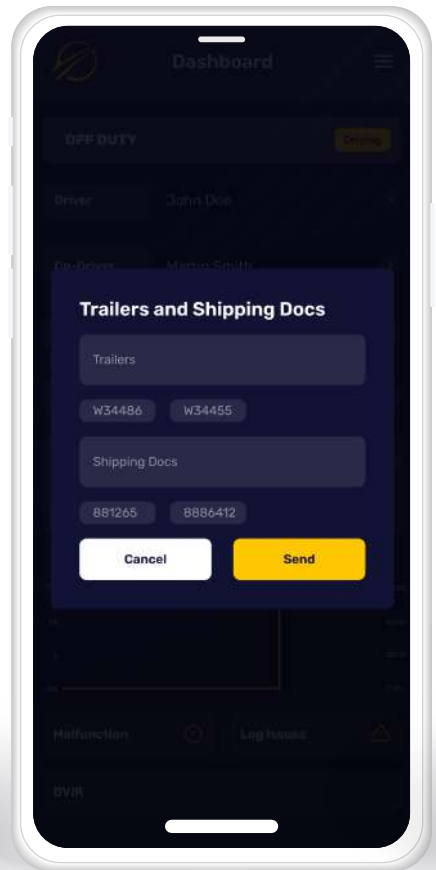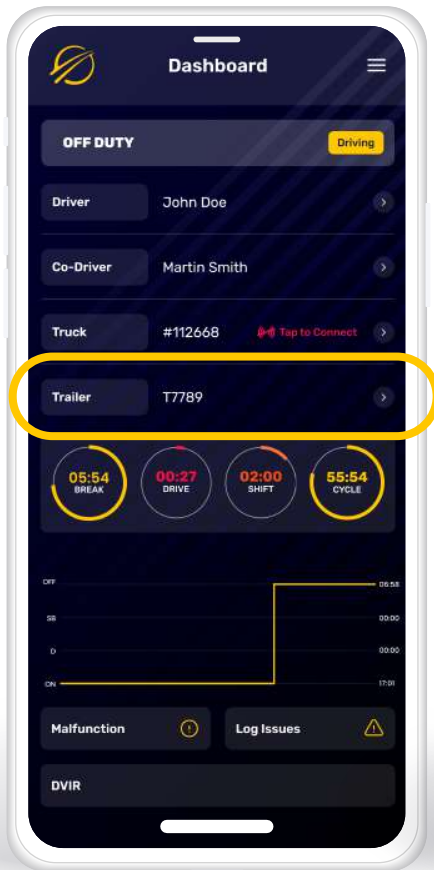



# Record Hours of Service

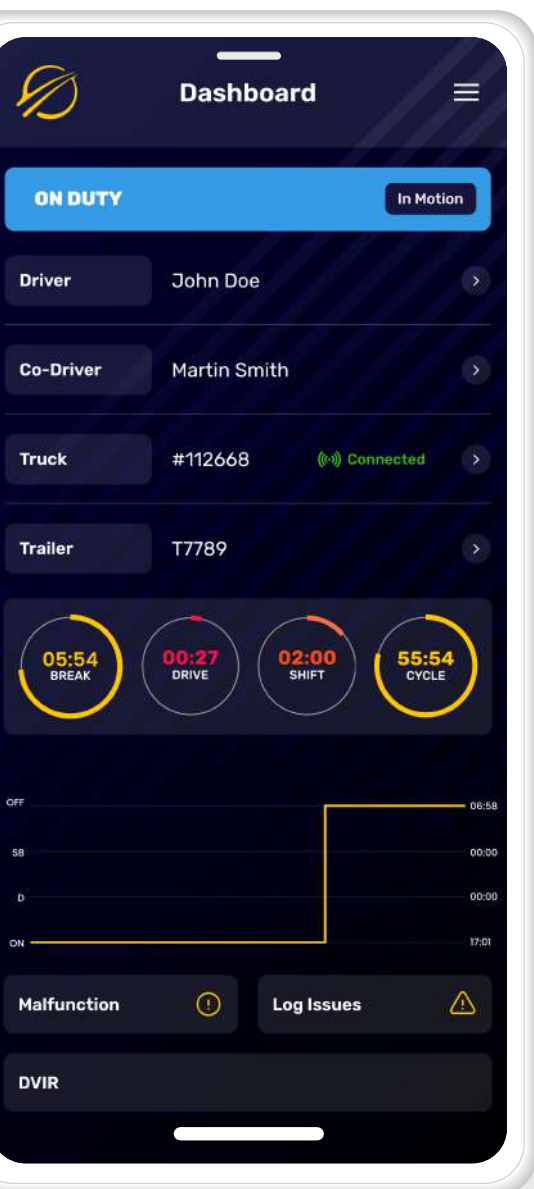 

1

When your vehicle reaches 5 MPH or greater, Stellar ELD is indicating that vehicle is **In Motion** and your duty status will automatically change to **On Duty**.

2

When the vehicle stops (0 MPH) it's considered **Stationary**.

3

You can change your duty status by tapping the **Driving** and selecting some other duty status.



4

If your vehicle remains Stationary for five minutes you will be prompted with a question if you would like to change your duty status. If you ignore this question your duty status will be changed to On Duty.

# Inspect Logs



  To begin the DOT inspection tap the menu icon on the top right and select the **DOT Inspection**

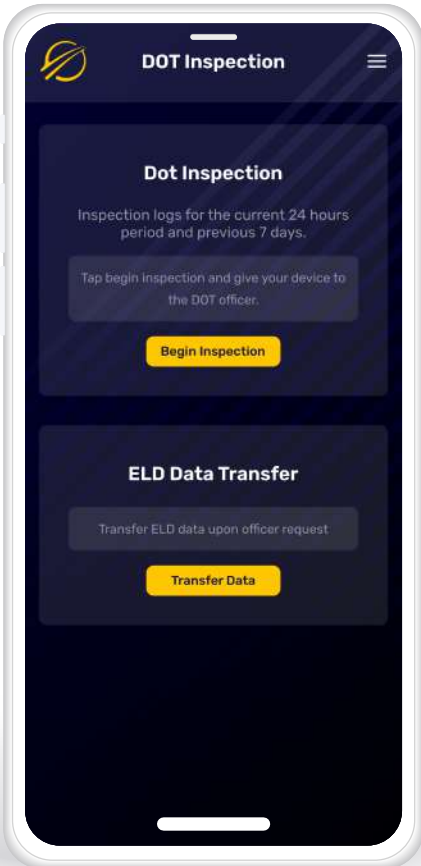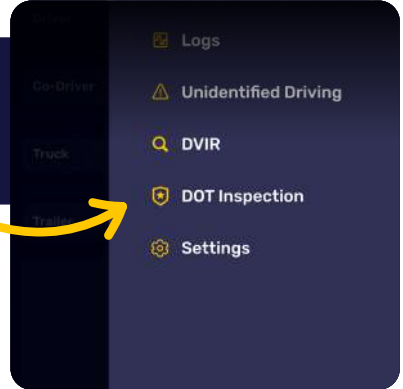

1

To let an officer inspect your logs tap **Begin Inspection**. Logs for current and last seven days will appear on the screen.

2

If the officer asks for the output file tap Transfer Data  
Tap the **Transfer Data** to send the file via web service or email.



**STELLAR**<sub>ELD</sub>