



MAG

AELD

First Time Sign Up

- ★ Once Your Fleet has registered you as a driver, you will receive an SMS notification with a link to download the MAGA ELD Driver's Logbook App
- ★ Open the **MAGA ELD Driver's Logbook** Application on your mobile phone
- ★ Enter your registered mobile number and US DOT number and tap "Continue"



Log In

Registered Phone No. ⓘ

 +1 ▾ Enter Phone No.

US DOT Number

Enter 10 digit number

By using MAGA ELD, I agree to MAGA ELD [Terms & Conditions](#) and [Privacy Policy](#).

Continue

Need Help?

Contact MAGA ELD 24/7 at support@magaeld.com or live chat at www.MAGAEELD.com

New Driver Sign Up

- ★ You will receive an SMS message with the your MAGA ELD verification code
- ★ Enter the 4-Digit Verification PIN on the new screen, create and confirm your 5-Digit Login PIN
- ★ Tap “Set PIN”
- ★ Once the PIN Reset confirmation message occurs, tap “Continue”
- ★ TruckX will synchronize and setups your data on your phone

<

Enter Verification PIN

Please enter 4 digit verification PIN received via text message (SMS)

PIN

2345

[Resend OTP](#)

<

Create Login PIN

Create your own login PIN for future logins

New Login PIN

Confirm New PIN

[Set PIN](#)


PIN Reset Successful

You have successfully reset your PIN.
Your new PIN for future login is 12345

[Okay](#)

Driver Login

- ★ As an existing Driver, open the MAGA ELD Driver's Logbook App on your phone
- ★ Enter your registered mobile number, US DOT and tap "Continue"
- ★ Enter your 5-Digit PIN and Tap "Login"
- ★ TruckX will synchronize and setup your logbook data on your phone

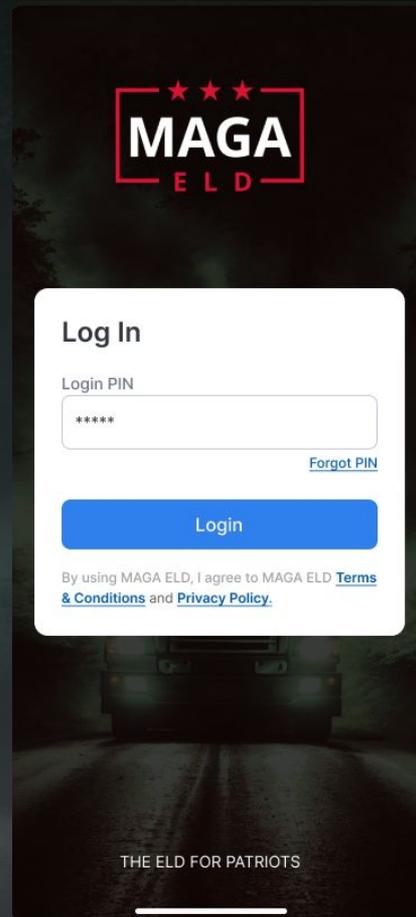




ELD Installation

- ★ If needed, order additional MAGA ELD devices on www.MAGAELD.com
- ★ Plug it into the diagnostic port of your Vehicle (use complementary MAGA ELD PIN adaptor for different connector types)
- ★ Power and Network Connection lights will be ON if device is properly installed






Connect to Vehicle ELD (1)

- ★ On the Logbook Home Screen, tap the Connection Status icon
- ★ Select the vehicle you are connecting to and any Co-Driver if applicable
- ★ The MAGA ELD App will search for nearby ELD devices
- ★ If unable to locate the desired device, please try again

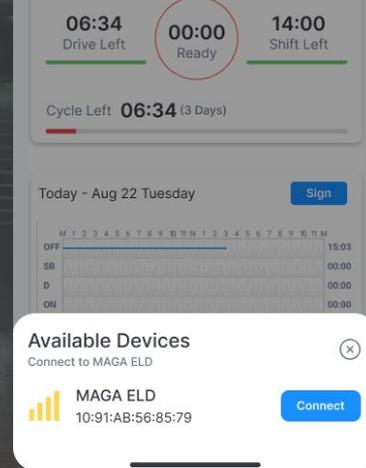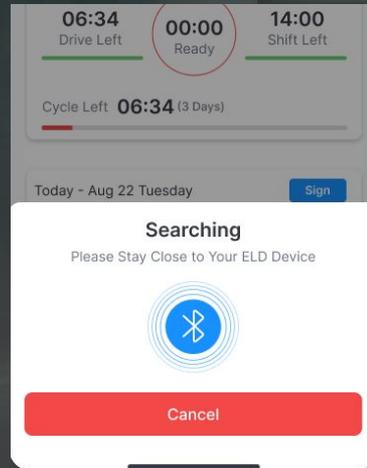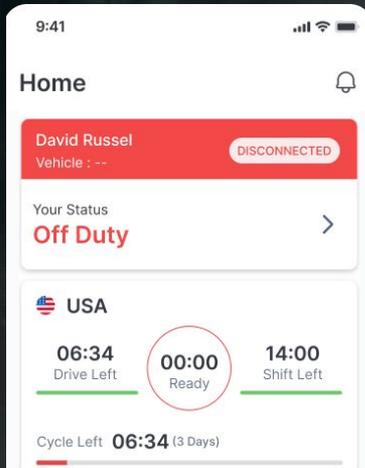


Connect to Vehicle ELD (2)

- ★ Select the correct Vehicle from the list of available Devices by tapping “Connect”
- ★ The MAGA ELD App will Connect to the device
- ★ Once successfully connected, the connection section on your Logbook Home Screen will turn green and list the connected vehicle
- ★ If Connection fails, please try again

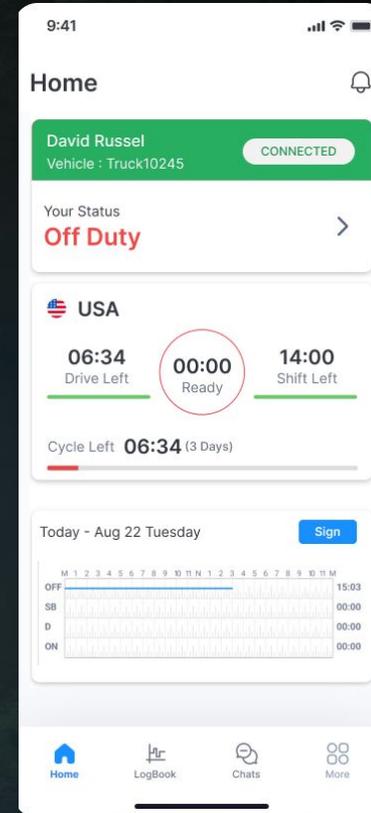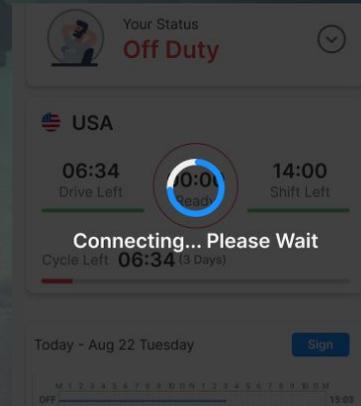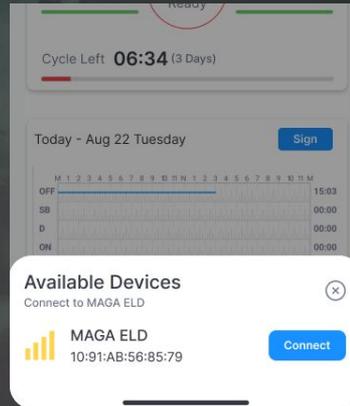



Connect to Vehicle ELD (3)

- ★ If the newly connected Vehicle VIN number differs from the Vehicle previously assigned to you, we will update the App and let you know
- ★ Please check to ensure you are connected to and driving the correct vehicle

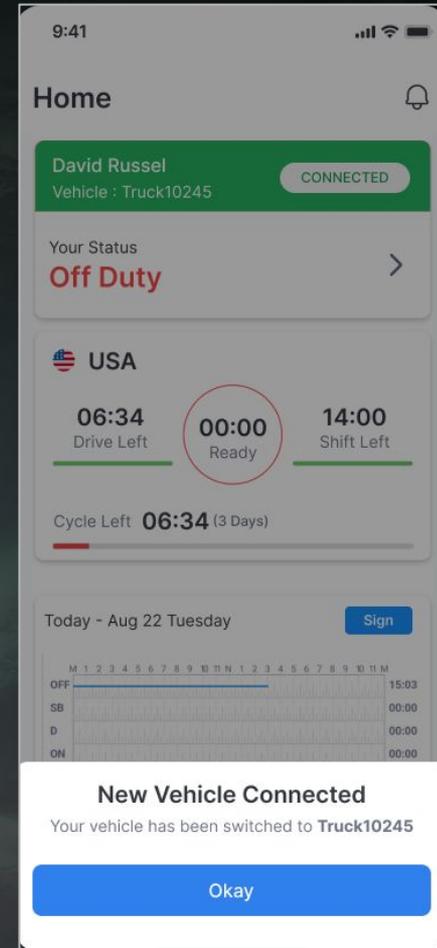



Driving with ELD

- ★ Start driving your Vehicle with ELD connected
- ★ Your Duty Status will automatically change to “**Driving**” when speed is more than 5 MPH
- ★ When the Vehicle is stopped for more than 3 minutes, the driving status will automatically switch back to “**On Duty**”

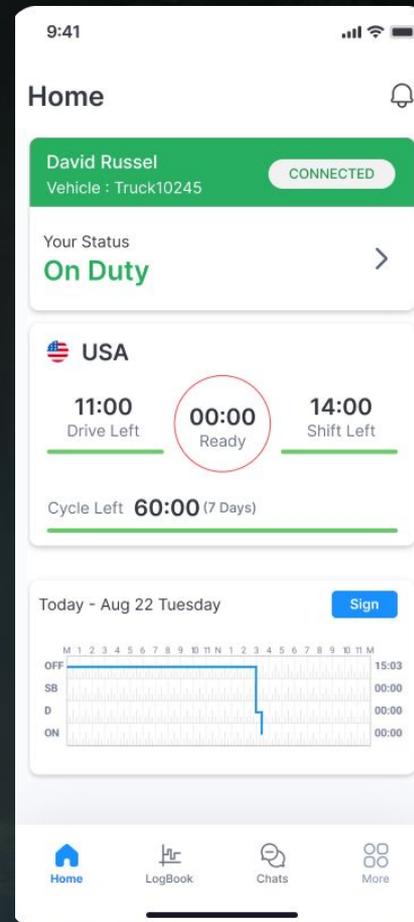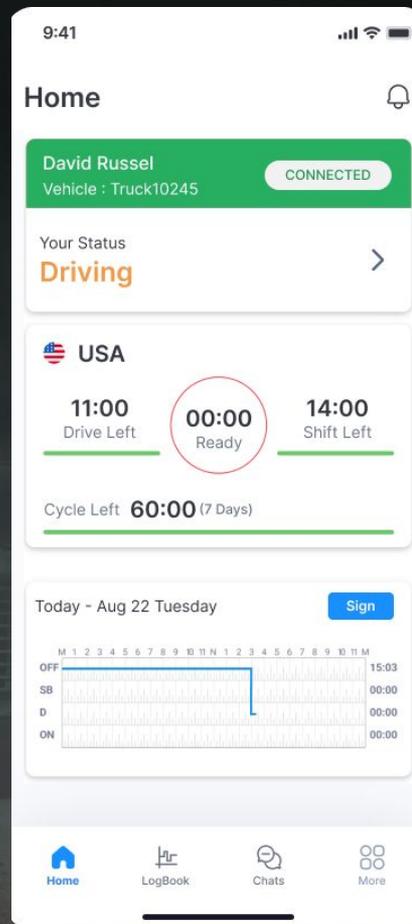




Switch Duty Status

- ★ Tap on tile with your Duty Status
- ★ A menu will open with your current Duty Status highlighted
- ★ Tap on the available Duty Status you would like to switch to
- ★ Add an optional comment or select a standard note and tap “Update”
- ★ Your Status tile will now be updated to the new status

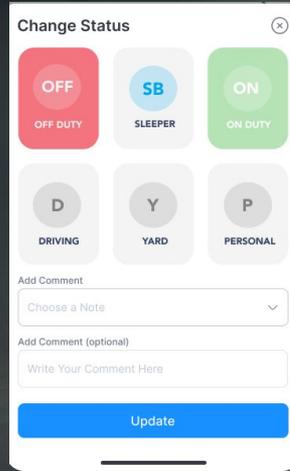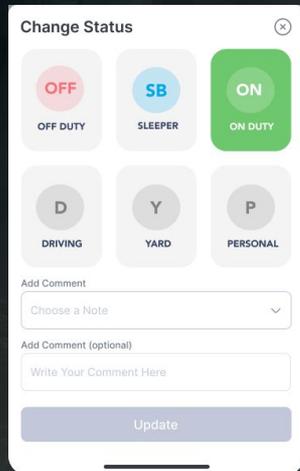




Disconnect from Vehicle

- ★ On the Logbook Home Screen, tap on the tile with your ELD connection Status
- ★ Tap “Disconnect”
- ★ When successfully disconnected, your Status tile will switch to red and state “Disconnected”

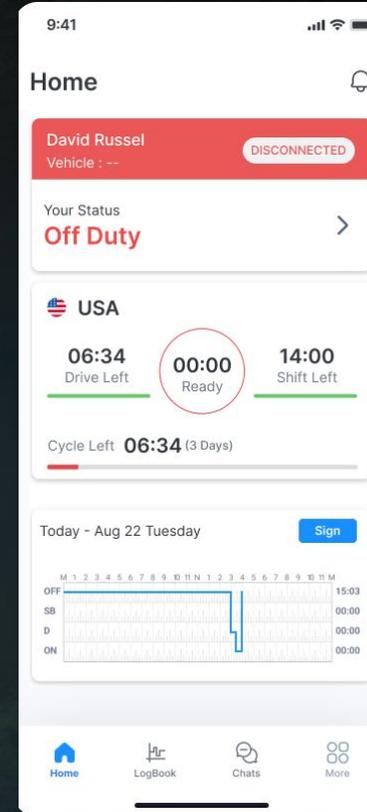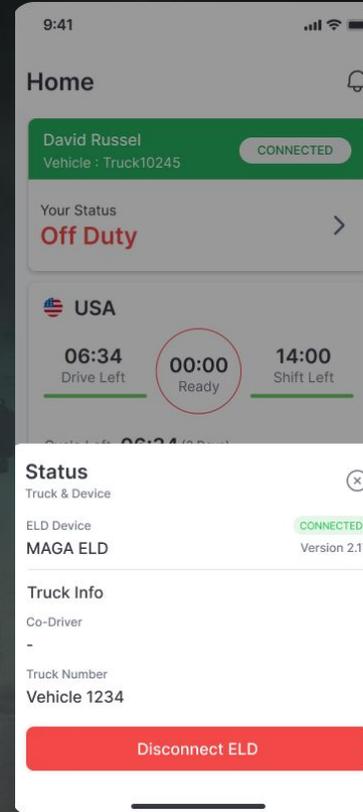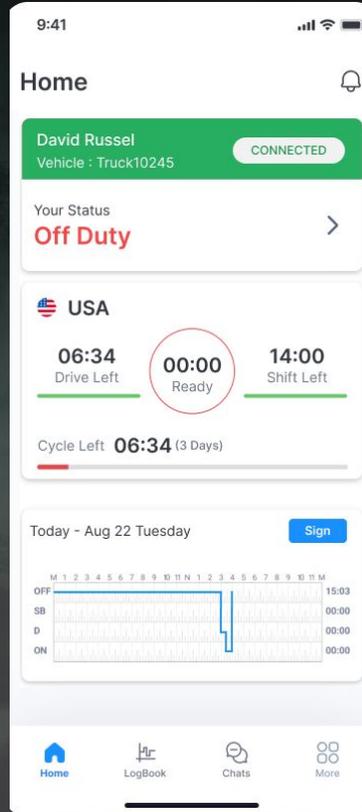



ELD Connection Failure

- ★ If the Truck has been disconnected, the Vehicle Connection tile will be red and state “Disconnected”
- ★ To check, click on the tile: if not connected, the App will search for available Devices
- ★ Reconnect to the correct ELD device

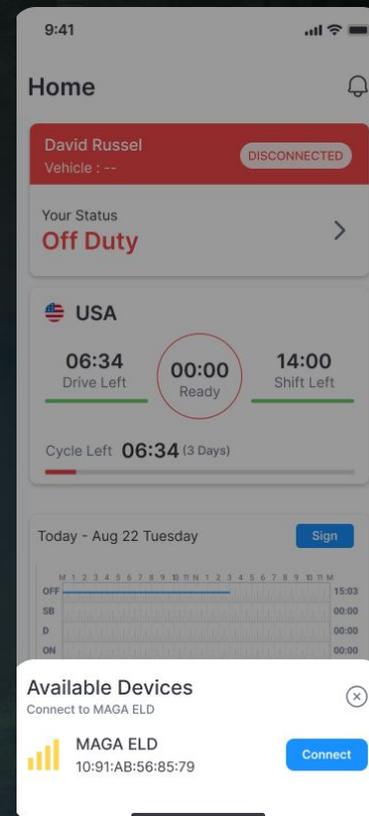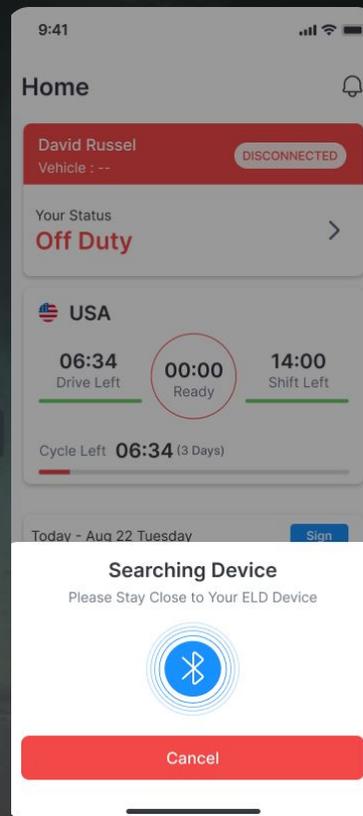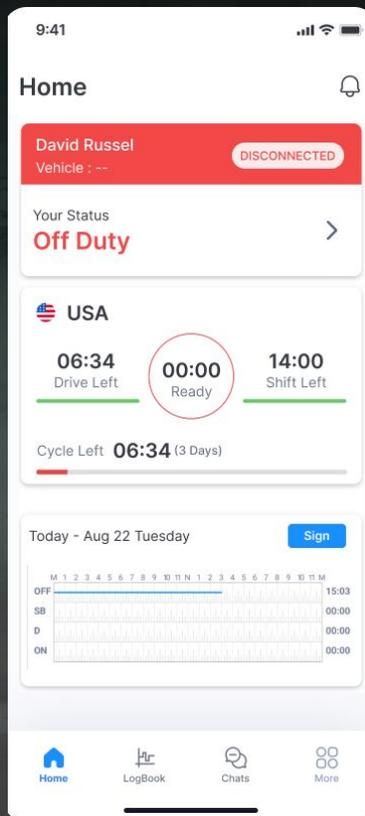


ELD Malfunction & Diagnostics

- ★ Once an ELD Malfunction or Diagnostic Event is detected you will receive an event Push-Notification and the Red Event icon will be visible at the top of each screen
- ★ Clicking on the icon/notification will open a screen with a list of all active events
- ★ Click on the Notification to Complete Required resolution steps: Generally, notify your Fleet, review your logs and manually enter missing data

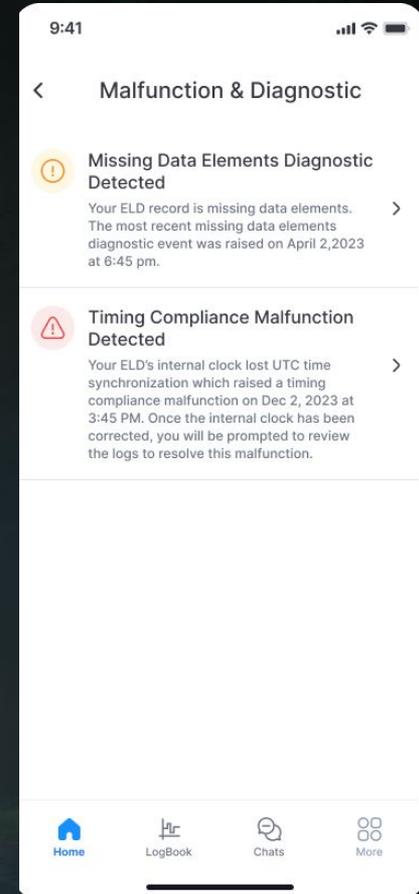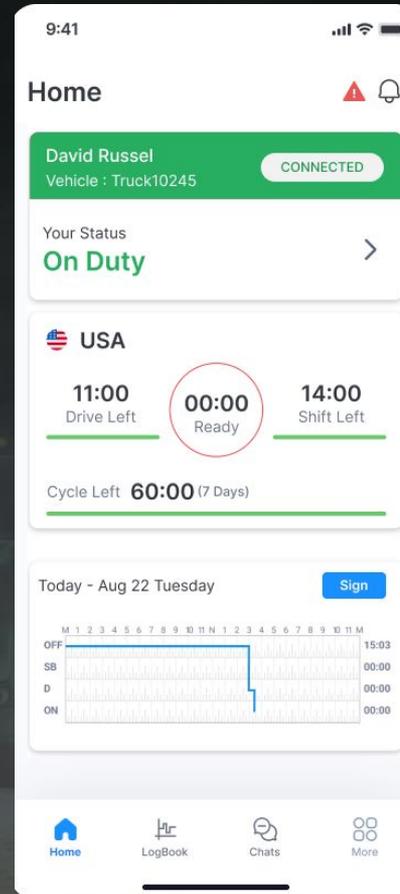



Unassigned Drive Time

- ★ If we detect an Unassign Drive Time event that is likely associated with your account, you will receive a notification
- ★ You can either Reject it with and explanation, or Accept it and your Logs will be updated

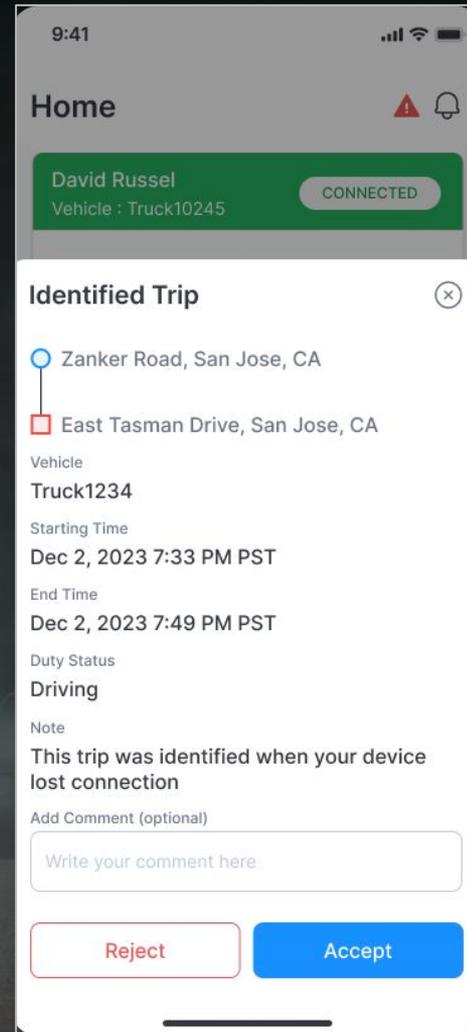


HOS Violations and Notifications

- ★ In case of an HOS violation, you will receive a push notification
- ★ On the Logbook Home Screen, you will see the “Violation” icon on the associated Log Graph where time under violation will be marked in red
- ★ Click on the Log graph and you will see further details about the violation

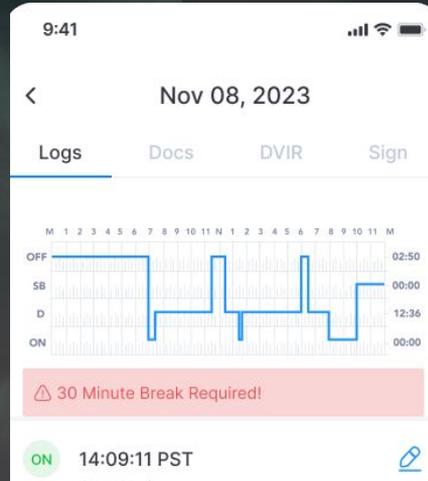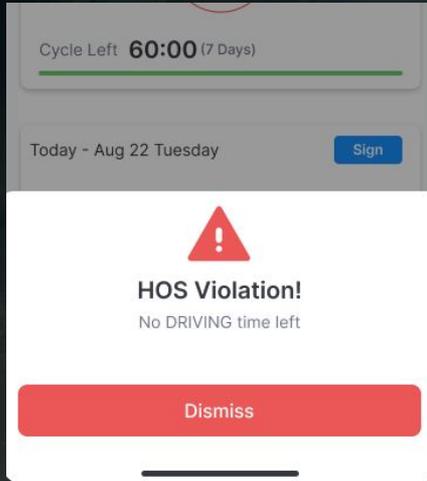

Complete Daily Logbook Information

- ★ Tap on “Logbook” on the bottom menu in order to open your Daily Log Page
- ★ Review your logbook entries
- ★ You can click on the “edit” icon to edit your logs in accordance with FMCSA rules
- ★ Navigate the tabs at the top of the page to access and edit your your Truck and Trip Docs, access the DVIR Workflow and Sign the Day’s Logs

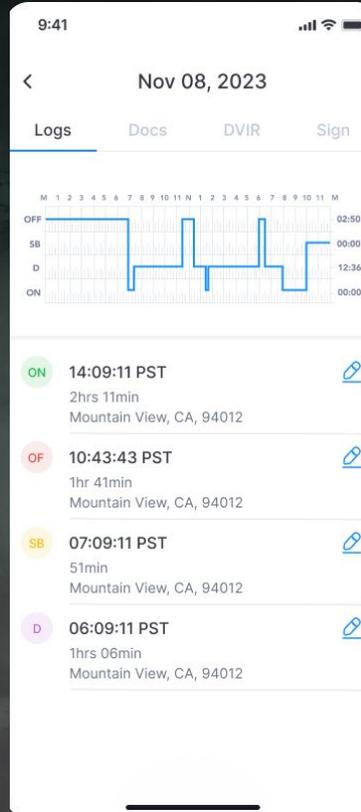

9:41 Nov 08, 2023

Logs Docs DVIR Sign

Vehicle Details

Truck No.
0030

Trailer No.
1LNHM81V87Y600143

Trip Details

Start Location
-

Destination Location
-

Shipping Documents
-

Miles Driven (Updates every 15mins)
-

Start Odometer (Updates every 15mins)
-

Comments

Driver & Carrier Details

Co Driver Name
-

9:41 Nov 08, 2023



Logs Docs DVIR Sign

No DVIR Listed
Start your Pre Trip Inspection

Start Pre-Trip Inspection



Sign Driver Logbook Daily

- ★ In order to sign your daily logs, tap the “Sign” Button on the logbook graph of daily logs that are missing your signature
- ★ Alternatively, you can tap the “Sign” tab on the “Logbook” page
- ★ Using your finger, draw your signature in the entry field and tap “Save”
- ★ Once signed, the “Sign” button on the respective logbook graph will turn to “Signed”

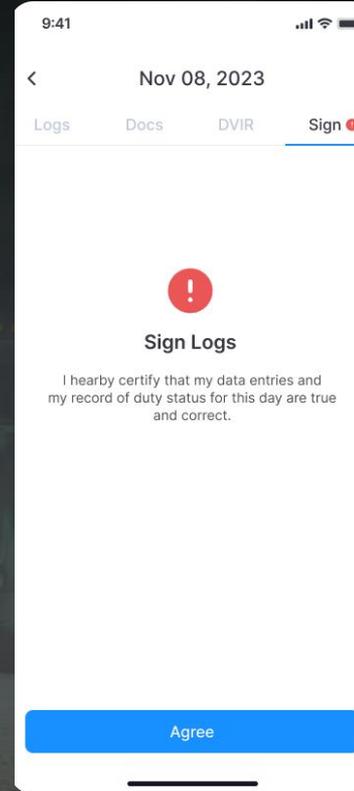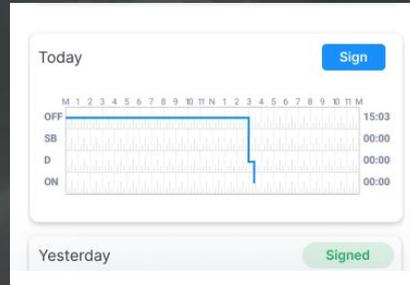



Accept/Reject Log Edits

- ★ When your Fleet Manager makes any changes to your Logs in accordance with FMCSA Rules, you will receive a notification once exiting Driving Mode
- ★ Review the suggested change in detail
- ★ Accept: Tab “**Accept**” and your logs will be updated accordingly with an edit annotation
- ★ Reject: Tab “**Reject**” and provide a explanation of why the suggested change is incorrect. There will be no change to your Logs

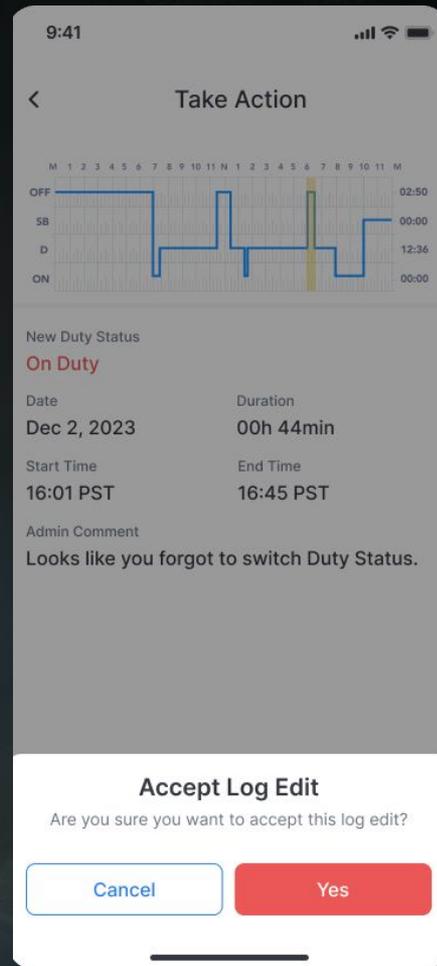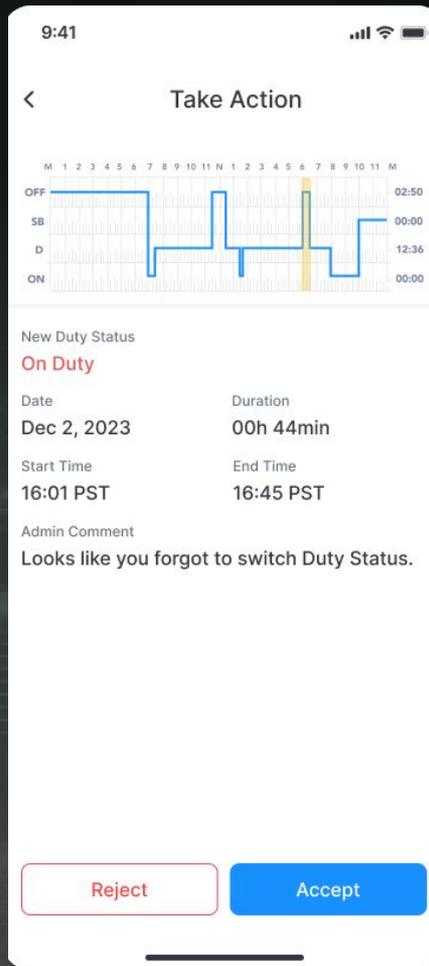





Roadside Inspection

- ★ Tap on “**More**” in the bottom navigation bar
- ★ Then, tap on the first tile called “**DOT Inspection**” and follow the instructions
- ★ Tap “**Start**” to begin Inspection and hand your device over to the Inspection Officer

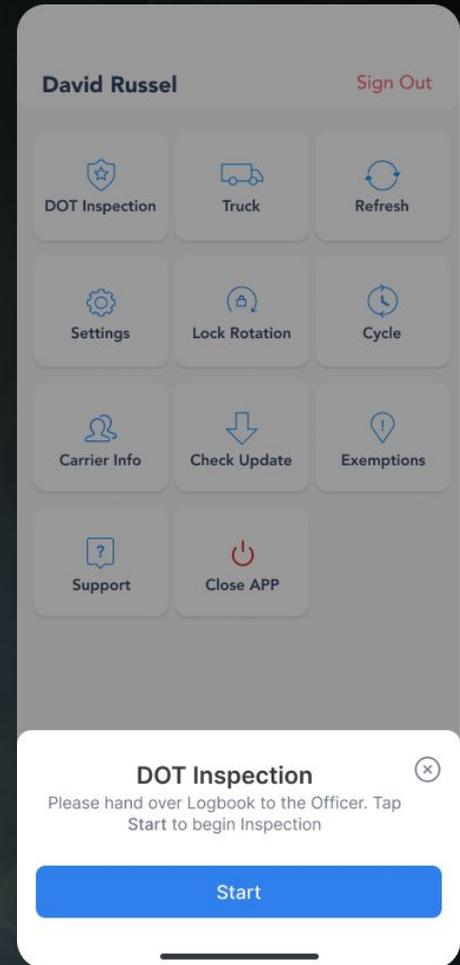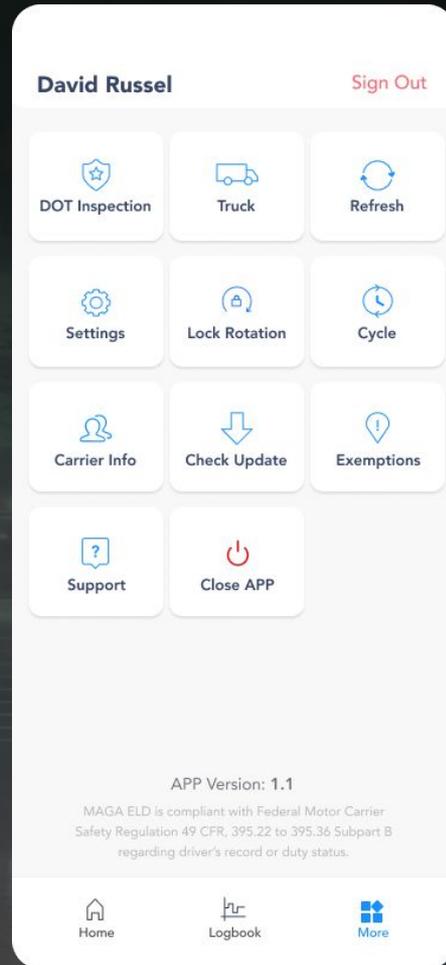



Show Inspection Report

- ★ The DOT Inspection officer can tap “Inspect” to begin
- ★ Select “Next” to review the Driver’s Daily Log Report

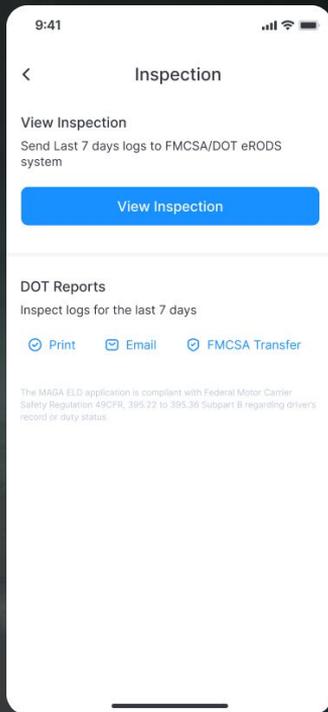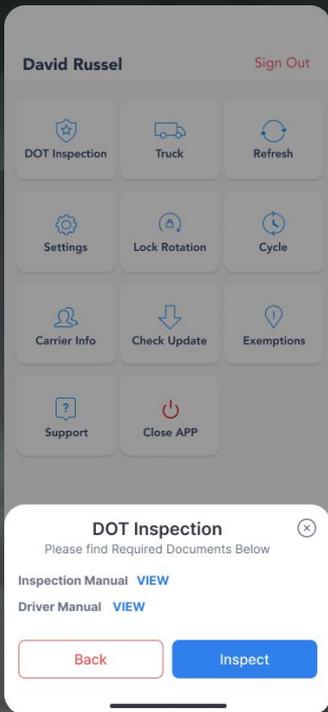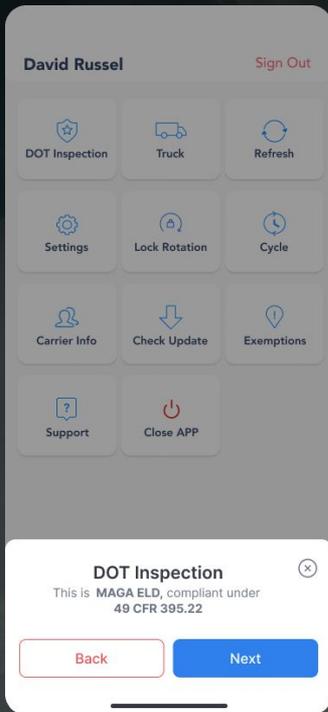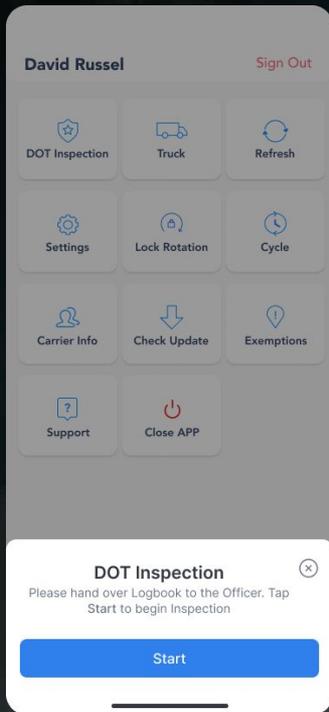

FMCSA Transfer

- ★ Tap on “DOT Inspection” in the “More” Menu
- ★ Select “FMCSA Transfer”

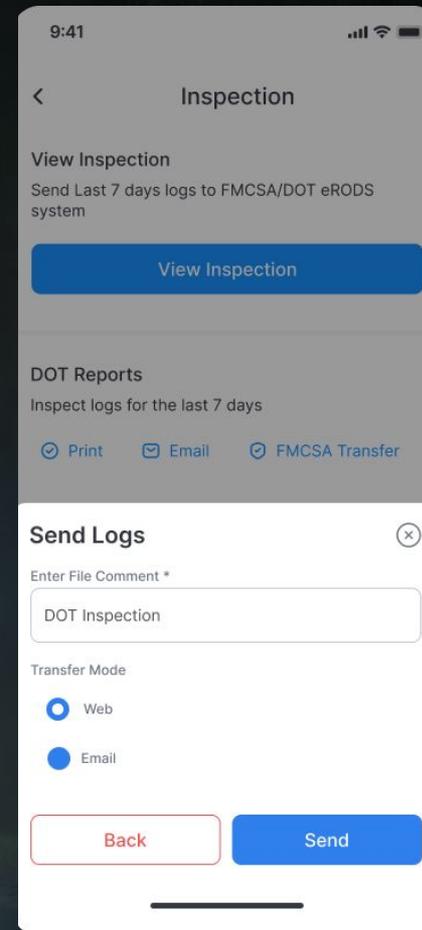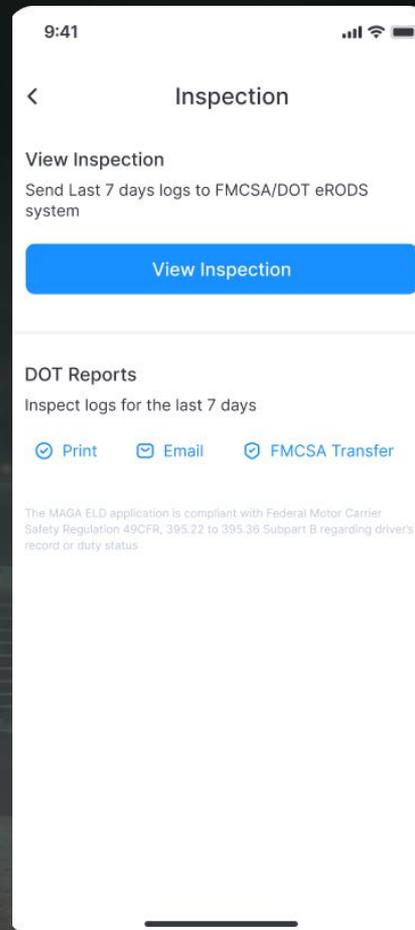

Print Inspection Report

- ★ Tap on “DOT Inspection” in the “More” Menu
- ★ Select “Print” and select a Wi-Fi-connected printer in your cab

09:20 [Icons] [Signal] [Battery]

PDF Save as PDF

Copies: 1 Paper size: Letter

DRIVER'S DAILY LOG December 05, 2023
USA 70 hour / 8 day (Interstate)

Date	USDOT	Driver License	License State
December 05, 2023	123452346	CSL36385	NV
ELD ID	Trailer Id	Timezone	Driver Name
VI X		PST	Austin Max
Co-Driver Name	ELD Manufacturer	Shipping ID	Date Diagnostic Indicators
	TruckX		No
24hr Start Time	Driver ID	Co-Driver ID	Truck Trailer ID
Midnight	sh78719a4e543940-9975		
	58260d58ec7d		
Unidentified Driver Records	ELD Malfunction Indicators	Carrier	Truck Tractor VIN
No	No	Demo Company	
Start/End Odometer	Miles Today	Start/End Engine Hours	Exempt Driver Status
/	/	/	0
Start Location	Destination Location	Current Location	
		Sunnyvale, CA, 95086	

Recap
12:04 04:22
12:03 00:00
12:02 00:00
12:01 00:00
11:59 00:00
11:29 00:00
11:28 00:00
11:27 00:00
Cycle Left
65:08

Start	Location	Odometer	Eng Hours	Status	Notes	Available Today
00:00	Sunnyvale, CA, 95086			OFF DUTY		00:00

Pre Trip Inspection

Truck & Trailer	Title	Description	Status
		No defects logged	

Post Trip Inspection

Truck & Trailer	Title	Description	Status
		No defects logged	

1/10

I certified that these entries are true and correct

Driver Signature

09:20 [Icons] [Signal] [Battery]

All printers

Searching for printers

Add printer

Email Inspection Report

- Tap on “**DOT Inspection**” in the “More” Menu
- Select “**Email**”, enter recipients and click “**Send**”

