MDM ELD

DRIVER'S INSTRUCTION MANUAL

MDM

Downloading
an application

Type **MDM Eld** into the search bar of Google Play. Tap on "Install" button to download the app into your device.
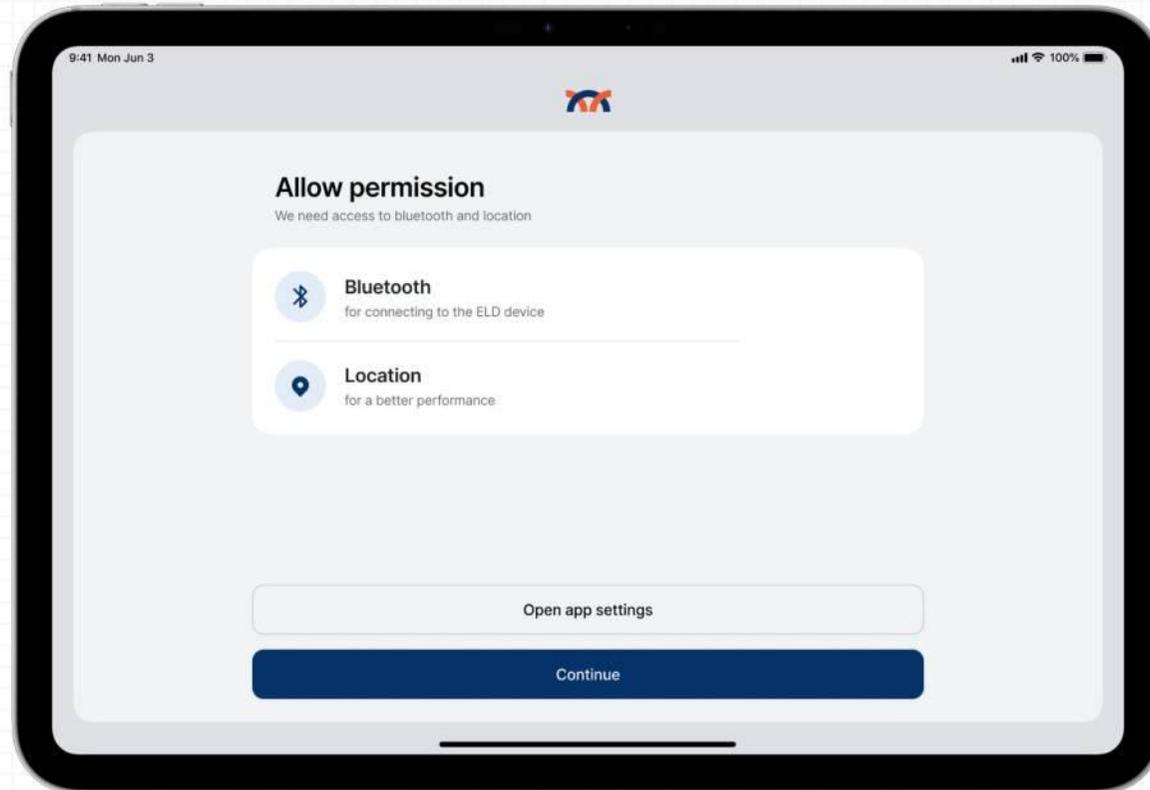
Type **MDM Eld** into the search bar of App Store. Tap on "Get" button. Tap on "Install" button to download the app into your device.
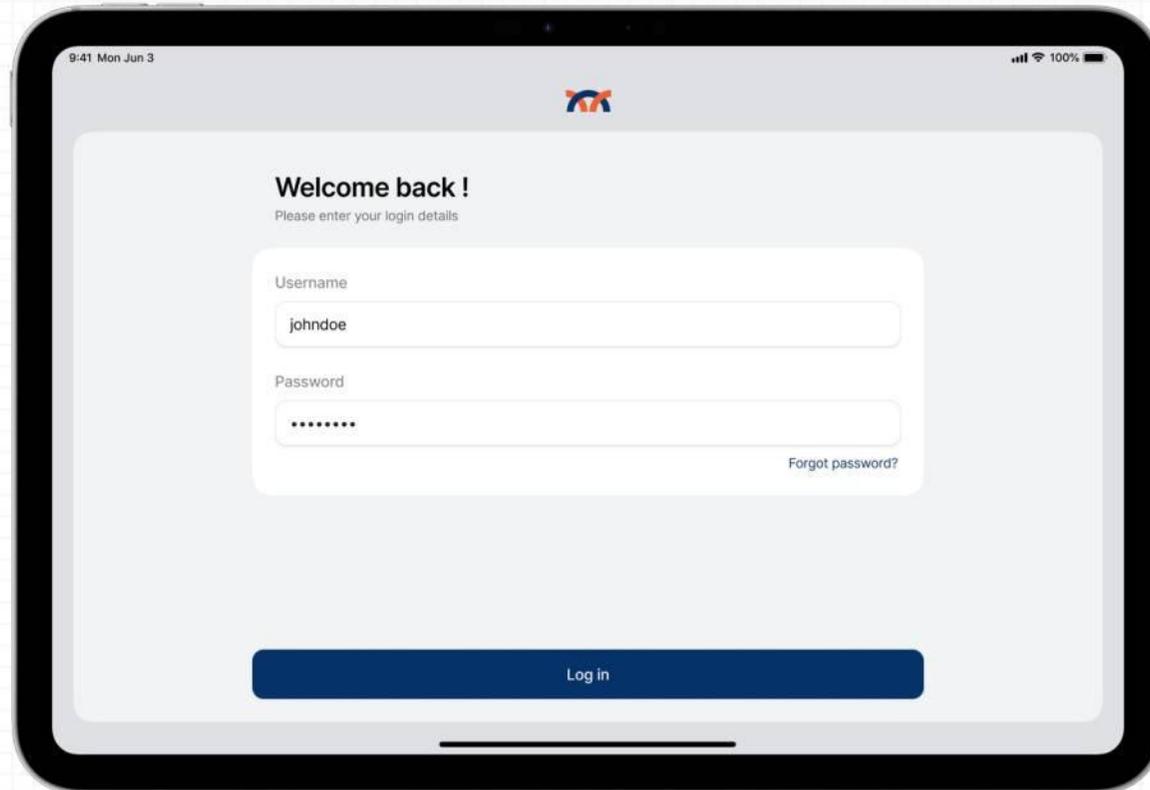
ELD device installation

Make sure that your vehicle's engine must be OFF. Locate the diagnostic port inside your vehicle's cabin. The diagnostic po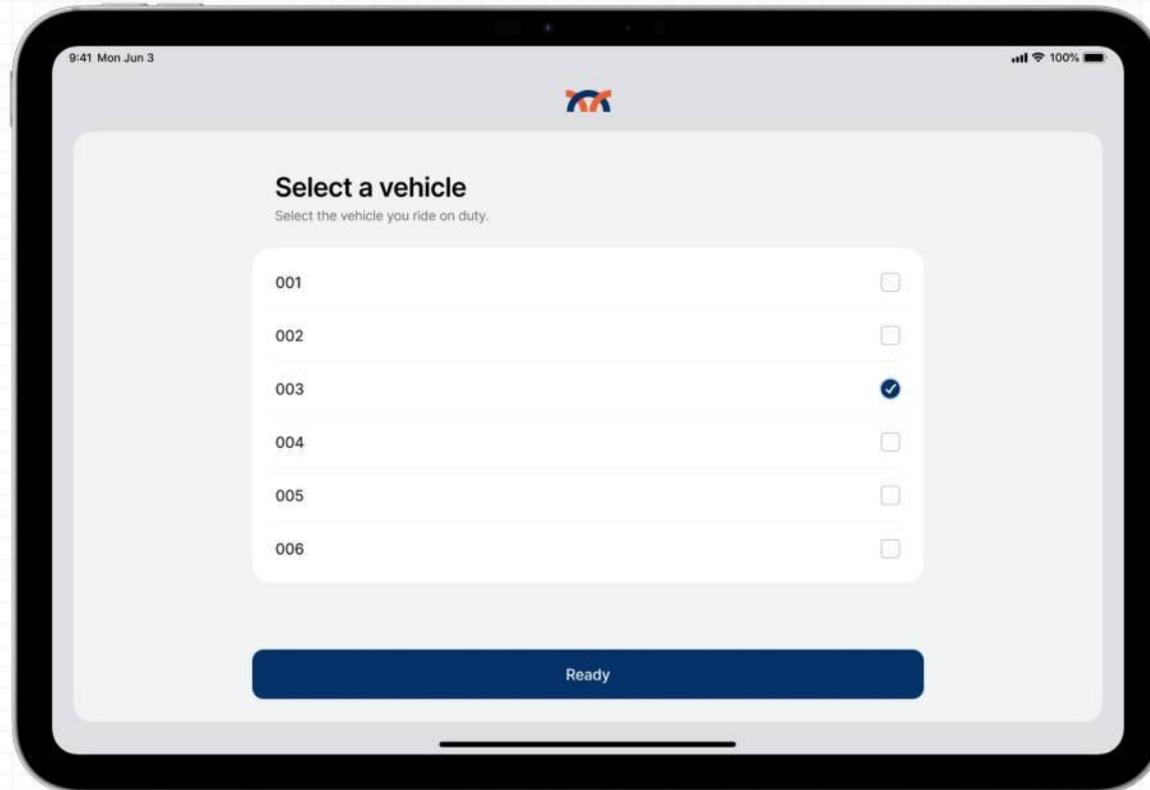rt is typically located in one of the following places: **1** under the left side of the dashboard, **2** under the steering wheel, **3** near the driver's seat, **4** under the driver's seat.
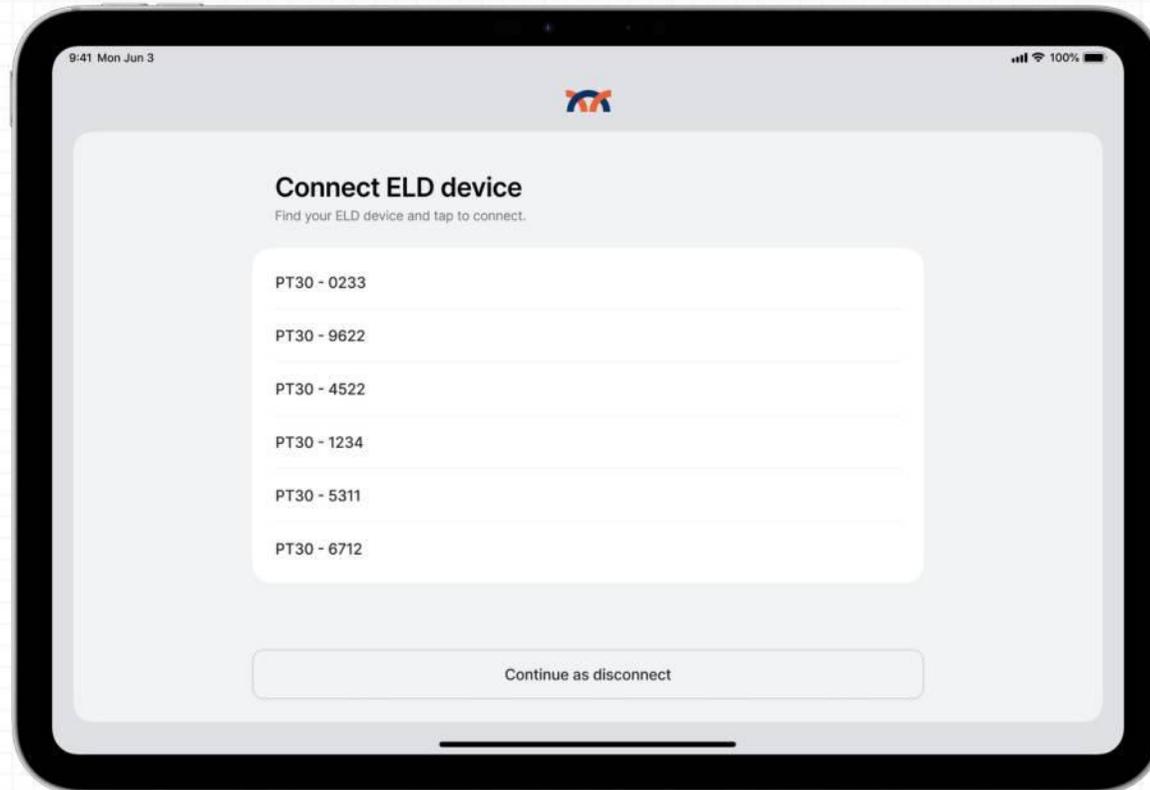
First of all application need to get access to bluetooth and location for exchanging data between driver's mobile device and **ELD device.**
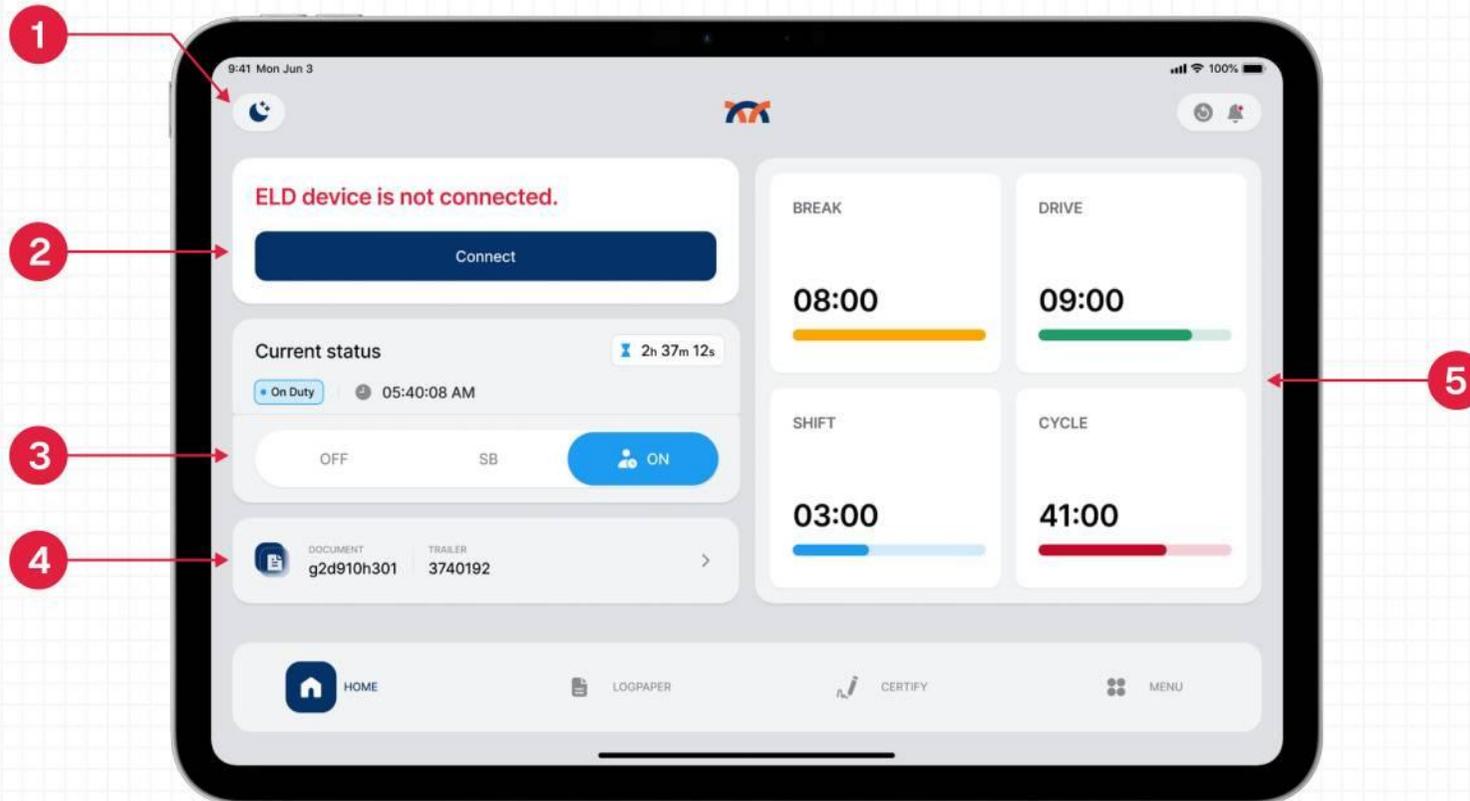
Log into application by using your username and password. If you do not have an account, please contact your fleet manage.
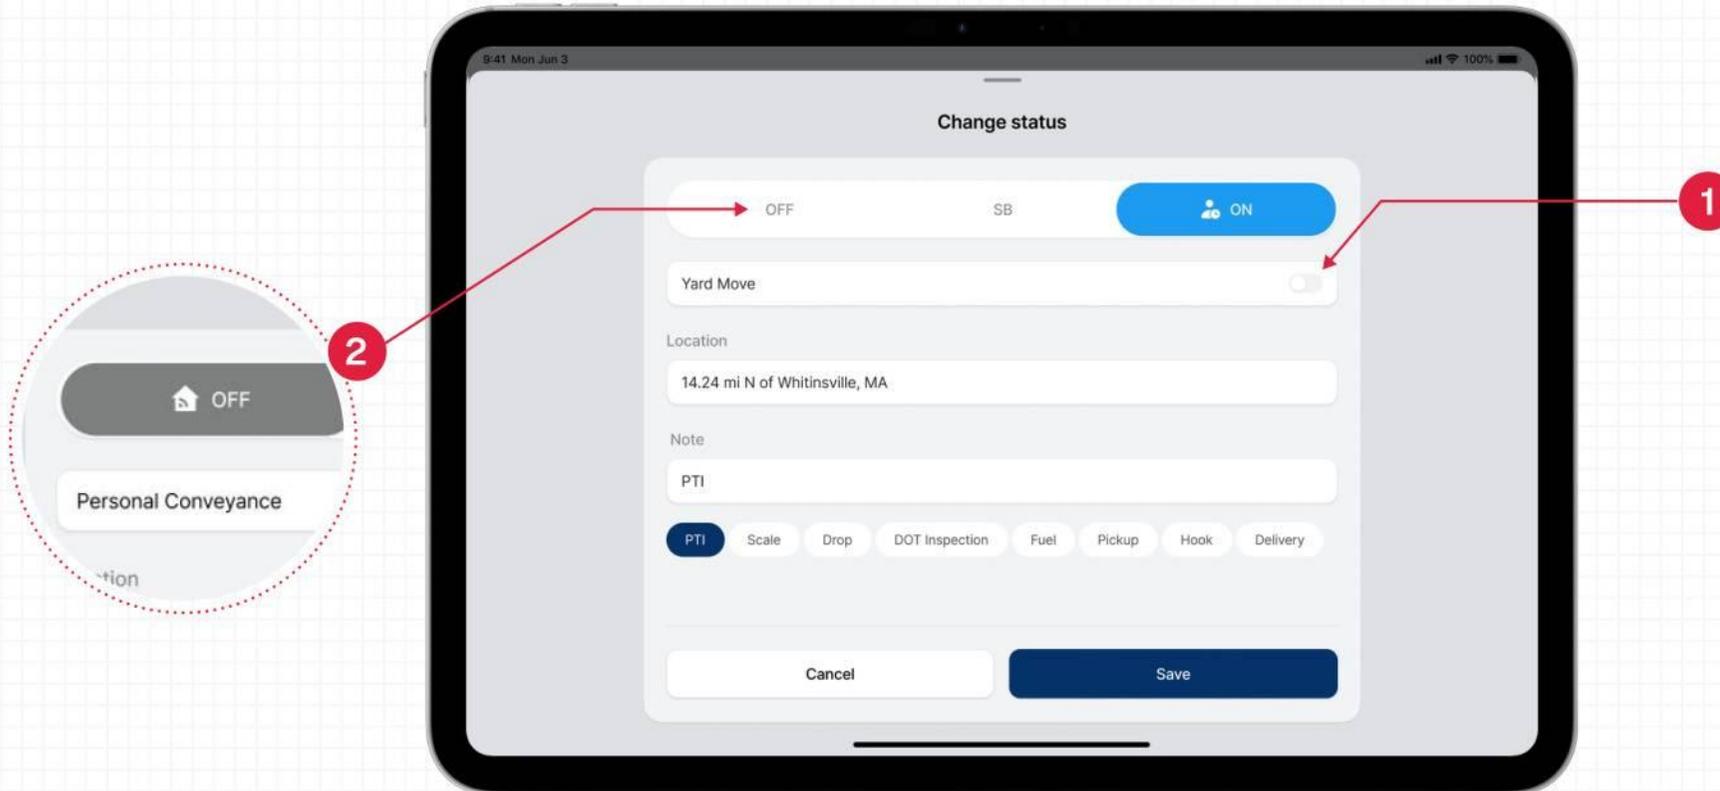
A list of available vehicles is shown below. Select the vehicle for your duty use. Make sure to choose the one assigned to you.

Connect ELD device

Find your ELD device and tap to connect.

PT30 - 0233

PT30 - 9622

PT30 - 4522

PT30 - 1234

PT30 - 5311

PT30 - 6712

Continue as disconnect

Then, the list of nearby Bluetooth devices will be showed up, choose the matching ELD device which plugged in to your vehicle.
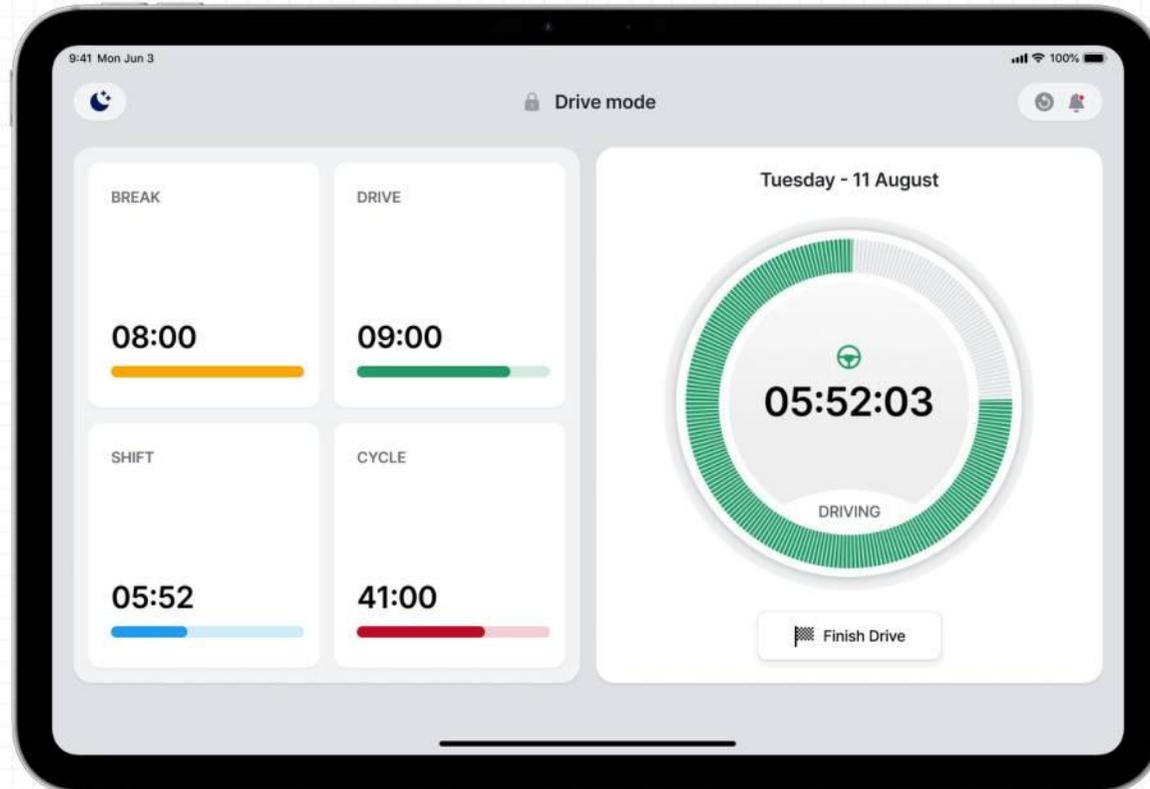
Home screen

1. Dark/Light mode switcher.

2. Reminder to driver, if there is no connection with ELD device.

3. Status change section.

4. Driver's current shipping documents. Clicking opens document details page.

5. Driver's current time limits.

Status change

If your vehicle is connected to an ELD device, the status change screen will display 3 status types. There are 2 extra main statuses: Yard move, Personal conveyance.

1. Driver can switch to Yard Move status status inside of the On Duty status.

2. And just like that to Personal Conveyance status can switch by Off Duty status.

Driving event screen

The Driving page provides real-time information about your duty status, driving hours, vehicle connection with ELD device to help you stay compliant and informed during your trip.

Shipping documents

Shipping Documents

Trailer number

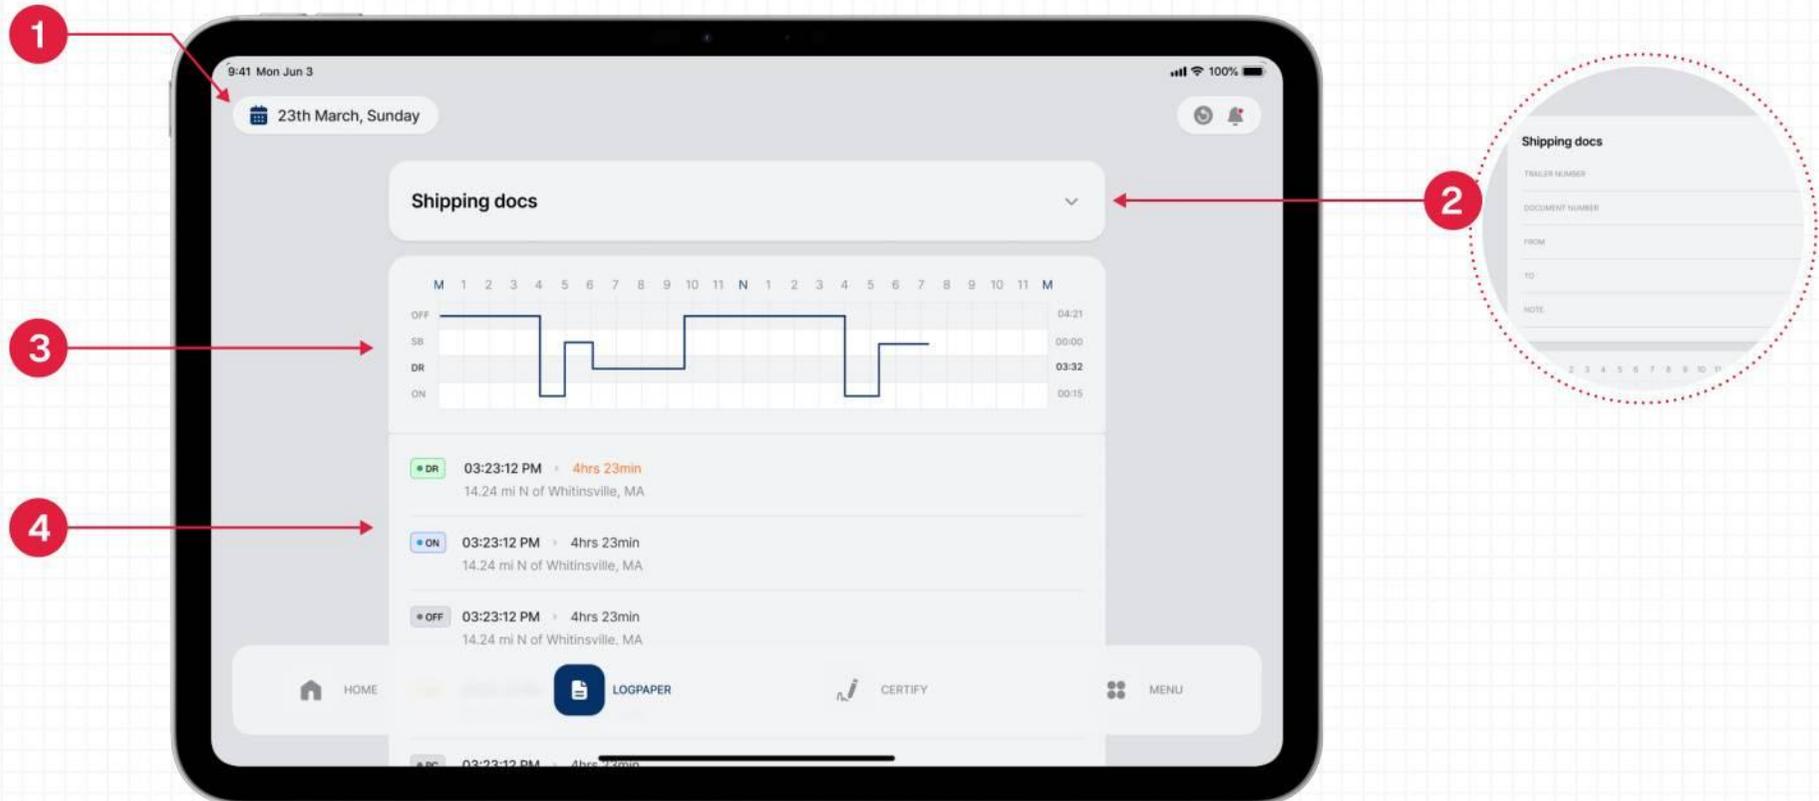TW0192

Document number

GW2910

From

WY

To

KY

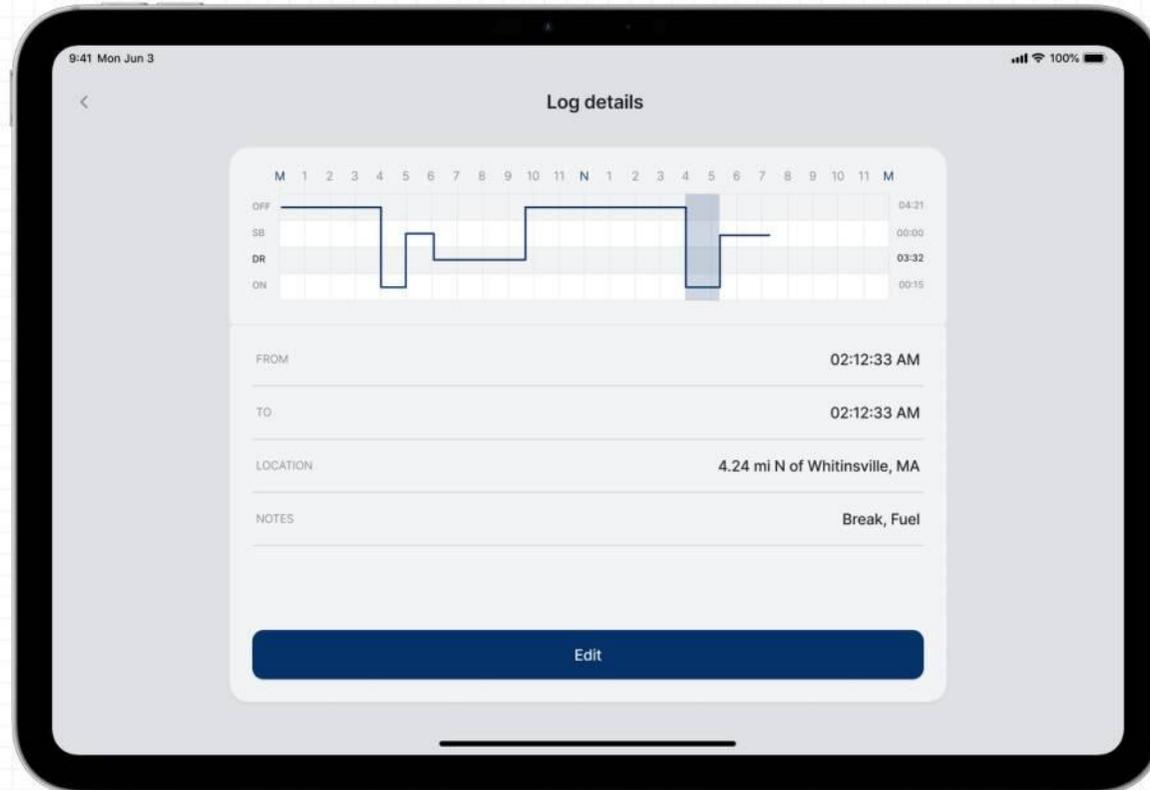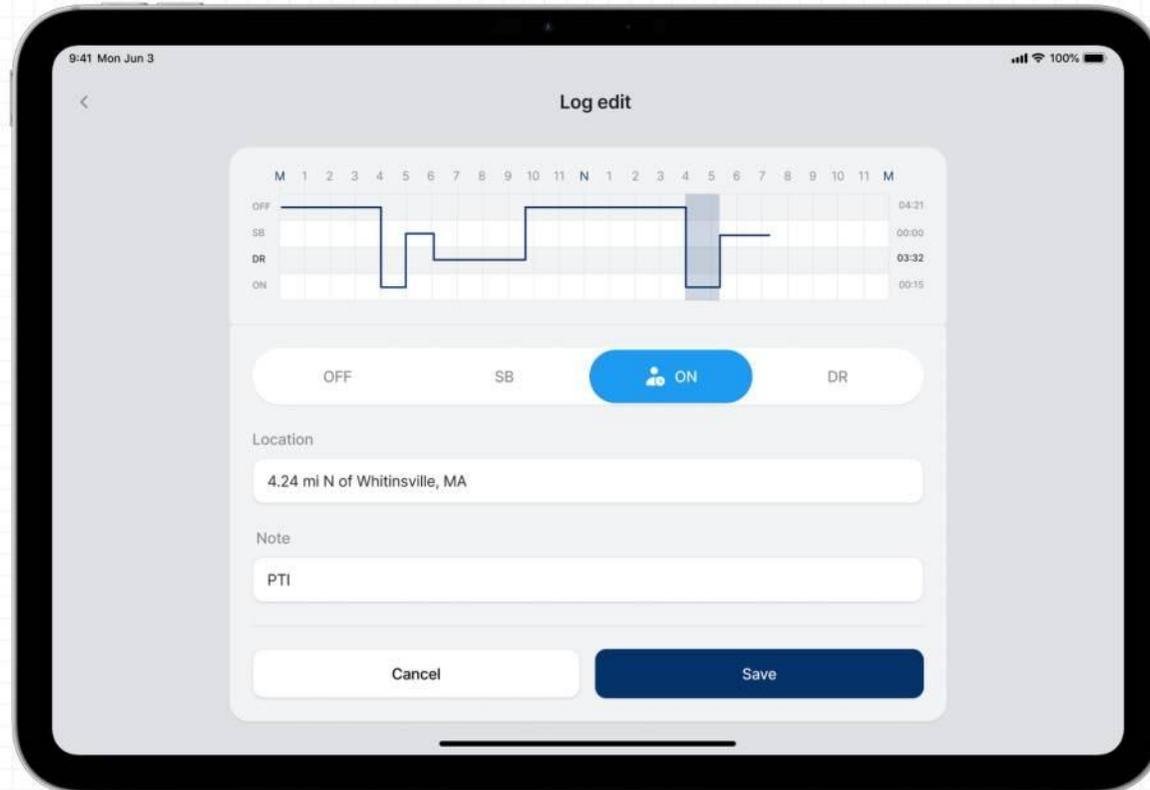Note

delivery goods

Cancel   Save

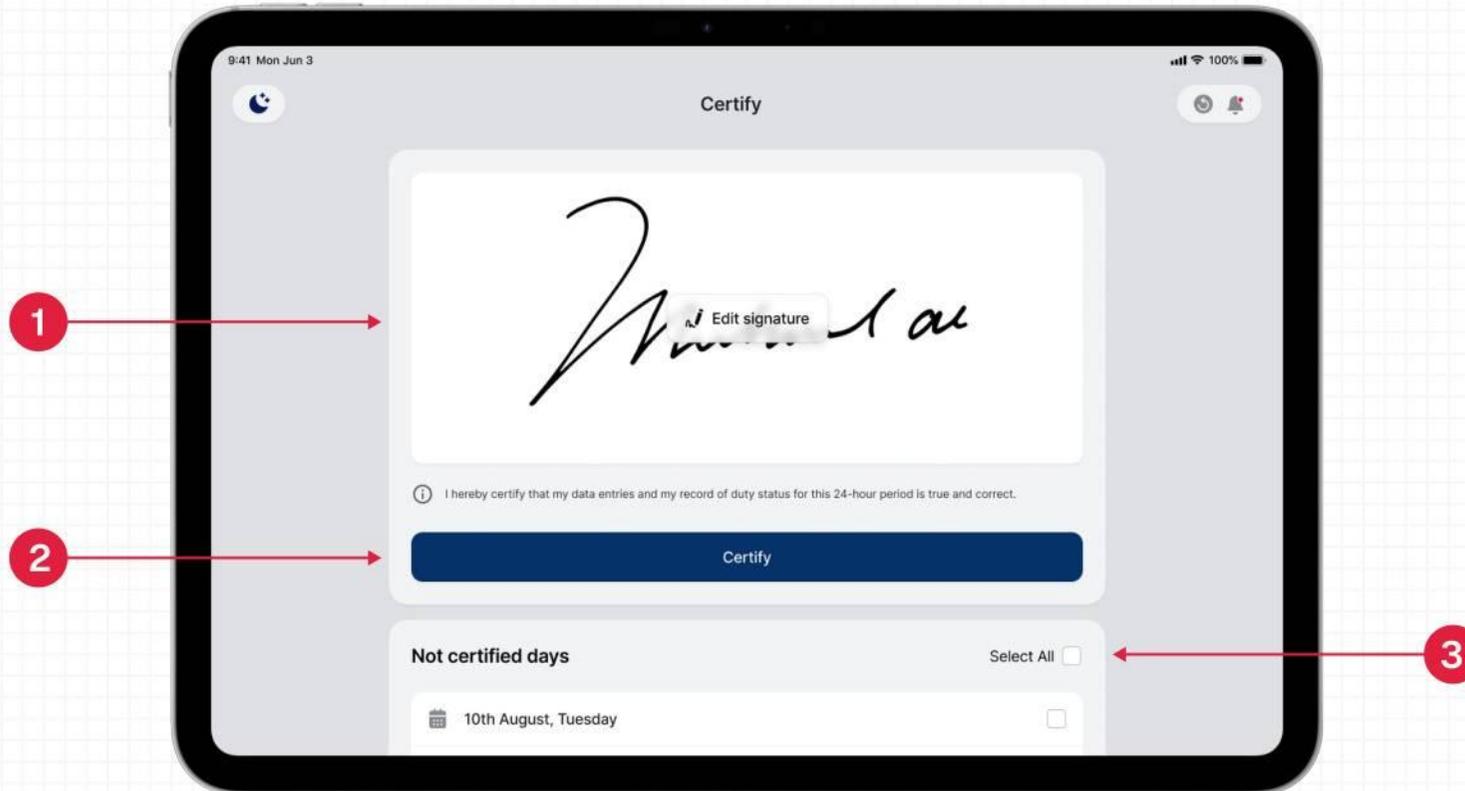Shipping documents - all required paperwork related to the transportation of goods

1. Calendar, driver can select a day to see the past logs.

2. Shipping documents for the selected day

3. Log graphs in this day

4. Logs include status type, created time, duration, and location. Clicking on a log will open the log detail window.
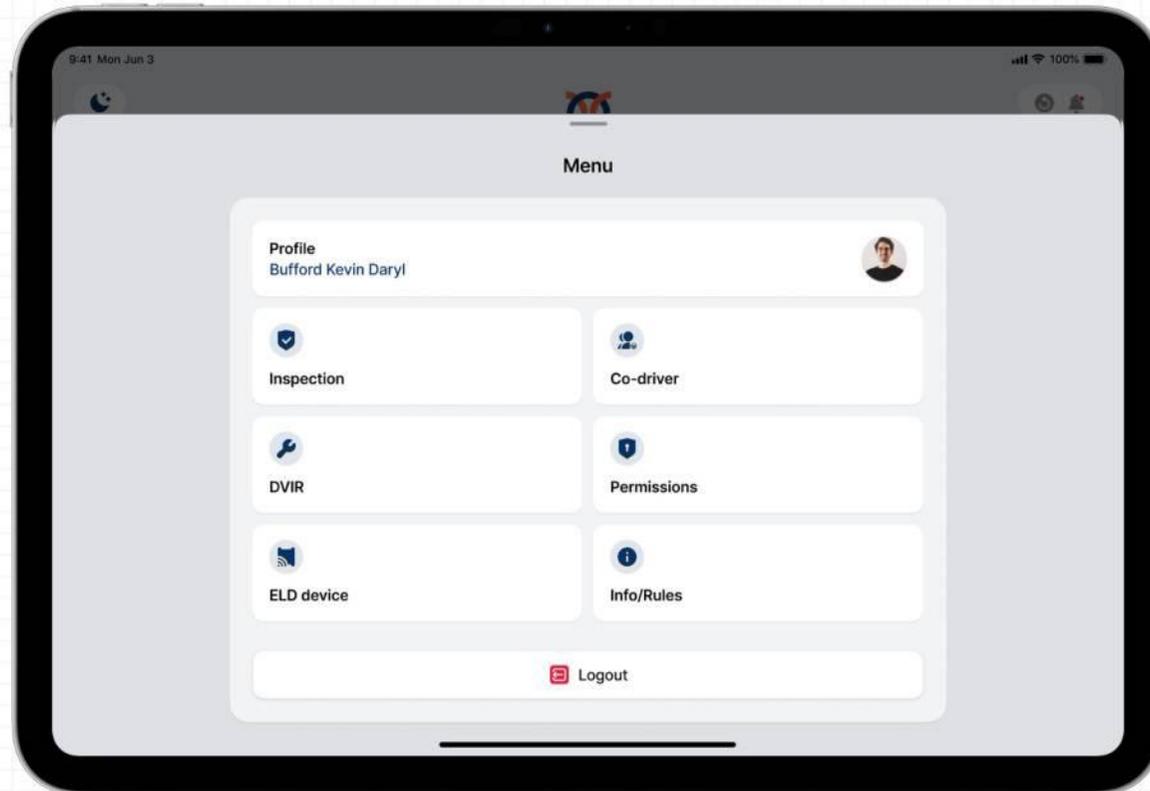
This page displays the details of a selected log. Click the Edit button to open the log editing page.
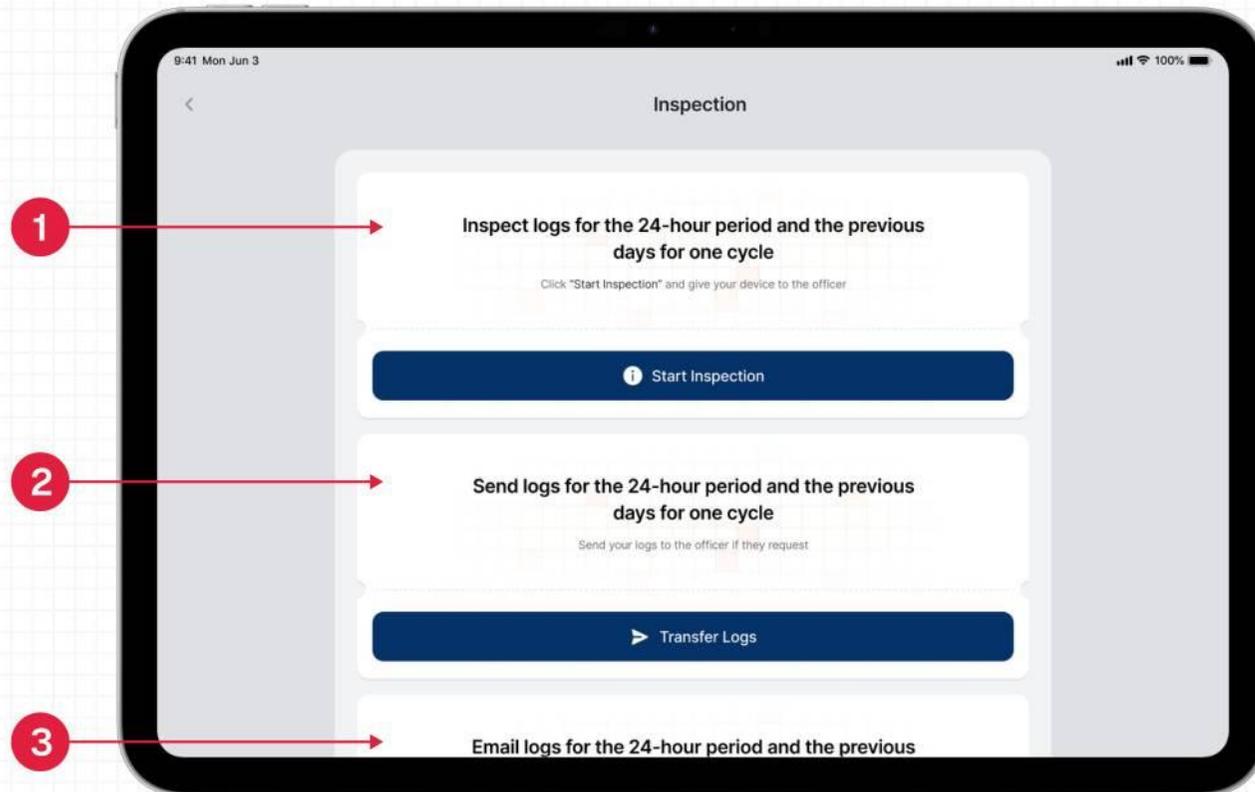
Editing is allowed for all log events except for Driving events.

1 Driver's signature image.

2 Certify only for today.
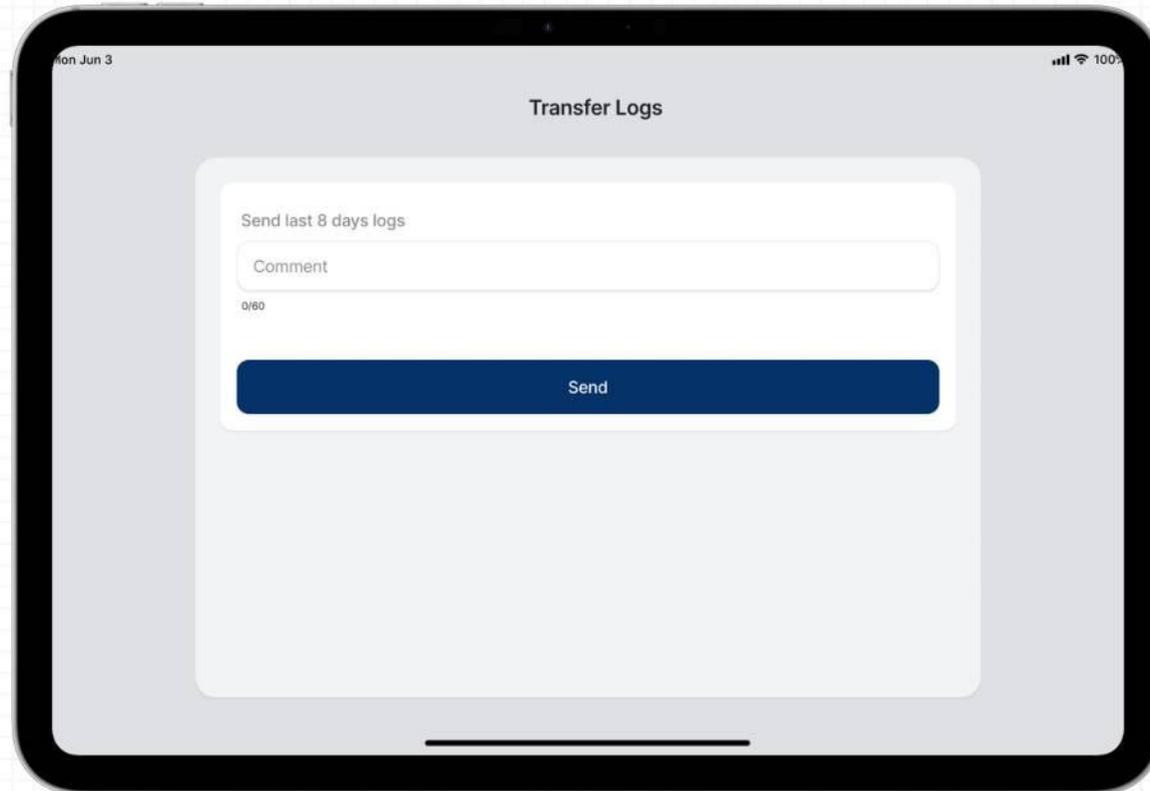
3 Select all uncertified days and certify all at once.

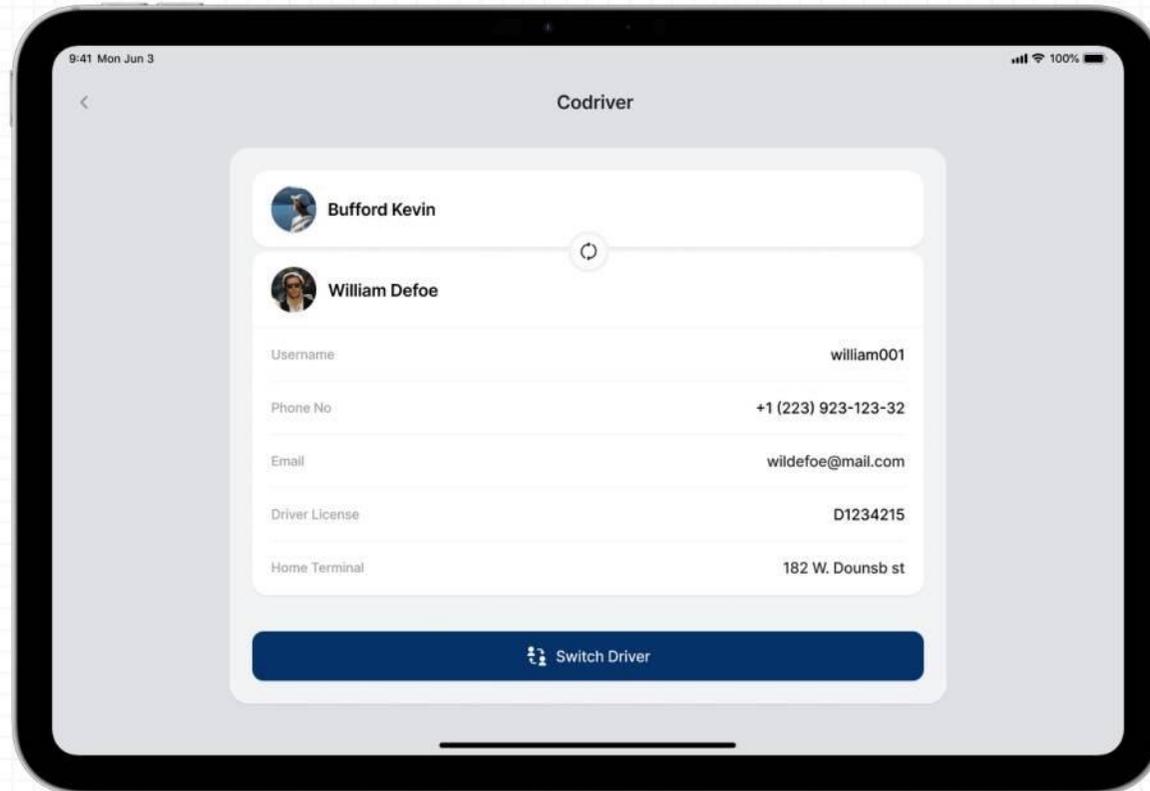Menu contains all essential sections for managing your account.

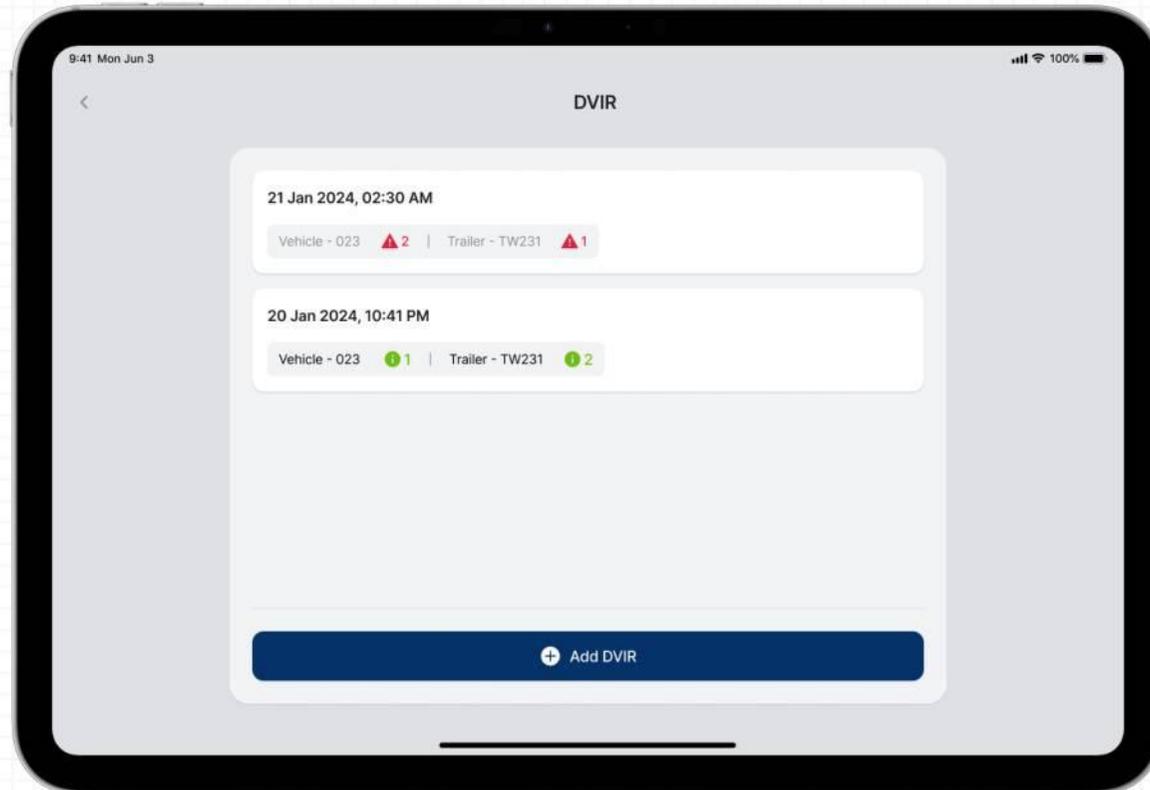The page for representing required reports. There are 3 types of inspection:

1 Daily report

2 Transfering logs

3 Send logs by email

Transfer Logs

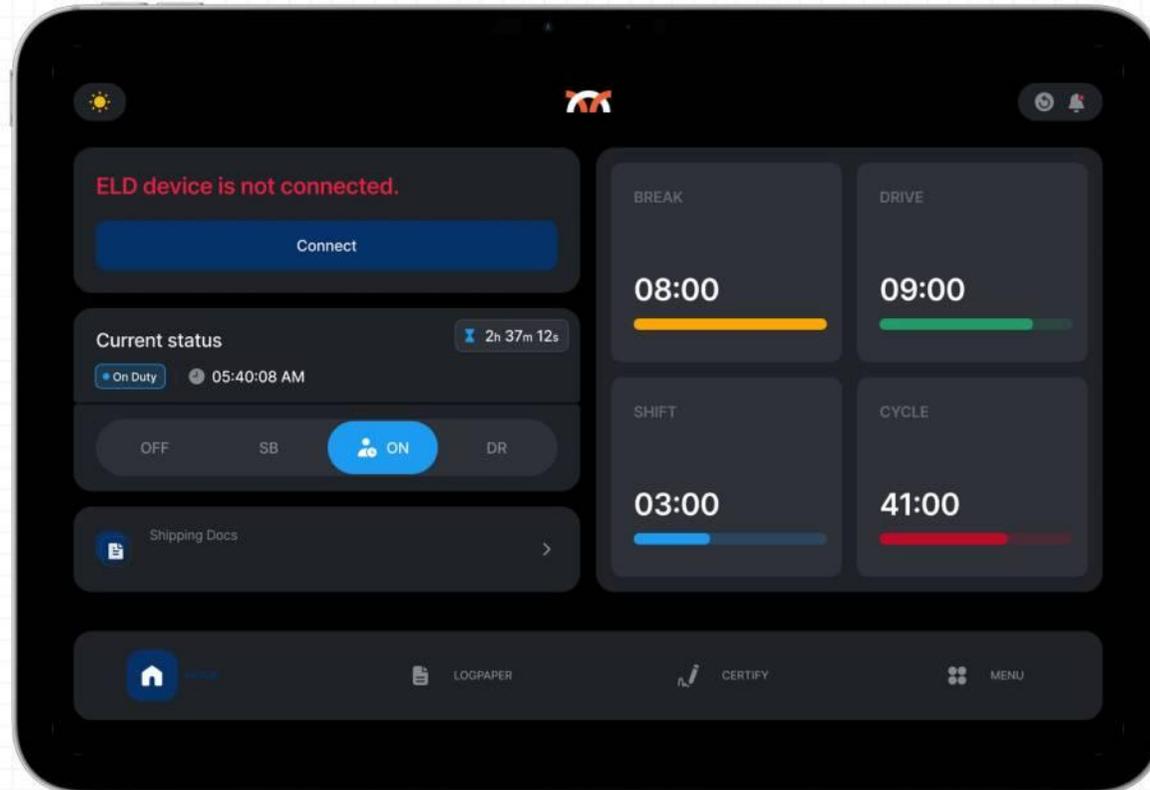Send last 8 days logs

Comment

0/60

Send

To transfer your logs during an inspection, enter the comment provided by the inspector and tap the Send button. Then, hand your tablet to the inspector.

If a co-driver is present, drivers can switch at any time. After clicking the Switch Driver button, the current driver is logged out, and the login page automatically opens for Codriver.

Submit a new DVIR if you find any issues with your vehicle during inspection.
After the issue has been repaired, you can update the report by marking it as fixed.
If needed, you can also delete created DVIR.

The driver can switch to Dark Mode for a better viewing experience.

MDM

📞 +1 831 400 88 88

🌐 www.mdmeld.com