

GPS FAST

Gps Fast ELD - Operation manual for Electronic Hour of Service

| | |
|----------|--------------|
| Updated | 4 April 2017 |
| Revision | 2.6.7 |

GPS FAST ELD - HOS

Quick Reference Guide

Table Of Contents

1 LOGIN

- 1.1 Registering on the WIFI network.
- 1.2 Login screen.
- 1.3 Demo Account
- 1.4 Licensing

2 GPS FAST ELD

- 2.1 Main Screen
- 2.2 Changing Your State
 - 2.2.1 Automatic State Changes
 - 2.2.2 Officer Screen
 - 2.2.3 Inspection State
- 2.3 Entry View
- 2.4 Extended View
- 2.5 Getting To Other Screens
- 2.6 Violations
- 2.7 Submit Button – ELECTRONIC SIGNATURE
- 2.8 Program Bugs or Errors
- 2.9 Info Button

3 Cycle Report

- 3.1 Cycle Reset

4 Calendar

5 Edit

- 5.1 Easy Edit
- 5.2 Edit Existing event
- 5.3 Add entry before/after event
- 5.4 Delete entry

6 About

- 6.1 Sending Logs

7 WIFI


1 LOGIN

1.1 Registering on the WIFI network.

The Piccolo Plus acts as a WIFI Hot Spot, and can provide an internet connection to your Android Tablet. This is not needed if you are using a phone, since the phone has its own data plan.

To connect to the WIFI Hot Spot, you need to first log into the WIFI network. The network name for your Piccolo provided WIFI is typically “GFT” plus your truck # (eg GFT1234). The password to the WIFI is available from your Dispatcher. Further explanations on how to set up your WIFI can be found in the WIFI section #7 at the end of this manual.

Click “I Agree” to begin using the app. Clicking ‘Cancel’ will exit the app.

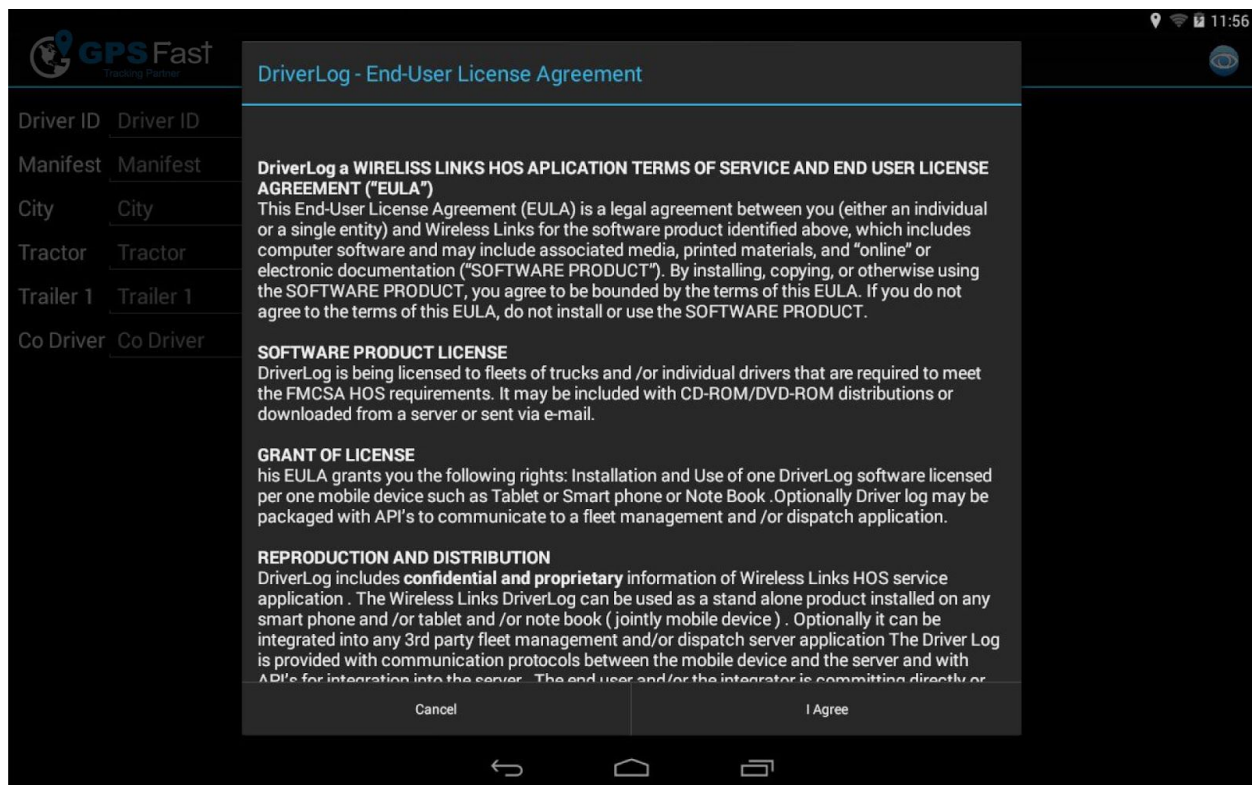

1.2 Login screen.

- **Driver ID** - essentially your username.
- **PIN** - your password. Default **PIN** is **2014**. You can change your **PIN** after you log in.
- **Manifest** - the number assigned to the cargo you are transporting.
- **Odometer** - should be automatically filled from your truck engine sent via the Piccolo Plus GPS unit, if it's not then fill it in manually.
- **City/State** - should be filled in automatically by the tablet GPS. If it is not, you will have to fill it in manually.
- **Tractor** - the name given to the truck you are driving.
- **Drive** - a dropdown menu where you can switch between Long Haul and Short Haul as directed by your supervisor
- **Trailer 1 and Trailer 2** - the trailers name /numbers and to be filled only if you have a trailer hooked up.
- **Co Driver** - should be filled out when you have a co-driver in the truck with you.

Legend

- Not a required field
- Required field

| | | | | | |
|-------------------------------|-----------|-----------|-----------|------------|--|
| Your username | Driver ID | mark | PIN | 2014 | Initially set to 2014 |
| Transport Document Number | Manifest | Manifest | Odometer | 0 | Odometer entered from JBUS via Piccolo |
| Location entered by GPS | City | Lyndhurst | State | New Jersey | Location entered by GPS |
| Your truck's username | Tractor | 3050 | Drive | Long Haul | Long Haul/Short Haul dropdown |
| Trailer Number, if applicable | Trailer 1 | Trailer 1 | Trailer 2 | Trailer 2 | Trailer Number, if applicable |
| Your Co Driver's name | Co Driver | Co Driver | | | |

Legend


- ➔ Required
- ➔ Not Required

For training, just enter **demo** in the **DRIVER ID** field and press log in.

1.3 Demo Account

For your convenience, we have provided a demo account with GPS FAST ELD version 10.8 and up. This is for training purposes, and getting familiar with the application.

For the demo account, you need only put “Demo” in the Driver ID field, and nothing else is required. Simply click Log In, afterwards, and you will have access to a demo account with seven days of data in the logs. It is fully possible to interact with the demo account, this is so you can practice the different features and get a feel for and familiarity with the environment.

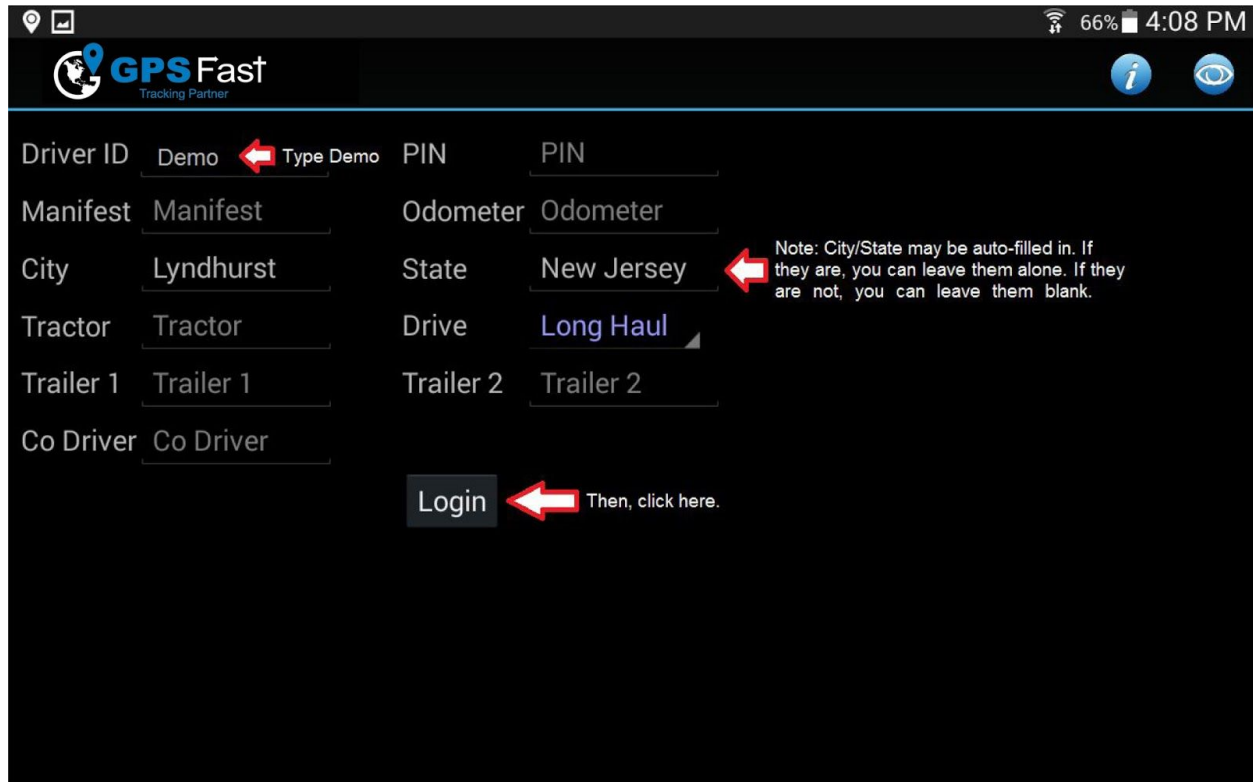


1.4 Licensing

Once you have completed the LOGIN screen and clicked "Login", you must fill in the authorization form below. You only need to do this the first time you log in.

The Group ID is the username for your company and should be provided to you by your Fleet Manager or Dispatcher. If you are a Fleet Manager, and are unsure of your Group ID, please call GPS FAST .

Click Group ID and fill in your Group ID with the pop up keyboard that should appear. Click "Check License" when you have entered your Group ID.

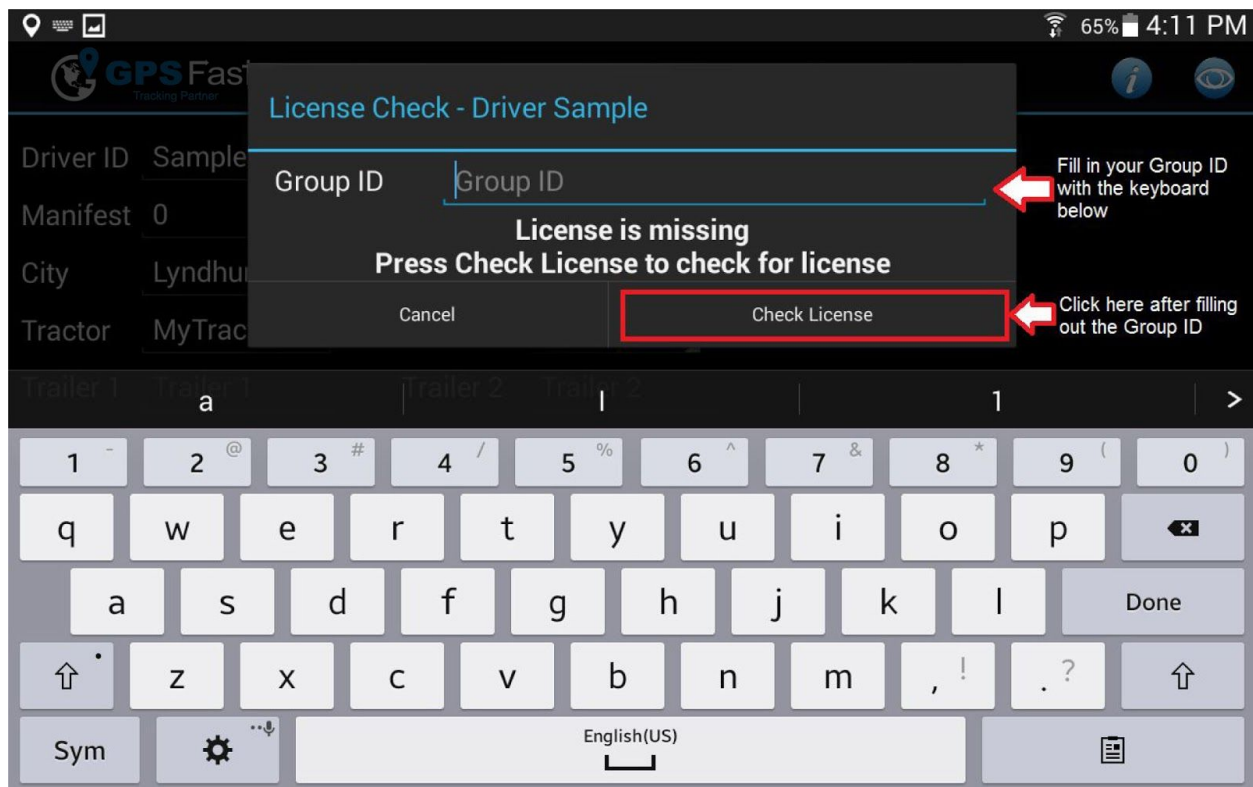

2 GPS FAST ELD

This is your main screen, from this screen you will be accessing different function of the GPS FAST ELD application.

2.1 Main Screen

- You can change your status (eg **DRIVING**, **ON DUTY NOT DRIVING**, **ADVERSE DRIVING**, etc) from this screen
- You can see the history of your status changes
- You can see your cycle/shift balance and on-duty time
- You can get to all of the other screens from this screen

NOTE: Officer with a Green face means no diagnostic errors, Orange means at least one diagnostic error, and Red means at least one malfunction.

If you connect a Bluelink or Piccolo STX-B instead of a Piccolo Plus WIFI, you would see BL in the place of PiC.

2.2 Changing Your State

Many of these statuses should be self-explanatory, such as **OFF DUTY**, **DRIVING**, **ON DUTY – NOT DRIVING**, and **LOGOUT**. The rest are as follows:


- **SLEEPER BERTH** – if you are not using a day cab, and are going off duty to sleep in the bed in the truck, select this button.
- **ADVERSE DRIVING** – if you are in “snow, sleet, fog, other adverse weather conditions, a highway covered with snow or ice, or unusual road and traffic conditions” that are out of your control and keeping you from sticking to your schedule, click this button
- **COMMENT** – any notable entries that you want to record where another button does not apply, click this button and write in your note
- **NEW MANIFEST** – this button allows you to switch to a new manifest during the shift you are in.
- **SWITCH TRUCK** – relevant only if you are switching trucks during your shift.
- **ON DUTY – NOT DRIVING** – There are multiple “On Duty job” reasons to select from for this status. These include “Yard Work”, “Fueling”, “Loading” and “Unloading”, as well as “Pre-Trip Inspection” and “Post-Trip Inspection”
 - **“Pre-Trip” and “Post-Trip Inspection”** – If you have the external application DVIR installed and set up (please see DVIR manual for set up), clicking on either of these Inspection reasons will launch the application, allowing you to fill out a Driver Vehicle Inspection Report from your handheld device. Please see section 2.2.3 for more detail.
 - **“Inspection”** – If you select a different ON DUTY state, but still need to do an Inspection of your vehicle, the Big Green Button will now have an “Inspection” status to select from where you can choose “Pre-Trip” or “Post-Trip”. Please see section 2.2.4 for more detail.

2.2.1 Automatic State Changes

The GPS FAST ELD application can automatically change your state to DRIVING or to ON DUTY – NOT DRIVING.

- A. For compliance, the tablet will change you to a DRIVING state if you are driving above five miles per hour.
- B. You are prompted to switch to ON DUTY – NOT DRIVING after five minutes if you are not moving. If you do not click on the prompt, it will change your state after one additional minute.

NOTE: Changing Status to OFF DUTY must be done by the driver.

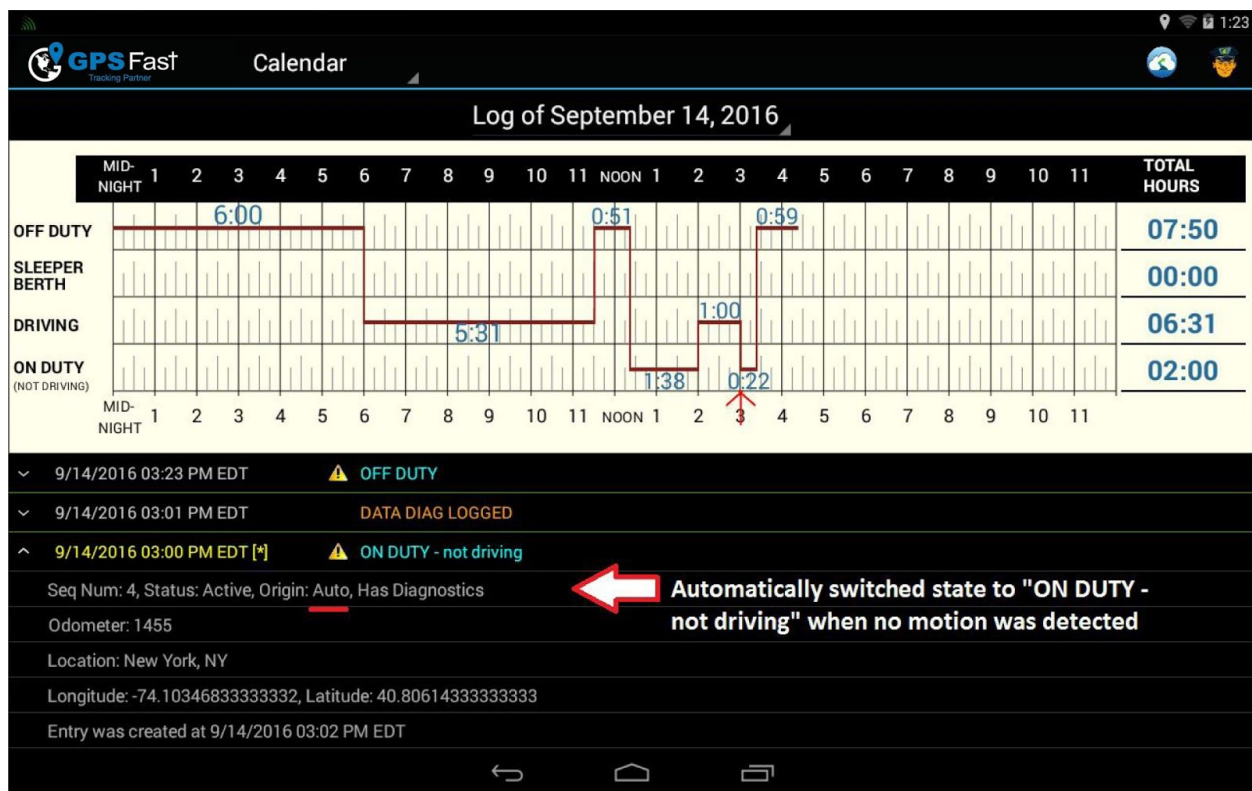

2.2.2 Officer Screen

Selecting the Police View button, you can present your logs for officer inspection. They will see the screen below, where they can optionally send your report to the appropriate place.

The screenshot displays the 'Police View' interface for GPS Fast. At the top, it shows the GPS Fast logo and the title 'Police View'. Below this is a summary table with the following data:

| Record Date | USDOT # | Driver license Number | Driver License State | ELD ID | Trailer ID |
|---------------------------|---------|-----------------------|----------------------|------------|------------|
| 6/26/2016 05:50 AM EDT | Unknown | ABCD1234FG | NJ | ELD ID XXX | |

Below the summary table is another table with the following data:

| Time Zone | Driver Name | Co-Driver Name | ELD Manufacturer | Shipping ID | Data Diagnostics Indicators |
|-----------|-------------|----------------|------------------|-------------|-----------------------------|
| | Unknown | | GPS Fast | | No |

Next is a table for the 24-hour period:

| 24 Period Starting Time | Driver ID | Co-Driver ID | Trunc Tractor ID | Unidentifier Driver Record | ELD Malfunction Indicator |
|-------------------------|-----------|--------------|------------------|----------------------------|---------------------------|
| Midnight | demo | | | No | No |

Below that is a table for carrier and odometer information:

| Carrier | Start End Odometer | Miles Today | Trunc Tractor VIN | Exempt Driver Status | Start End Engine Hours |
|------------------|--------------------|-------------|-------------------|----------------------|------------------------|
| Sample Transport | 1405-1405 | 0 | | No | 1343240-1343240 |

Then, a table for current location and file comment:

| Current Location | File Comment | Print/Display Date |
|------------------|--------------|--------------------|
| New York, NY | | 29-Jun-16 |

The next section is a timeline graph showing engine hours (OF, SL, DR, ON) over a 24-hour period. The graph shows a red line representing engine hours, with a total of 14:59 hours. The graph also shows a blue line representing engine hours, with a total of 23:59 hours.

Finally, there is a detailed log table with the following data:

| Time | Location | Odometer | Eng Hours | Event type / Status | Origin |
|-----------|--------------|----------|-----------|---------------------|--------|
| 25-Jun-16 | | | | | |
| 00:50 | New York, NY | 1405.0 | 0 | Off Duty | Driver |
| 26-Jun-16 | | | | | |
| 12:50 | New York, NY | 1405.0 | 0 | Login | Driver |
| 13:00 | New York, NY | 1405.0 | 0 | On Duty | Driver |
| 15:30 | New York, NY | 1405.0 | 0 | Driving | Driver |
| 21:30 | New York, NY | 1405.0 | 0 | On Duty | Driver |
| 22:00 | New York, NY | 1405.0 | 0 | Off Duty | Driver |
| 01:21 | New York, NY | 1405.0 | 0 | Logout | Driver |

At the bottom of the screen, there are three buttons: 'Add comment', 'Send report', and '3 days ago'. Below these buttons are three navigation icons: a back arrow, a home icon, and a refresh icon.

Pre-Trip and Post-Trip Inspections

If you have the external application DVIR installed and set up (please see DVIR manual for set up), clicking on either of these On Duty job reasons will launch the application, allowing you to fill out a Driver Vehicle Inspection Report from your handheld device. With the form filled out as below, click “OK” to be brought to the DVIR screen.

The screenshot displays the GPS Fast Driver Log interface. A modal dialog box is open, titled "Starting On Duty - not driving State". The dialog contains the following information:

- On Duty job: Post-Trip Inspection
- Start Time: 12:42 PM (with a "Change" button)
- Odometer: 604
- Location: Boston, MA
- Additional info: (empty field)
- Buttons: Cancel, OK

The background interface shows a driver log with a timeline of duty status (OFF DUTY, SLEEPER BERTH, DRIVING, ON DUTY) and a summary table of hours.

| ON DUTY | TILL NOW | DRIVING | BALANCE |
|---------|----------|---------|---------|
| CYCLE | 55:43 | 14:16 | |
| SHIFT | 08:54 | 03:46 | |

| | 10 | 11 | TOTAL HOURS |
|-----------------------|----|----|-------------|
| OFF DUTY | | | 06:51 |
| SLEEPER BERTH | | | 00:00 |
| DRIVING | | | 07:13 |
| ON DUTY (NOT DRIVING) | | | 01:39 |

Below is the DVIR application. If it is set up correctly, you should see the Company Name and Address filled out. Other fields should fill in as well based on your GPS FAST ELD settings. Please note that the “Pre trip” option is automatically selected because I chose a “Pre Trip” “On Duty job” reason. Please verify the information before clicking “Next”.

The screenshot shows a mobile application interface for a Driver's Vehicle Inspection Report (DVIR). The title bar at the top is black with a white back arrow and the text 'DVIR'. The status bar above it shows various icons and the time '5:00 PM' with 71% battery. The main content area is white and contains the following text and form fields:

Pre trip - DRIVER'S VEHICLE INSPECTION REPORT
As required by the Federal Motor Carrier Safety Regulations for Commercial Drivers

| | |
|-------------------|---------------------|
| Date | 06/01/2016 4:58 PM |
| Company Name | Example Inc |
| Company Address | 1050 Wall St NY, NY |
| Driver ID | John |
| Driver Name | John Faulkner |
| Truck/Tractor No. | 748 |
| Trailer No. | 871 |
| Odometer | 36589 |

Below the form fields are two radio buttons: Pre trip and Post trip. At the bottom of the form are two buttons: 'CANCEL' and 'NEXT'.

On the following screen, please add remarks for any noteworthy defects by checking the boxes and filling out the field that pops up, as below. Click “Save” to confirm each remark. And click “Next” to continue. There are two screens with checkboxes, so please review both if you are having trouble finding your specific defect category.

The screenshot displays the 'DVIR' (Driver's Vehicle Inspection Report) screen. At the top, there is a navigation bar with a back arrow and the text 'DVIR'. Below this, the title 'Pre trip - DRIVER'S VEHICLE INSPECTION REPORT' is centered, followed by the subtitle 'As required by the Federal Motor Carrier Safety Regulations for Commercial Drivers'. The main area contains a grid of checkboxes for various vehicle components. A modal dialog box titled 'Add Remark' is overlaid on the screen, with the text 'Low' entered in the input field. The dialog has 'Cancel' and 'Save' buttons. At the bottom of the screen, there are 'BACK' and 'NEXT' buttons.


| Component | Checked |
|----------------------------------|-------------------------------------|
| Air Compressor | <input type="checkbox"/> |
| Air Lines | <input type="checkbox"/> |
| Battery | <input type="checkbox"/> |
| Brake Accessories | <input type="checkbox"/> |
| Brakes | <input type="checkbox"/> |
| Carburetor | <input type="checkbox"/> |
| Clutch | <input type="checkbox"/> |
| D. Friction | <input type="checkbox"/> |
| Deflectors | <input type="checkbox"/> |
| Heater | <input type="checkbox"/> |
| Horn | <input type="checkbox"/> |
| Lights - Head-Stop | <input type="checkbox"/> |
| Lights - Tail-Dash | <input type="checkbox"/> |
| Lights - Turn Indicator | <input type="checkbox"/> |
| Mirrors | <input type="checkbox"/> |
| Muffler | <input type="checkbox"/> |
| Oil Pressure | <input checked="" type="checkbox"/> |
| On-Board Recorder | <input type="checkbox"/> |
| Radiator | <input checked="" type="checkbox"/> |
| Rear End | <input type="checkbox"/> |
| Reflectors | <input type="checkbox"/> |
| Safety Eq. - Fire Extinguisher | <input type="checkbox"/> |
| Safety Eq. - Flags-Flares-Fusees | <input type="checkbox"/> |
| Safety Eq. - Spare Bulbs & Fuses | <input type="checkbox"/> |
| Tires | <input checked="" type="checkbox"/> |
| Transmission | <input type="checkbox"/> |
| Wheels | <input type="checkbox"/> |
| Windows | <input type="checkbox"/> |
| Windshield Wipers | <input type="checkbox"/> |
| Other | <input type="checkbox"/> |

On the last screen, you and your mechanic can sign off on the DVIR. Clicking the open field pops up a fill-in signature pad where you can sign your name. Complete the report by selecting “Save & Send”



2.2.3 Inspection State


If you entered an “ON DUTY – not driving” state other than Pre-Trip or Post-Trip Inspection (eg Yardwork), and still need to enter an Inspection into DVIR, then you will find a new option listed when you click the Big Green Button, “Inspection”.

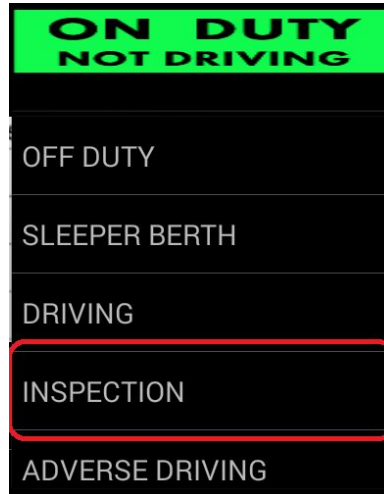

Clicking “Inspection” will give you the screen below, where you can choose a “Pre trip” or a “Post trip” inspection state. Both options will launch DVIR.

2.3 Entry View


In order to view more entries at once you can expand the view screen by holding and dragging up on the chart, to see this view of the main page. Each of these status changes can be clicked on for a more detailed view. See the next page for an example of this.

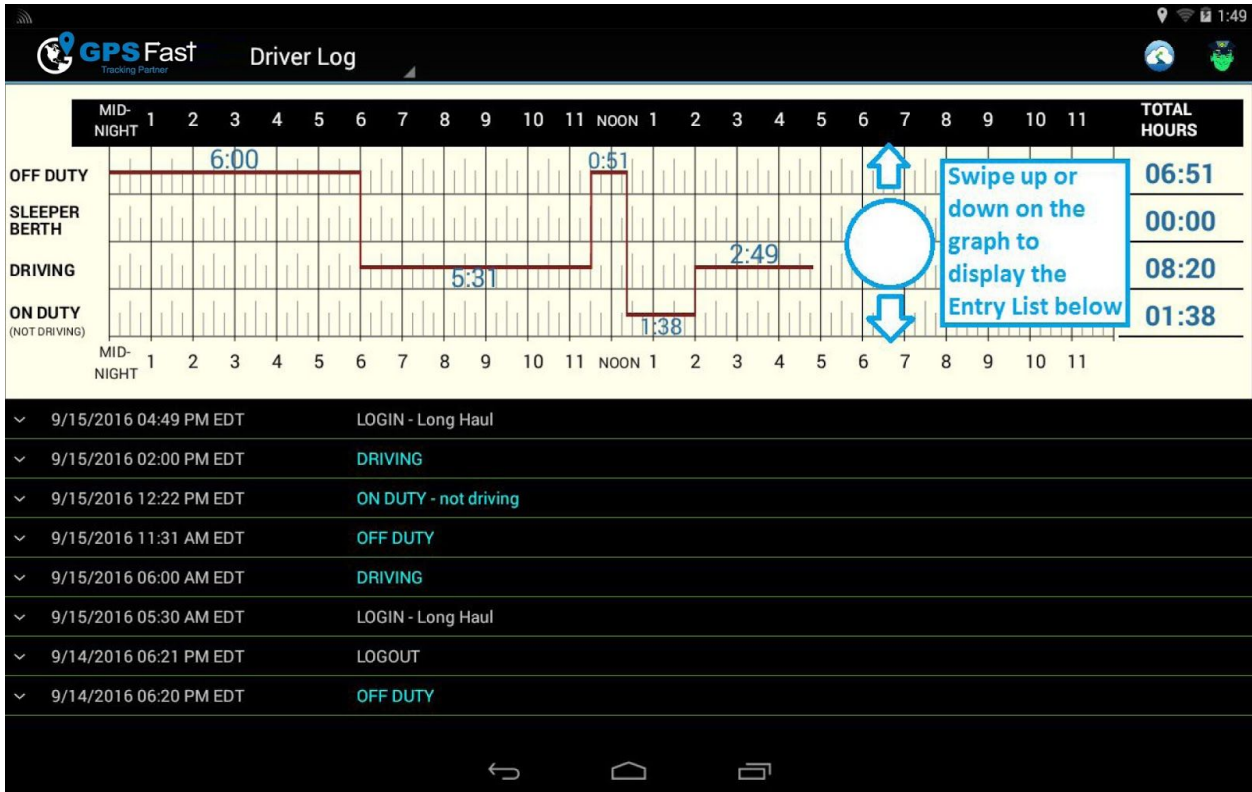

2.4 Extended View

Tapping a status change shows additional information about the change. The chart has a little red arrow which shows where the status change occurred. The additional information includes details such as entry creation date, location, and any other fields added by the driver at the time of the change.

With your finger on the chart, you can drag down to return to the main view of the screen.

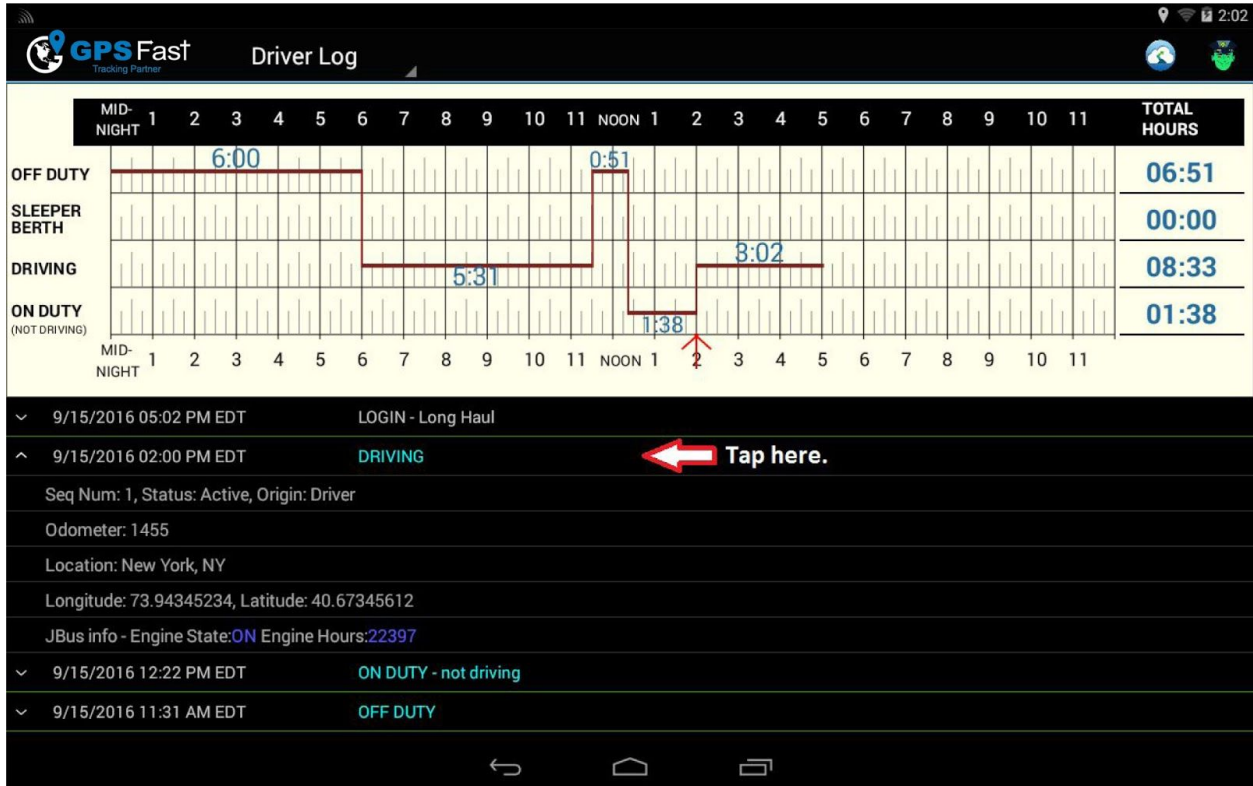

2.5 Getting To Other Screens

Clicking on **GPS FAST ELD** at the top center of the screen you can select from several other screens and see

- **Cycle Report**
- **Calendar**
- Toggle on and off **Deleted Entries**
- And the **About** section


There is also the option to change your **PIN** from this dropdown. Please be careful and only change your **PIN** if you are sure you can remember the new **PIN**.

Each of these screens are explained further below.

2.6 Violations

You will see red lines in the graph when you were in **VIOLATION**. You can click on **VIOLATION** in the log list below the graph to see details about the violation.

NOTE: As you can see in the picture below, VIOLATIONS are also visible from the Cycle Report.

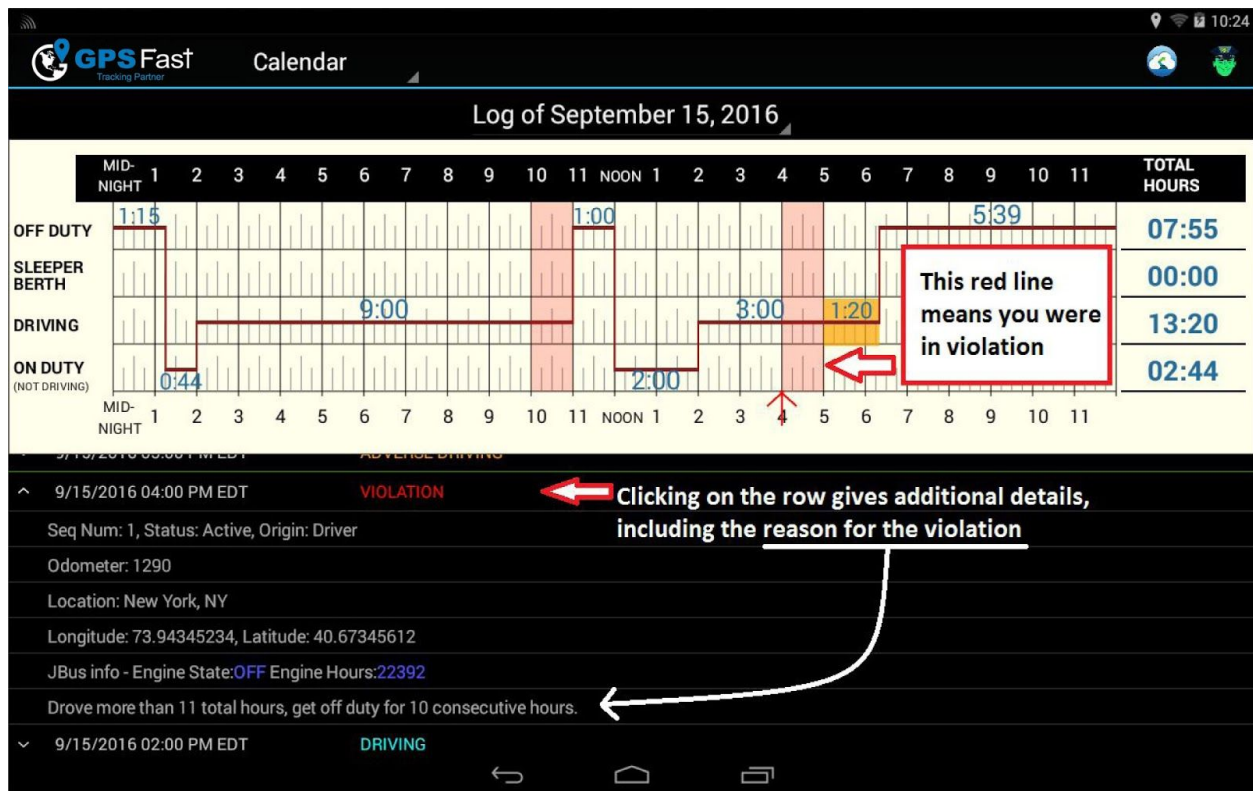

2.7 Submit Button – ELECTRONIC SIGNATURE

At the end of every shift, make sure you submit your log. Clicking the submit button acts as an electronic signature, verifying the accuracy of your logs. This is just like signing your current paper logs.

Confirm your submission on the screen that follows.

2.8 Program Bugs or Errors


It is important to submit a log every time your GPS FAST ELD application has a problem. See Section 6 on sending logs for instructions on how to do this.

You can help further by taking a screenshot to include with your log. Taking screenshots can change from device to device, but with most Samsung devices, you can take a screenshot by holding on the power button and home button of the tablet at the same time for five seconds (until the screen flashes). The power button can be found on the top of the right side of the tablet, and the home button is the big button on the front. Submitting the screenshot will be explained further in Section 6.

2.9 Info Button

The info button in the dropdown under “GPS FAST ELD” (see bottom left screenshot) opens the screen shown in the bottom right screenshot. This is a snapshot of your daily general info. Click on **JBUS DATA** to see information about your current location and engine information (loaded from a BlueLink or Piccolo device).

NOTE: In some trucks, especially older models, there is a discrepancy between the odometer from the JBUS, that is your truck’s computer, and the odometer on your truck’s dashboard. The GPS FAST ELD odometer entry is based on the automatic entry from the odometer field on the JBUS. In the case that an officer is questioning the validity of the distance you have travelled, by pressing on current JBUS Data, the tablet will display the current odometer reading from the JBUS and the GPS Location and RPM. This will show you the discrepancy mentioned here.

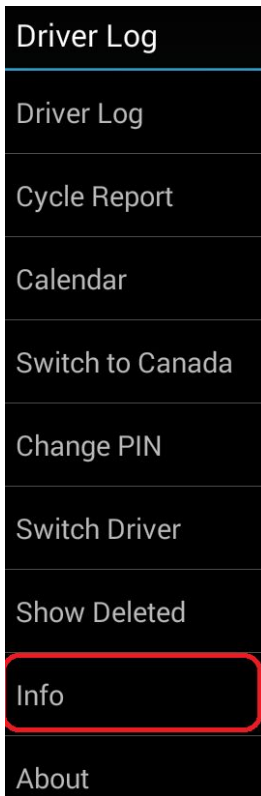

GPS Fast Tracking Partner

Driver Log

Shift used 95:34, Drive Cycle On Duty 93:55, Break time passed (over)

000 MPH

midnight 1 2 3 4

OF

SL

DR

ON

11/19/2015 05:59

11/17/2015 08:21

11/17/2015 06:44 PM EST [*] VIOLATION

Carrier: Value was not set
 Main Office: Address was not set
 Login: 11/17/2015 10:07 AM EST
 City: Lyndhurst
 State: New Jersey
 Tractor: shay
 Drive Type: Long Haul
 Login As: Driver
 License Expiration: 04 May 2016
 Serial: 3100d19441414200-108.53.242.41
 Version: 10.8
 Time Zone: EST
 Group: test

| ON DUTY | DRIVING |
|----------|---------|
| BILL NOW | BALANCE |
| 3:55 | -23:55 |
| 3:55 | -81:34 |

9 10 11 TOTAL

00:00

00:00


17:55

00:00

3 Cycle Report

The **Cycle Report** is like a combination of the **GPS FAST ELD** screen, and the **Calendar** screen. On the **cycle report**, you can see all of your status changes for the last week and toggle which day's history you want to see for that time period. There is also a detailed view of your **Cycle/Shift balance** with breakdowns for **ON DUTY – NOT DRIVING**, **DRIVING**, and **ON DUTY** (total) statuses.

“**ON DUTY**” is the sum of “**ON DUTY – NOT DRIVING**” and “**DROVE**”. “**DRIVING BALANCE**” is the total remaining time until you hit your 60 or 70 hour **ON DUTY** limit (as defined by your Fleet Manager) for the **CYCLE** and 11 hour **DRIVING** limit for the **SHIFT**.

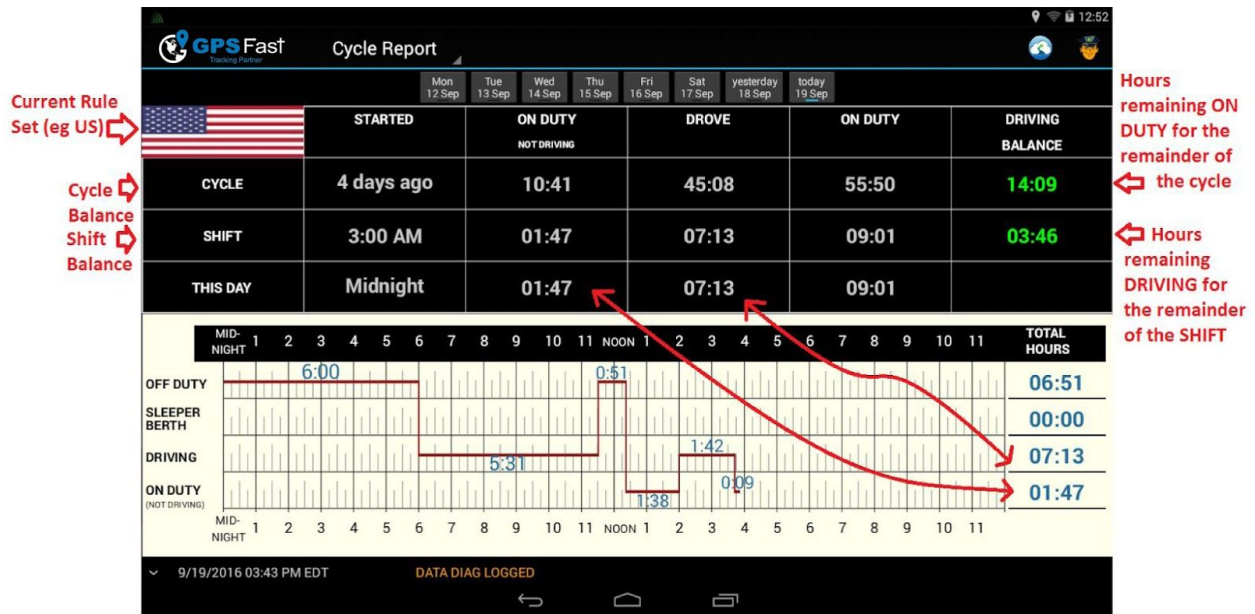


3.1 Cycle Reset

You can reset your cycle if and only if you have been off duty for 34 hours. This cycle reset is named, the 34-hour Off Duty Cycle Reset. GPS FAST ELD keeps track of this for you and if you have been OFF DUTY for 34 hours, it will show you the following pop up to reset your cycle.

If you don't see this pop up, you can also click the "Tap to Reset Cycle" button to produce the pop up

Calendar

The calendar screen is where you can see a history log of all status changes.

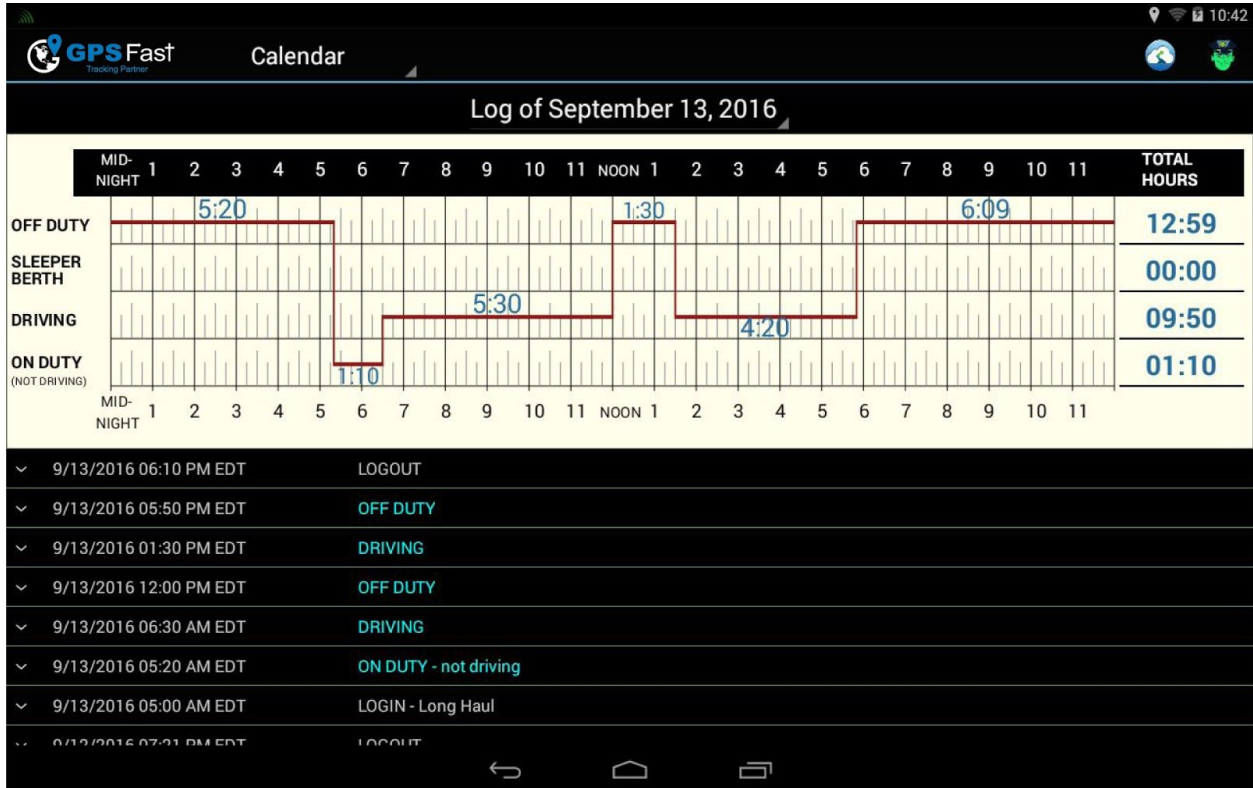

By clicking on “Select Date”, you can select a time you wish to toggle in the history log view. Simply click the day you want to display on the **Calendar**.


Edit

GPS FAST ELD version 12.8 and newer use the easy edit described below. If you are using an older GPS FAST ELD, please ask for an older manual. Thanks.

5.1 Easy Edit

The easy edit is an “inline” edit. This means edits take place in the line where they are meant to go. So, if you need to add an event to some time at the end of yesterday, such as, right before your OFF DUTY event, you would go to that OFF DUTY event, press and hold there, and select from a pop-up screen: Add event before OFF DUTY. A new pop up would appear with your event choices and you can select the appropriate event.

As you can see in the screenshot, there is also the option to edit the already existing event, or to add an event before/after, or delete the already existing event. Simply select the option appropriate to your case and choose the corresponding action.

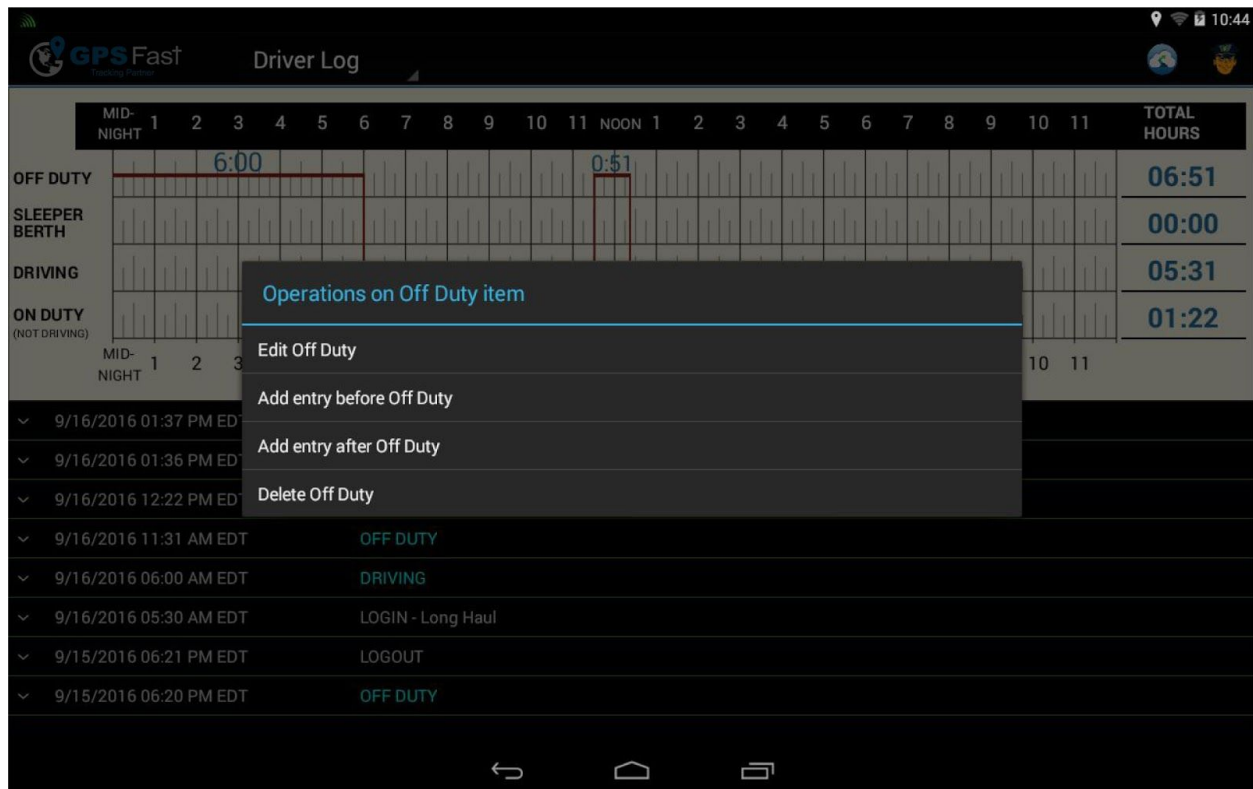

5.2 Edit Existing event

If you need to change an already existing event, find the event in your calendar, press and hold the event, and click “Edit [EVENT NAME]”. This will present you with a dialog box much like when you are creating a new event.

In the example below, I am editing my Off Duty entry to five minutes earlier. I did this by tapping the “Change” button next to time and selecting my new date and time. After completing my changes, I would click “OK” and the new changed time would appear.

Add entry before/after event

If you need to add an entry before or after an already existing event, press-and-hold on the already existing event and select “Add event [before/after] [EVENT NAME]”.


For this example, I will add a Post-Trip Inspection entry before my OFF DUTY. So, after clicking “Add event before OFF DUTY”, I will see the screen below, where I will click “ON DUTY – not driving”



Next I select the “On Duty job” and change the start time, set the odometer, city, state, and fill in the addition info as seen below. All of this should be exactly the same as if you were creating the event in the correct order the first time around. The only difference is that you have to set the start time. When you are done, you can click “OK” and you should see your new entry in the list. If you are adding an event to a previous day, you may have to go to the Calendar screen and select that day to see the new entry.

5.3 Delete entry

If you need to delete an entry, press and hold on the entry, and click “Delete”. A confirmation screen may appear, like below. Tap “Confirm Delete” to complete the deletion of the entry. If you are having trouble finding the entry you want to delete, please go to the Calendar screen and choose the day where the entry should have occurred.

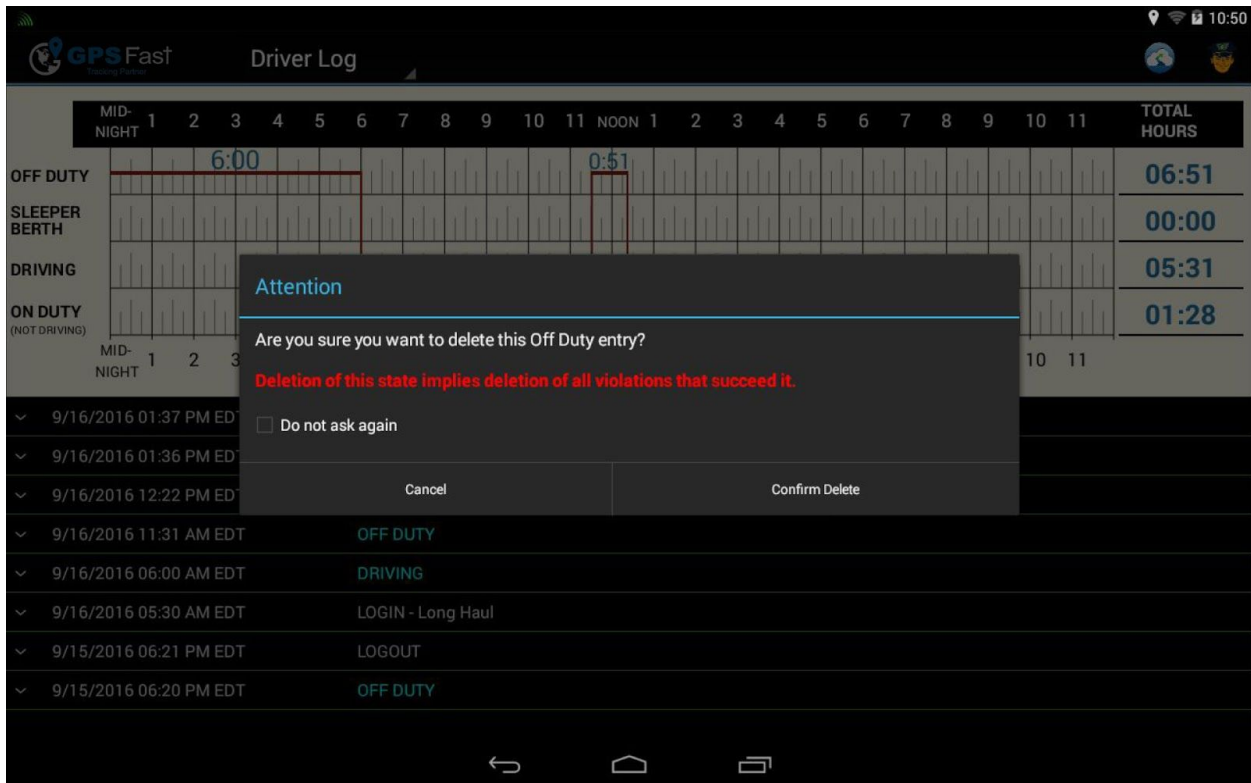


6 About

This screen tells you the version number of the app, and gives you the ability to send logs.

6.1 Sending Logs

Click “**Send Problem Report**” to send logs.

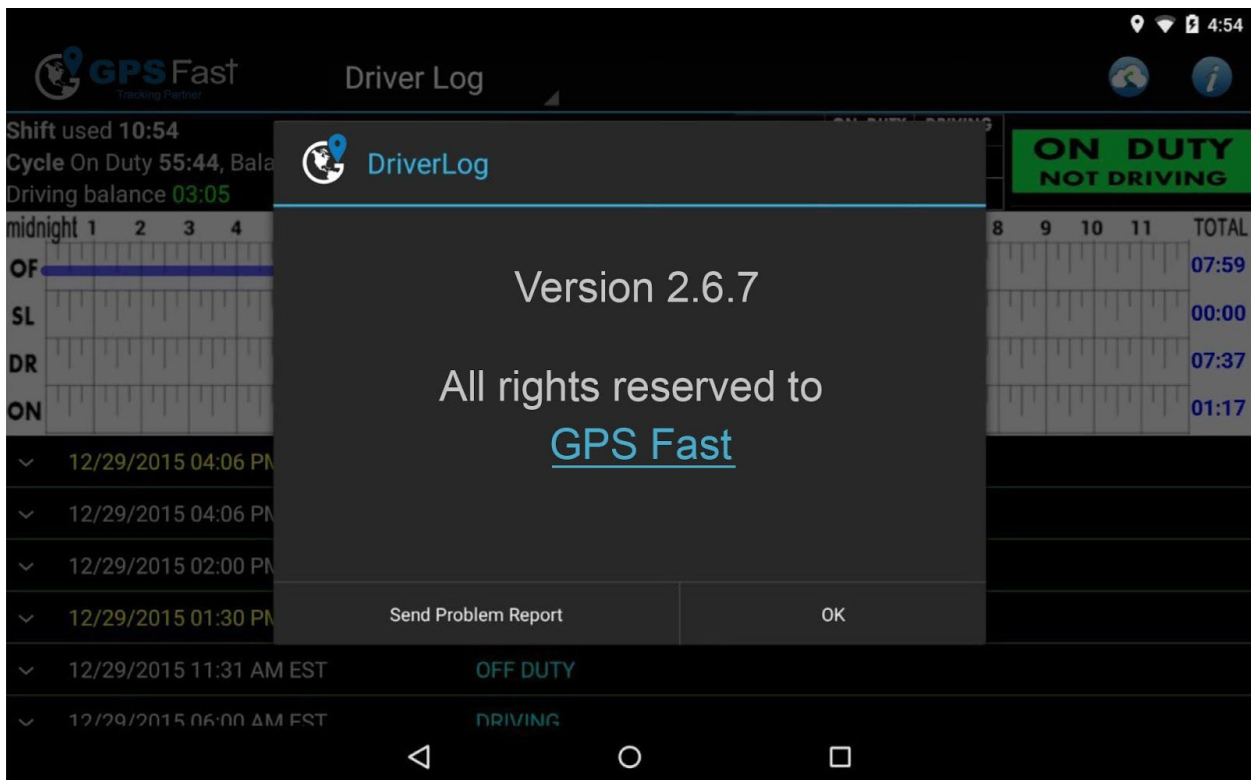


On the screen below, please fill out the Problem Description and a brief explanation of How the issue occurred. Then click “Submit”.


7 WIFI

If you are having trouble connecting to the **WIFI**, you are in the right place.

Drag down from the very top of the tablet, near the middle. **You may need to do this twice** in a row to get the menu shown below. Next, **press and hold your finger** on **“Wi-Fi”** for **3 to 5 seconds**.

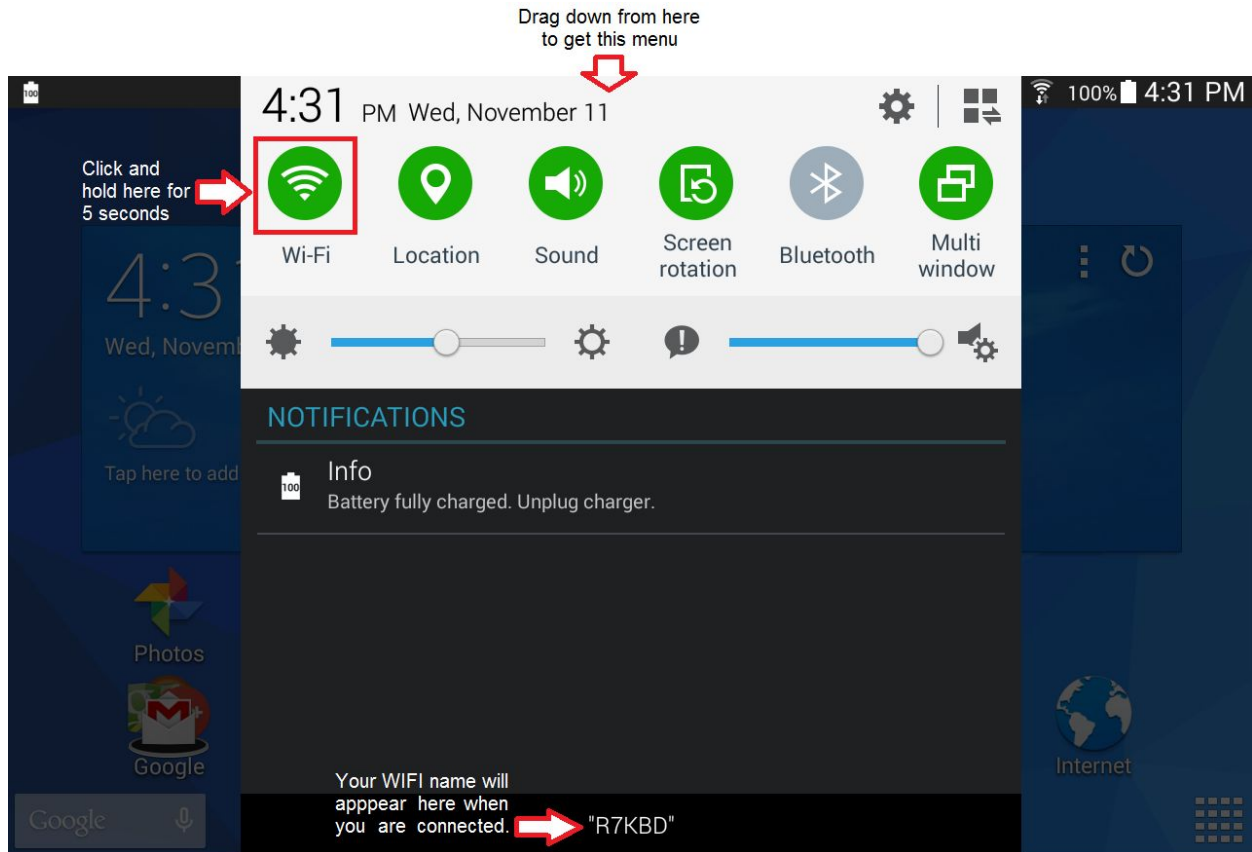


Make sure **Wi-Fi** has a green bar next to it, like below in the **Network Connections** pane on the left of the screen. **If it doesn't, slide the bar to make it green.** Next, **tap** your **WI-FI Network name** (mine is R7KBD) your **Piccolo WI-FI name** will likely be **GFT** with a string of numbers (**Your Truck #**) after it (eg **GFT05142**).

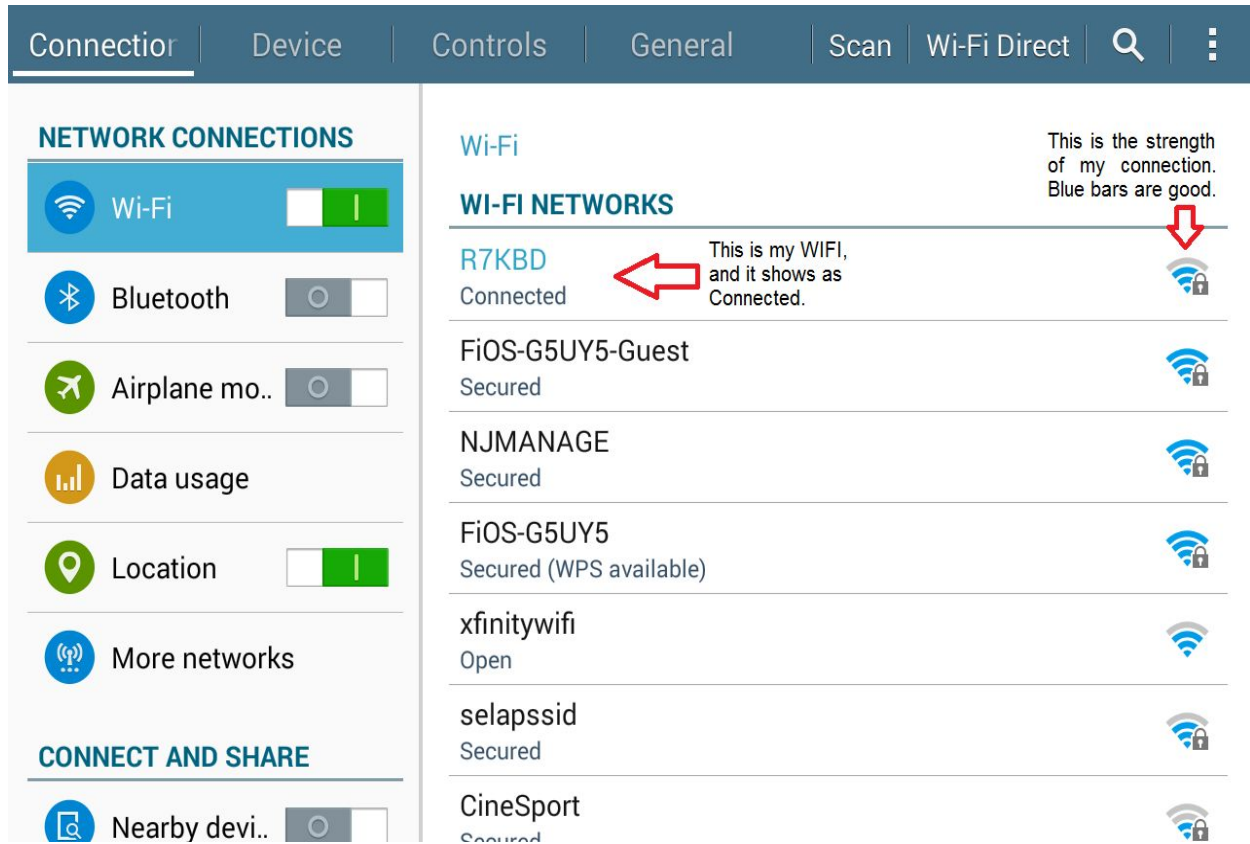


Now **type** in the **password** to the **WI-FI** on your tablet **using** the **pop up keyboard** that should appear on the screen. If you don't have the password, ask your Fleet Manager or Dispatcher. Now **click** "**Connect**".


You can return to the app you were using before by **clicking the home button** on your tablet and navigating to and **clicking on the app icon**.

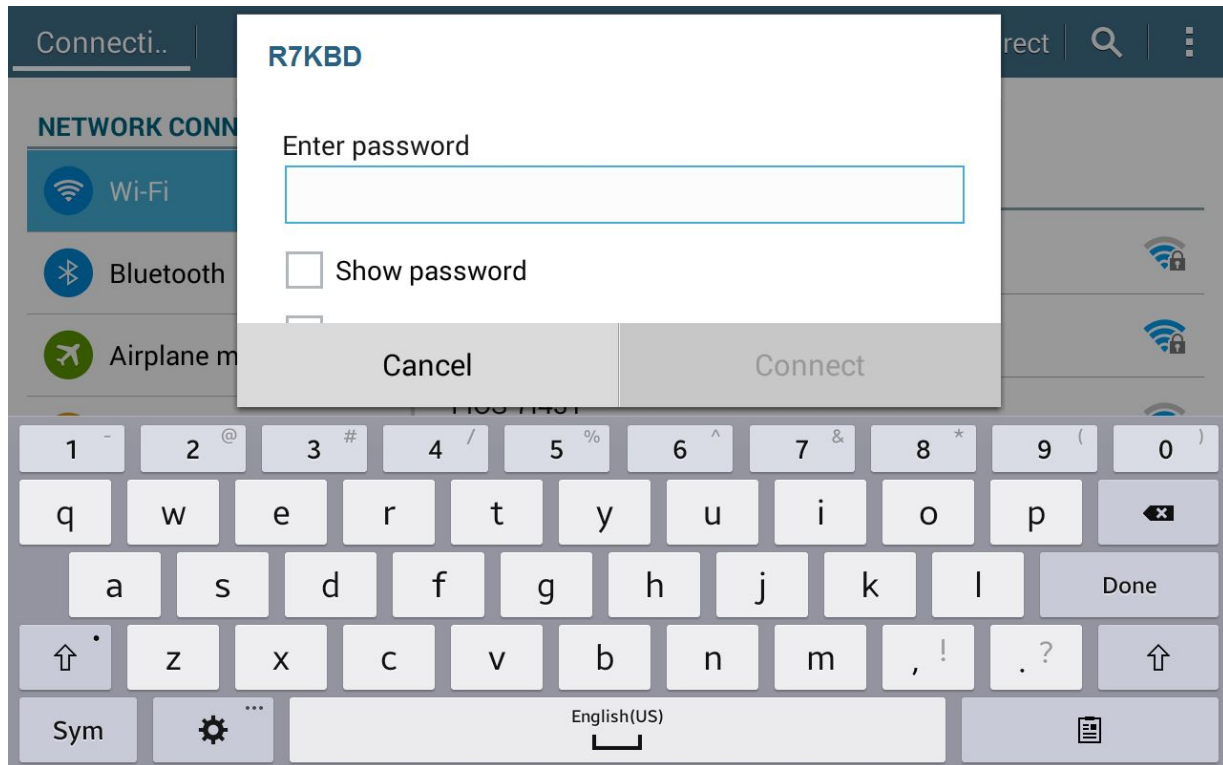


If you don't get prompted for a password, but get a page like the one below, then you are already connected to the **WIFI**.

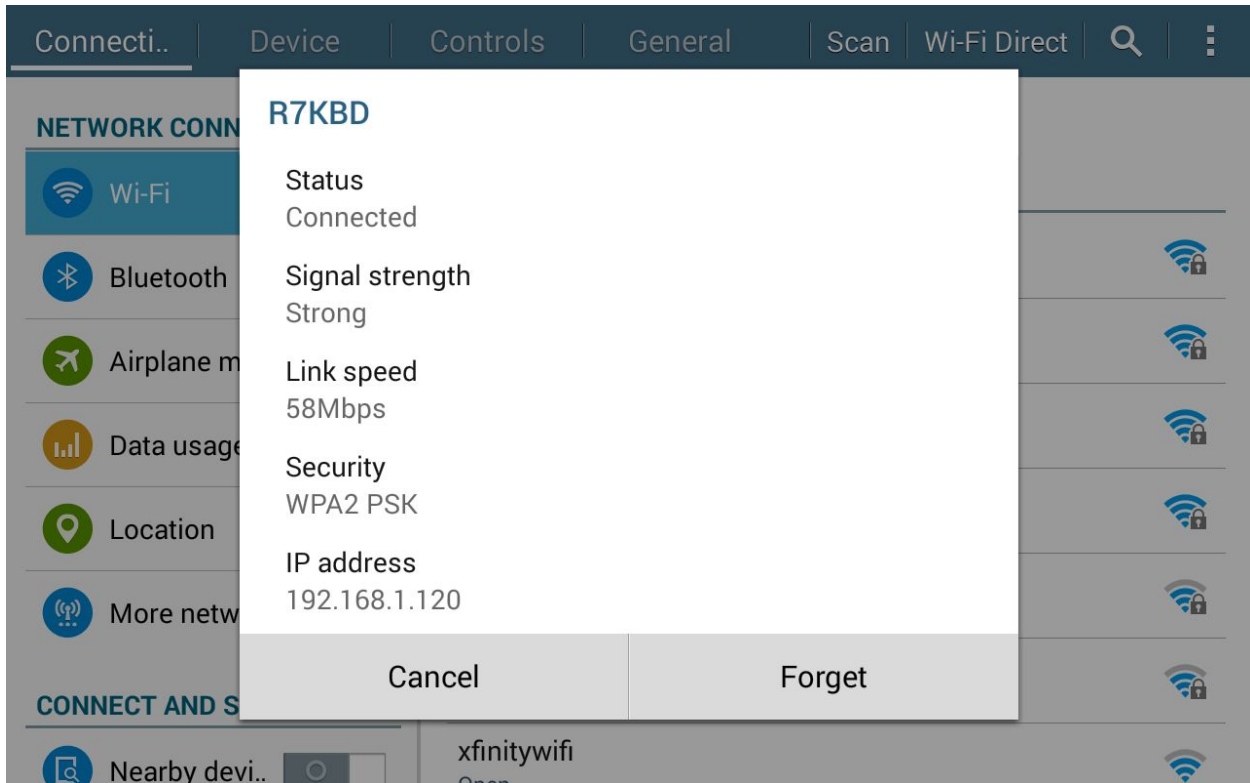

If you get a page like the one below, when you **click** on your **WIFI Network name**, then the password has already been entered, but the **WIFI is not in range** (that is, the signal is too far away, or not on at all).

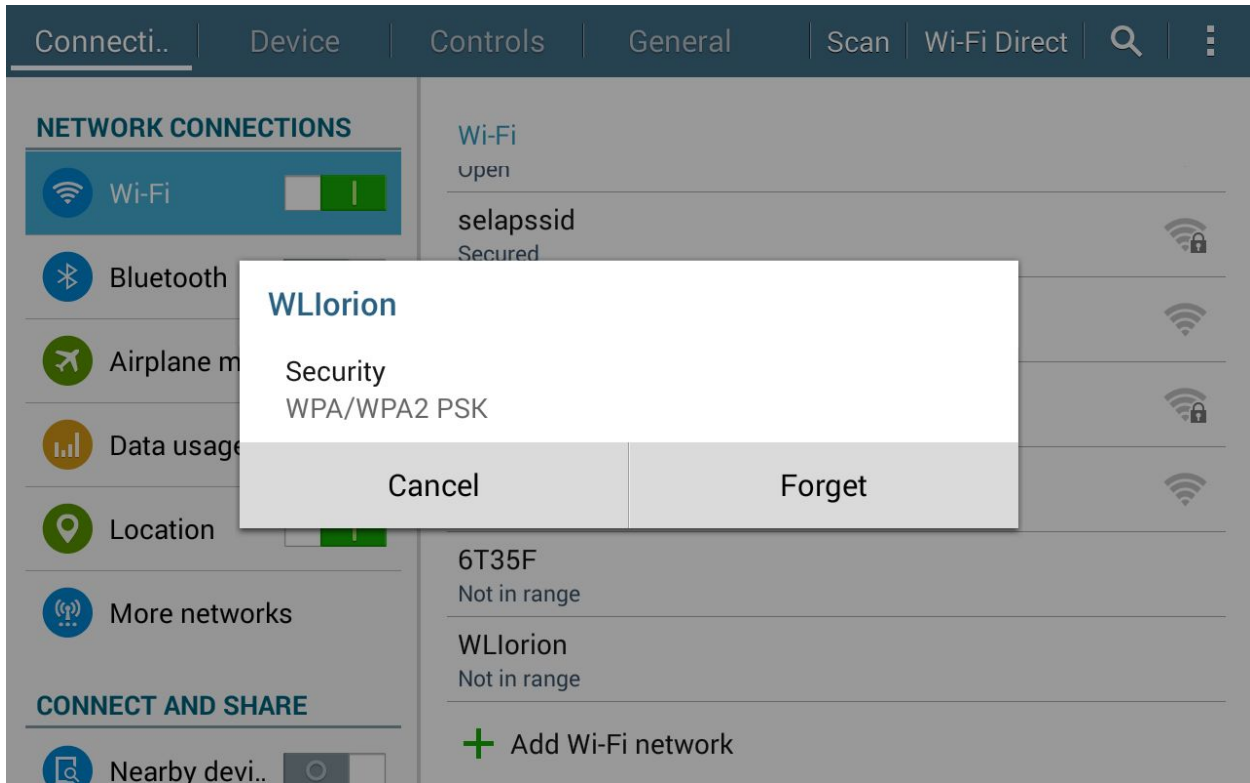

To ensure that you always reconnect to the WiFi when you come in range, please click the tile icon indicated in the screenshot below and select “Advanced”

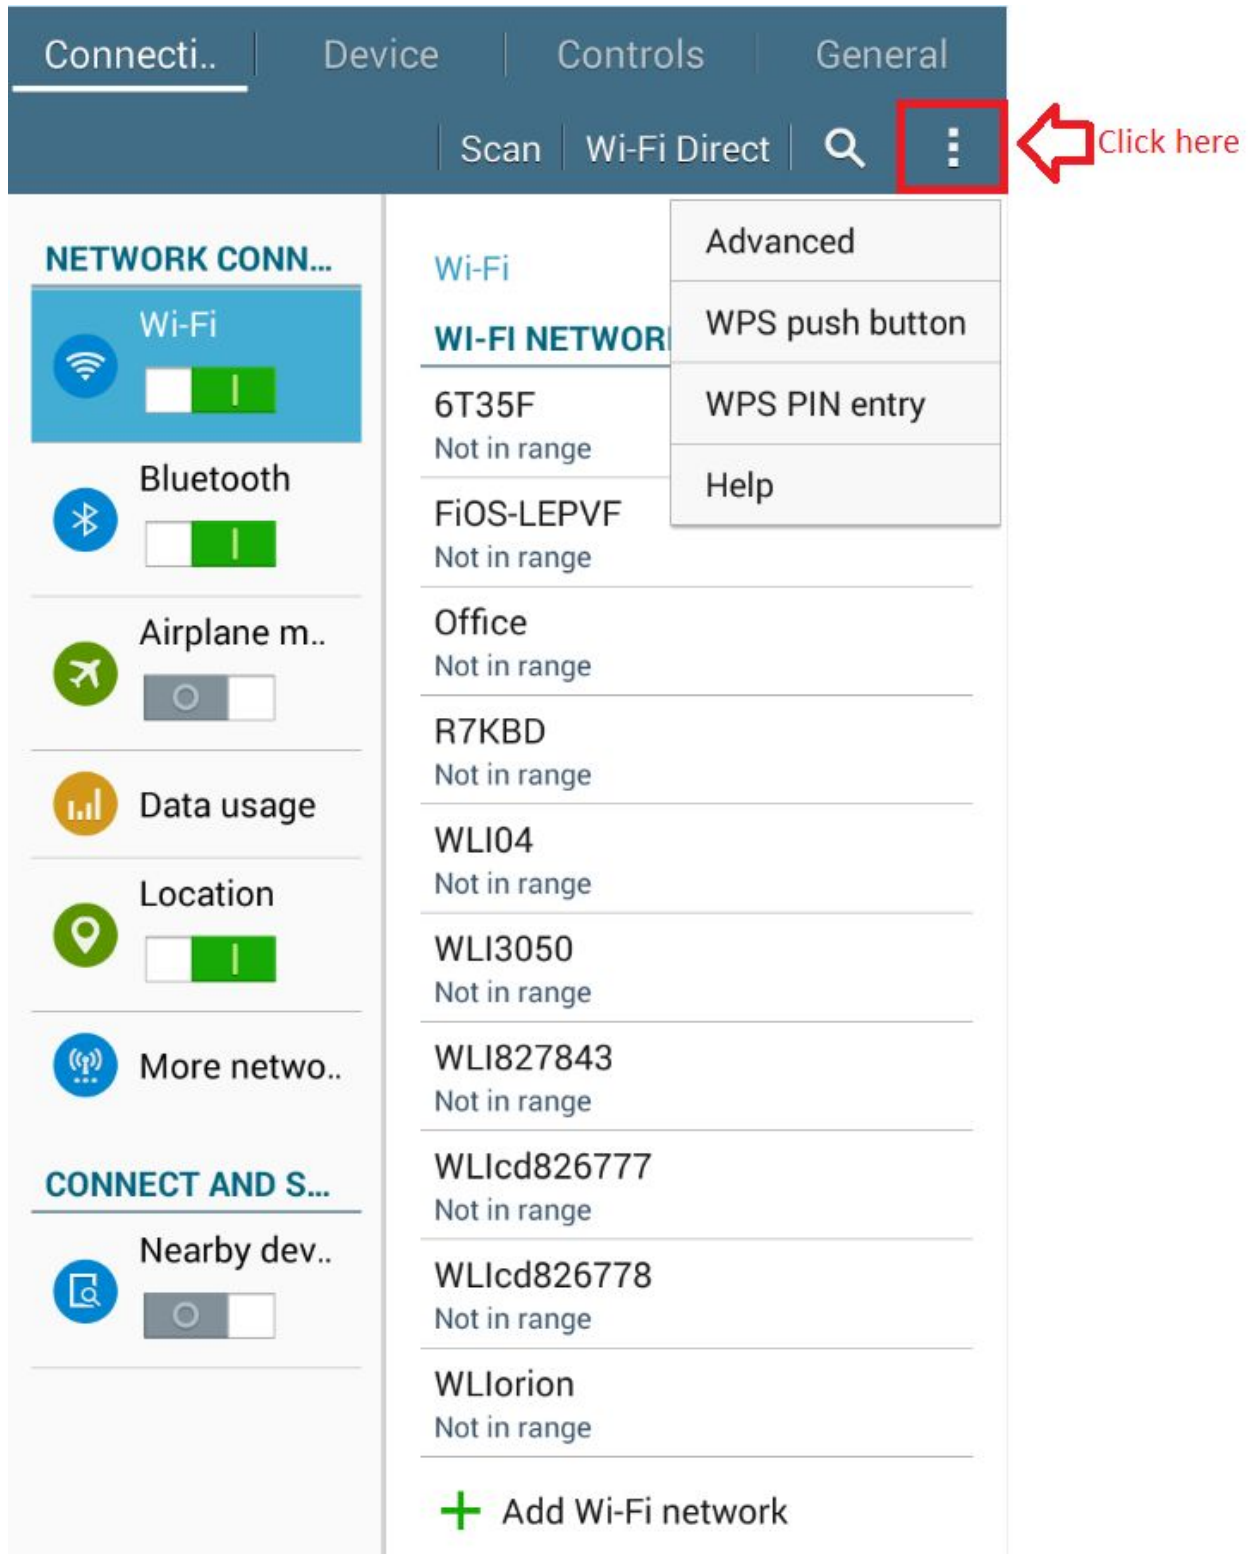

As indicated on the screen below, click Wi-Fi Timer

The screenshot shows the Windows Settings application with the 'Connectors' tab selected. The left sidebar lists various settings categories, including 'NETWORK CONN...', 'Bluetooth', 'Airplane m..', 'Data usage', 'Location', 'More netwo..', and 'CONNECT AND S...'. The 'Wi-Fi' option is selected and expanded to show 'Advanced' settings. The 'Wi-Fi timer' option is highlighted with a red box, and a red arrow points to it with the text 'Click here'. Other settings visible include 'Network notification' (checked), 'Sort by' (Signal strength), 'Keep Wi-Fi on during sleep' (Always), 'Always allow scanning' (checked), 'Install certificates', 'MAC address' (8C:BF:A6:99:01:6D), and 'IP address' (fe80::8ebf:a6ff:fe99:16d, 192.168.1.214).

Now click the check boxes for “SET START TIME” and “SET END TIME” and then adjust the values to 12:00 AM for the start time and 11:59 PM for the end time. Then click “Done”. You should now automatically reconnect to WiFi when in range.

